



## **TECHNICAL INFORMATION**

PRESSURE AND DIFFERENTIAL PRESSURE TRANSMITTERS

## APC(R)-2000ALW Exd, APC(R)-2000ALW Exi/Exd APR-2000ALW/G Exd, APR-2000ALW/G Exi/Exd APR-2000ALW Exd, Exi/Exd

with diaphragm seals

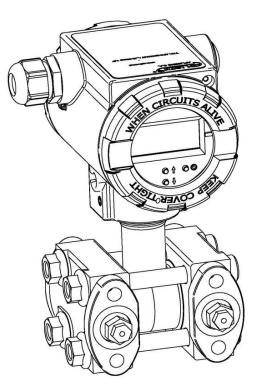

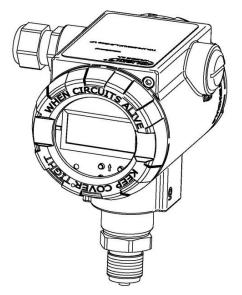

APLISENS S.A., 03-192 Warsaw, Morelowa 7 St tel. +48 22 814 07 77; fax +48 22 814 07 78 www.aplisens.com, e-mail: export@aplisens.com The QR code enables to identify a product and quickly access the user documentation.

## APC-2000ALW (Exd)





## APR-2000ALW (Exd)



## APC-2000ALW (Exd)

### (For sea uses)





## APC-2000ALW (Exi/Exd)





## APR-2000ALW (Exi/Exd)

 





# APR-2000ALW (Exd)

### (For sea uses)





## APR-2000ALW/G (Exd)

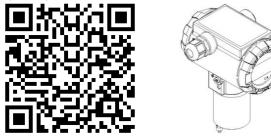

## APR-2000YALW (Exd)

ID:0009 0008 0002 0000 0000 0002 0001 36 ID:0009 0008 0006 0000 0000 0002 0001 33 aplisens.pl/ID/0009000800060000000000000000133/



## APR-2000ALW (Exd)


### with diaphragm seals



## APR-2000ALW (Exi/Exd)

### with diaphragm seals



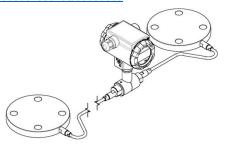

## APR-2000ALW/G (Exi/Exd)



## APR-2000YALW (Exi/Exd)





### **Table of contents**

1.	Docu	ument information	16
	1.1.	Purpose of the document	16
	1.2.	Symbols used	16
	1.3.	Trademarks	
	1.4.	Definitions and abbreviations	17
2.	Selec		
	2.1.	Principle of pressure and differential pressure measurement	
	2.2.		-
	2.3.	-	
	2.3.1	-	
	2.3.2	2. Measurement of steam flow rate	27
	2.3.3	B. Liquid flow measurement	28
	2.4.	Level measurement	29
	2.4.1	Liquid level measurement system in open tanks	29
			30
	2.4.3	<ol> <li>Symbols used</li></ol>	į
	2.4.4	Liquid level measurement system in closed tanks	32
	2.4.5		
	2.4.6	Liquid level measurement system in closed tanks with the use of distance separators	34
	2.4.7	7. Liquid level measurement system in closed tanks with the use of direct and distance separato	
	2.4.8	B. Liquid level measurement system in closed tanks with steam pillow	36
		· · · · · · · · · · · · · · · · · · ·	37
	2.5.	Pressure measurement	38
	2.5.1	. Gas pressure measurement system	38
	2.5.2	2. Steam pressure measurement system	39
	2.6.	Differential pressure measurement	41
	2.6.1		
	2.6.2	Liquid differential pressure measurement system	42
	263		
			43
3.	Char	acteristics of process measurement input	44
	3.1.	Measurement process variables	
	3.2.	Measurement input diagnostics	
4.	Char	acteristics of process measurement output	45
	4.1.	Basic unit and user's unit	45
	4.2.	Set range	46



	Digital damping time constant	46
.4.	Linear characteristics transfer functions	47
.5.	Basic root characteristics	47
.6.	Manufacturer's root characteristics 1	48
.7.	Manufacturer's root characteristics 2	49
.8.	Output signal 4 20 mA HART	50
.9.	Alarm signal levels	51
.10.	Loading of current loop 4 20 mA with serial resistance	52
.11.	Current controller resolution 4 20 mA	53
.12.	Dynamic parameters of digital measurement	53
.13.	Dynamic parameters of current output	53
.14.	Process measurement output diagnostics	54
Soft	vare version of the main microcontroller CPU	54
HAR	Γ – specific data related to the protocol application layer	54
Pow	er supply	58
.1.	Cabling specification	58
.2.	Electric connection terminals functions	58
.3.	Electrical connection of power supply	59
.4.	Shielding, equipotential bonding	59
.5.	Electrical connection of uninterruptible current measurement in the current loop	59
.6.	Electrical connection of local and remote HART communication	59
7.6.1	. Connection of transmitter with the option of using local HART communication	59
7.6.2	. Connection of transmitter with the option of using remote HART communication	61
.7.	Overvoltage protections (optional)	61
.8.	Supply voltages	
.9.		61
.9.	Impact of supply voltage on ADC transmitter (supply voltage range from minimum to maximum	61
-	Impact of supply voltage on ADC transmitter (supply voltage range from minimum to maximum eference conditions)	
-		61
inder r	eference conditions)	61 61
inder r .10.	eference conditions) Impact of supply voltage on DAC transmitter	61 61 62
nder r 7.10. 7.11. 7.12.	eference conditions) Impact of supply voltage on DAC transmitter Total impact of supply voltage on measurement (ADC + DAC)	61 61 62 62
nder r 7.10. 7.11. 7.12.	eference conditions) Impact of supply voltage on DAC transmitter Total impact of supply voltage on measurement (ADC + DAC) Permissible levels of ripple and differential interruptions in power supply line	61 61 62 62 <b> 63</b>
.10. .11. .12. <b>Tran</b>	eference conditions) Impact of supply voltage on DAC transmitter Total impact of supply voltage on measurement (ADC + DAC) Permissible levels of ripple and differential interruptions in power supply line smitter parameters related to process measurement	61 61 62 62 <b> 63</b> 63
.10. .11. .12. <b>Tran</b> .1.	eference conditions) Impact of supply voltage on DAC transmitter Total impact of supply voltage on measurement (ADC + DAC) Permissible levels of ripple and differential interruptions in power supply line smitter parameters related to process measurement Reference climatic conditions	61 61 62 62 63 63 63
.10. .11. .12. <b>Tran</b> .1. .2.	eference conditions) Impact of supply voltage on DAC transmitter Total impact of supply voltage on measurement (ADC + DAC) Permissible levels of ripple and differential interruptions in power supply line smitter parameters related to process measurement Reference climatic conditions Impact of mounting position on measurement	61 61 62 62 63 63 63
.10. .11. .12. <b>Tran</b> .1. .2. .3.	eference conditions) Impact of supply voltage on DAC transmitter Total impact of supply voltage on measurement (ADC + DAC) Permissible levels of ripple and differential interruptions in power supply line smitter parameters related to process measurement Reference climatic conditions Impact of mounting position on measurement. Measurement resolution	61 62 62 <b> 63</b> 63 63 63
.10. .11. .12. <b>Tran</b> .1. .2. .3.	eference conditions) Impact of supply voltage on DAC transmitter	61 62 62 63 63 63 63 63 63
nder r 2.10. 2.11. 2.12. <b>Tran</b> 3.1. 3.2. 3.3. 3.4. 3.5.	eference conditions) Impact of supply voltage on DAC transmitter	61 62 62 63 63 63 63 64 64
nder r 10. 11. 12. <b>Tran</b> 1. 1. 2. 3. 3. 3. 3. 3. 3. 3. 3. 3. 3. 3. 3. 3.	eference conditions) Impact of supply voltage on DAC transmitter	61 62 62 63 63 63 63 63 64 64 65
ander r 2.10. 2.11. 2.12. <b>Tran</b> 3.1. 3.2. 3.3. 3.4. 3.5. 8.5.1 8.5.2	eference conditions) Impact of supply voltage on DAC transmitter Total impact of supply voltage on measurement (ADC + DAC) Permissible levels of ripple and differential interruptions in power supply line smitter parameters related to process measurement Reference climatic conditions Impact of mounting position on measurement. Measurement resolution Impact of vibration on measurement Measuring ranges APC-2000ALW Exd, Exi/Exd Basic measurement error	61 62 62 63 63 63 63 63 64 64 65 66
nder r 10. 11. 11. 12. <b>Tran</b> 1. 1. 2. 3. 3. 4. 3. 5. 8. 5.1 8. 5.1 8. 5.2 8. 5.2 8. 5.2 8. 5.2	eference conditions) Impact of supply voltage on DAC transmitter	61 62 62 63 63 63 63 63 64 64 65 66
ander r (10. (11. (12. <b>Tran</b> ) (1. (1. (1. (1.) (1.) (1.) (1.) (1.) (	eference conditions) Impact of supply voltage on DAC transmitter Total impact of supply voltage on measurement (ADC + DAC) Permissible levels of ripple and differential interruptions in power supply line smitter parameters related to process measurement Reference climatic conditions Impact of mounting position on measurement Measurement resolution Impact of vibration on measurement Measuring ranges APC-2000ALW Exd, Exi/Exd Basic measurement error Basic measurement error of pressure transmitter APC(R)-2000ALW Exd, Exi/Exd	61 62 62 63 63 63 63 63 63 64 65 66 66
	.8. .9. .10. .11. .12. .13. .14. Softv HART Powe .1. .2. .3. .4. .5. .6. 7.6.1 7.6.2 .7.	<ul> <li>8. Output signal 4 20 mA HART</li></ul>

## **APLISENS**®

	8.8.	Static pressure error	67
	8.8.1		
	Exd,	Exi/Exd	67
	8.9.	Total measurement error	67
	8.10.	Long-term stability	68
	8.11.	Time from switch-on to first measurement	68
	8.12.	Measurement thermal stabilization time	68
9.	Insta	llation	69
	9.1.	General mounting instructions	
	9.2.	Measuring system	70
	9.3.	Pipe and wall mounting	
	9.4.	Version with distance separator	75
	9.5.	Rotation of transmitter body	76
	9.6.	Rotation of display	
	9.7.	Oxygen applications	
	9.8.	Hydrogen applications	77
10	Envir	ronment	-
	10.1.	Operating temperature range	
	10.2.	Storage temperature range	
	10.3.	IP protection rating	
	10.4.	Climatic class	
	10.5.	Vibration and surge resistance	
	10.6.	Electromagnetic compatibility	
		ess	
	11.1.	Process temperature limits (applies to the temperature of transmitter components)	
	11.2.	Operating temperature ranges of the used gaskets	
	11.3.	Specification of allowable pressures	
		hanical design	
	12.1.	Dimensions of body with pressure process connection	
	12.2.	Process connections	
	12.2.	1. Specification of process connections for APC-2000ALW Exd, Exi/Exd	85
	12.2.	2. Adapters	94
	12.2.	3. Specification of process connections for APR-2000ALW Exd, Exi/Exd	98
	12.2.	4. Process connections for measuring low gas pressure 1	101
	12.3.	Specification of mounting brackets 1	104
	12.4.	Specification of materials not coming into contact with the process	108
	12.5.	Specification of materials coming into contact with the process	109
13	Oper	ation1	111
	13.1.	Change of setpoints, parameterisation, read-out of variables, diagnostics	111
	13.2.	Local setpoints selected with local buttons	116
	13.2.	1. Local LCD display	116
	13.2.	2. Abbreviations of physical units of pressures and levels and their description	118

## **APLISENS**®

	13.2	.3.	Abbreviations of temperature measurement point name	118
	13.2	.4.	Abbreviations displayed during configuration via local MENU and their descriptions	118
	13.2	.5.	Abbreviations of local configuration errors and description of abbreviations	119
	13.2	.6.	ASCII characters displayed on LCD3 in user's unit	120
	13.2	.7.	Local keypad	120
	13.2	.8.	Local configuration of setpoints	120
	13.2	.9.	Navigation in local setpoints MENU	120
	13.2	.10.	Acceptance of local setpoints	
	13.2	.11.	List of local setpoints MENU messages	
	13.2	.12.	Structure of local setpoints MENU	
1	3.3.		l or remote selection of setpoints via HART communication	
	3.4.		gration with DCS	
	-		s and their application	
	4.1.		gn and operation modes	
	14.1	.1.	Flanged seals with flush diaphragm S-P	132
	14.1	.2.	Flanged seals with extended diaphragm S-T	136
	14.1	.3.	Flanged seals with extended diaphragm and direct diaphragm cleaning system S-TK-P	
	14.1	.4.	Chemical flanged seals with flush diaphragm S-Ch	142
	14.1	.5.	Threaded seals with large diaphragm S-Comp	
	14.1		Threaded seals with large diaphragm S-Comp10/25/60MPa	
	14.1		Threaded chemical seals with large diaphragm S-CompCh	
	14.1		Sanitary diaphragm seals	
	14.1		S-Mazut separators	
	14.1		S-RC separators	
	4.2.		hragms and gauge fluids	
	4.3.		perature operating ranges	
	4.4. 4.5		ionse times	
	4.5.		ntenance	
	4.6. 4.7.		ium/negative pressure applications	
			ooting	
	5.1.		alling a transmitter malfunction	
	5.2.		unction messages on LCD display	
	5.3.		re statuses read using HART	
	5.4.		ence of malfunction and failure on transmitter operation and output current	
	-		es, approvals, attestation, declarations	
	6.1.		nark	
1	6.2.		ertificates	
	16.2		ATEX Certificates (Europe)	

18.	Histo	ory of	revisions	221
17.	Addi	tiona	I documentation	221
1	6.8.	Decla	arations of Conformity	219
	16.7.	8.	Roughness certificate	218
	16.7.	7.	Cleaning certificate	217
	16.7.	6.	Certificate of hydrostatic test	216
	16.7.	5.	Certificate of the National Institute of Hygiene	215
	16.7.	4.	Material certificate of wetted parts according to PN-EN 10204	214
	16.7.	3.	Calibration certificate issued by Calibration Laboratory Aplisens	213
	16.7.	2.	Transmitter temperature compensation control certificate	212
	16.7.	1.	Final calibration certificate.	211
1	6.7.	Inspe	ection certificates	210
1	6.6.	Stan	dards and guidelines	209
1	6.5.	PED	execution	209
1	6.4.	Mari	ne certificates	209
1	6.3.	Hygi	enic applications	208
	16.2.	2.	IECEx certificates	208

### List of drawings

Figure 1. Gas flow rate measurement system using APR-2000ALW Exd, Exi/Exd 25
Figure 2. Gas flow rate measurement system using APR-2000ALW/G Exd, Exi/Exd
Figure 3. Steam flow rate measurement system using APR-2000ALW Exd, Exi/Exd 27
Figure 4. Liquid flow rate measurement system using APR-2000ALW Exd, Exi/Exd
Figure 5. System of liquid level measurement in open tanks using APR-2000ALW Exd, Exi/Exd
Figure 6. Liquid level measurement system in open tanks using APR-2000ALW Exd, Exi/Exd with direct separator
Figure 7. Liquid level measurement system in open tanks using APC-2000ALW Exd, Exi/Exd with direct separator
Figure 8. Liquid level measurement system in closed tanks using APR-2000ALW Exd, Exi/Exd
Figure 9. Liquid level measurement in closed tanks using APR-2000ALW Exd, Exi/Exd and direct separator 33
Figure 10. Liquid level measurement in closed tanks using APR-2000ALW Exd, Exi/Exd with distance separators. 34
Figure 11. Liquid level measurement in closed tanks using APR-2000ALW Exd, Exi/Exd with direct and distance separators
Figure 12. Liquid level measurement system in closed tanks with steam cushion using APR-2000ALW Exd, Exi/Exd
Figure 13. Liquid level measurement system in closed tanks with steam cushion using APR-2000ALW Exd, Exi/Exd with direct separator
Figure 14. Gas pressure measurement system using APC-2000ALW Exd, Exi/Exd.

## **APLISENS**®

Figure 15. Steam pressure measurement system on horizontal pipeline using APC-2000ALW Exd, Exi/Exd	39
Figure 16. Steam pressure measurement system on vertical pipeline using APC-2000ALW Exd, Exi/Exd	40
Figure 17. Gas and steam differential pressure measurement system using APR-2000ALW Exd, Exi/Exd	41
Figure 18. Liquid differential pressure measurement system using APR-2000ALW Exd, Exi/Exd.	42
Figure 19. Gas, steam and liquid differential pressure measurement system using APR-2000ALW Exd, Exi/Exc with distance separators.	
Figure 20. Example of process variables read-out window in Raport 2	44
Figure 21. Exemplary settings of the start of range, end of range and user's unit name in Raport 2	45
Figure 22. Set range and measurement limits.	46
Figure 23. Root characteristics with adjustable dead band.	47
Figure 24. The manufacturer's root characteristics 1 with fixed points of the characteristic change at points 0.6% and 0.8%.	48
Figure 25. Manufacturer's root characteristics 2 with adjustable dead band and hysteresis 0.2%.	49
Figure 26. Example of a tab in Raport 2, in which the type of processing characteristics and the dead band of the root characteristics are configured	
Figure 27. Set range current, saturation currents, alarm currents.	50
Figure 28. The maximum load resistance $R_{L\_MAX}$ [ $\Omega$ ] in the supply line of transmitter in Exi/Exd version without backlight depending on the power supply voltage U [V].	
Figure 29. APC(R)-2000ALW Exd, Exi/Exd. Electrical connection compartment, electrical terminals and their functions.	58
Figure 30. Electrical connection 420 mA of HART to transmitter in Exi version	60
Figure 31. Electrical connection 420 mA of HART to transmitter in Exd version	60
Figure 32. Requirements for the maximum interruption level in the transmitter power supply approved for correct HART communication.	62
Figure 33. Transmitter APC-2000ALW Exd, Exi/Exd. Wall and pipe mounting	71
Figure 34. Transmitter APR-2000ALW/G Exd, Exi/Exd. Wall and pipe mounting using AL mounting arm	72
Figure 35. Transmitter APR-2000ALW Exd, Exi/Exd with C type process connection. Mounting on pipe	73
Figure 36. Transmitter APR-2000ALW Exd, Exi/Exd with CR type process connection. Mounting on pipe	74
Figure 37. Assembly and mounting of the variant with distance separator.	75
Figure 38. Rotation of APC(R)-2000ALW Exd, Exi/Exd transmitter housing	76
Figure 39. Change of display position and access to buttons.	77
Figure 40. Overall dimensions of APC(R)-2000ALW Exd, Exi/Exd	83
Figure 41. Diversification of the head body dimensions due to the versions.	84
Figure 42. Type M connection (M20x1.5, Ø4) with socket.	85
Figure 43. Type P connection (M20x1.5, Ø12) with socket	. 86
Figure 44. Type ½ NPT connection (ext. ½ NPT, inner G ¼")	87
Figure 45. Type G ½" connection (G ½", Ø4) with socket	88

## **APLISENS**®

Figure 46. Type GP connection (G $\frac{1}{2}$ , Ø12) with socket.	89
Figure 47. Type CM30x2 connection (M30x2) with socket and ring	90
Figure 48. Type CG1 connection (G1") with socket.	91
Figure 49. Type G ¼ connection (G ¼", Ø4)	92
Figure 50. Type CG½ connection (G½") with socket.	92
Figure 51. Radiator with M20x1,5 or G ½ stub.	93
Figure 52. Adapter G ½"	94
Figure 53. Adapter R ½"	94
Figure 54. Adapter ¼ NPT	95
Figure 55. Adapter G ¼"	95
Figure 56. Adapter ½ NPT F	96
Figure 57. Adapter ¼ NPT F	96
Figure 58. Elastic tube ø6x1.	97
Figure 59. Type P connection for APR-2000ALW Exd, Exi/Exd	98
Figure 60. Overall dimensions of type C connection	99
Figure 61. Overall dimensions of CR type connection.	100
Figure 62. Process connection PCV type.	101
Figure 63. Process connection P or GP for low pressure gases measurement.	102
Figure 64. Process connection HS.	102
Figure 65. Block valve adapter ¼ NPT for low pressure gases measurement - view in isometry.	103
Figure 66. Overall dimension of block valve adapter ¼ NPT for low pressure gases measurement	103
Figure 67. Overall dimensions of the "AL" mounting bracket in galvanized and stainless steel versions	104
Figure 68. Mounting bracket C-2 for transmitters APR-2000ALW Exd, Exi/Exd	105
Figure 69. Mounting bracket Ø25 – view in isometry.	106
Figure 70. Overall dimensions of the mounting bracket ø25	107
Figure 71. Specification of materials not coming into contact with the process.	108
Figure 72. Specification of materials coming into contact with the process for APC-2000ALW Exd, Exi/Exd	109
Figure 73. Specification of materials coming into contact with the process for APR-2000ALW Exd, Exi/Exd.	110
Figure 74. LCD display.	116
Figure 75. Direct separator and possible process connections.	129
Figure 76. Distance separator and possible connections	130
Figure 77. Example of connection using two distance separators	131
Figure 78. Example of connection using distance and direct separators	131
Figure 79. Flanged seals with flush diaphragm S-P.	132
Figure 80. Types of flange separators S-P.	135

## **APLISENS**°

Figure 81. Flanged seals with extended diaphragm S-T	136
Figure 82. Types of flanged tubular separators S-T.	139
Figure 83. Separator S-TK-P with a built-in diaphragm rinsing unit, view in isometry	140
Figure 84. Overall dimensions of the separator S-TK-P with a built-in diaphragm rinsing unit.	141
Figure 85. Overall dimensions of S-Ch separator with flush diaphragm.	142
Figure 86. S-Comp separator - view in isometry.	145
Figure 87. S-Comp separator - overall dimensions.	146
Figure 88. S-CompK distance separator with capillary in axis.	146
Figure 89. S-CompK separator - overall dimensions.	147
Figure 90. S-Comp ø51 separator - view in isometry	148
Figure 91. S-Comp ø51 separator - overall dimensions	148
Figure 92. S-CompK ø51 separator - view in isometry	149
Figure 93. S-CompK ø51 - overall dimensions	150
Figure 94. S-Comp10MPa separator - view in isometry	151
Figure 95. S-Comp10MPa separator - overall dimensions	152
Figure 96. S-Comp25MPa separator - view in isometry	152
Figure 97. S-Comp25MPa separator - overall dimensions.	153
Figure 98. S-Comp60MPa separator - view in isometry	154
Figure 99. S-Comp60MPa separator - overall dimensions.	155
Figure 100. S-CompCh separator - view in isometry	156
Figure 101. S-CompCh - view of half section	157
Figure 102. S-CompCh - overall dimensions	157
Figure 103. S-CompChK with capillary in axis - overall dimensions.	158
Figure 104. S-CompCh DN25 separator in half section view	158
Figure 105. Separator S-CompCh DN25 - overall dimensions.	159
Figure 106. S-DIN separator. View in isometry.	162
Figure 107. S-DIN - overall dimensions.	162
Figure 108. S-K DIN with capillary in axis - view in isometry	163
Figure 109. S-K DIN separator with capillary in axis - overall dimensions.	164
Figure 110. S-SMS separator. View in isometry.	165
Figure 111. Overall dimensions of separator S-SMS.	165
Figure 112. S-K SMS separator with capillary in axis. View in isometry	166
Figure 113. S-K SMS separator with capillary in axis - overall dimensions.	167
Figure 114. S-Clamp separator. View in isometry.	168
Figure 115. S-Clamp separator - overall dimensions	168

## **APLISENS**°

Figure 116. S-K Clamp separator (distance separator with capillary in axis).	169
Figure 117. S-K Clamp separator - overall dimensions	170
Figure 118. S-Poziom 25 separator - overall dimensions.	171
Figure 119. S-K Poziom 25 distance separator with capillary in axis - view in isometry.	172
Figure 120. S-K Poziom 25 distance separator with capillary in axis - overall dimensions.	173
Figure 121. S-Poziom 50 separator - overall dimensions.	174
Figure 122. S-K Poziom 50 distance separator with capillary in axis - view in isometry	175
Figure 123. S-K Poziom 50 distance separator with capillary in axis - overall dimensions	176
Figure 124. S-DRD 65 separator - view in isometry	177
Figure 125. S-DRD 65 separator - overall dimensions	177
Figure 126. S-K DRD 65 (distance separator with capillary in axis) - view in isometry.	178
Figure 127. S-K DRD 65 (distance separator with capillary in axis) - overall dimensions	179
Figure 128. S-Varivent DN50 separator - view in isometry	180
Figure 129. S-Varivent DN50 separator - overall dimensions.	180
Figure 130. S-K Varivent DN50 (distance separator with capillary in axis) - view in isometry	181
Figure 131. S-K Varivent DN50 (distance separator with capillary in axis) - overall dimensions.	182
Figure 132. S-Mazut separator. View in isometry.	183
Figure 133. S-Mazut separator - overall dimensions.	183
Figure 134. S-MazutK distance separator with capillary in axis. View in isometry.	184
Figure 135. S-MazutK distance separator with capillary in axis - overall dimensions	185
Figure 136. S-RCM 30x2 separator - view in isometry.	187
Figure 137. S-RCG1 separator - view in isometry	187
Figure 138. S-RCG1 and S-RCM30x2 separators - overall dimensions.	188
Figure 139. Exemplary installation of transmitter APR-2000ALW Exd, Exi/Exd with direct separator.	191
Figure 140. Exemplary installation of transmitter APR-2000ALW Exd, Exi/Exd with distance separators	191
Figure 141. Example of installation in the case of vacuum/negative pressure application.	192
Figure 142. Example tab interface Raport 2 used to enable / disable the alarm	194
Figure 143. Example of the Sensor Block statuses read out from the transmitter via Raport 2	195
Figure 144. Statuses of the analog output block.	198
Figure 145. Summary statuses.	199
Figure 146. Analog input block statuses.	200
Figure 147. Physical block statuses.	201
Figure 148. Sensor block statuses.	202
Figure 149. Transducer block statuses	203
Figure 150. Operational modes statuses.	204

## **APLISENS**®

Figure 151. Final calibration certificate	. 211
Figure 152. Transmitter compensation control certificate- example.	. 212
Figure 153. Calibration certificate	. 213
Figure 154. Material certificate of wetted parts according to PN-EN 10204.	. 214
Figure 155. Certificate of the National Institute of Hygiene.	. 215
Figure 156. Certificate of hydrostatic test	. 216
Figure 157. Cleaning certificate.	. 217
Figure 158. Roughness certificate	. 218

### List of tables

Table 1. Symbols used	16
Table 2. Definitions and abbreviations.	18
Table 3. Transmitter versions, used in measurements.	20
Table 4. Transmitter versions, process connections.	21
Table 5. Transmitter versions, measurement ranges, overload, operating temperature, measurement error.	22
Table 6. Transmitter versions, supply voltages, output, options, special versions.	23
Table 7. Types of diagnostic alarms with comment	52
Table 8. Software version of the main microcontroller CPU	54
Table 9. Specific data related to the HART application layer HART rev.5.1.	55
Table 10. Specific data related to the HART application layer HART rev.7.	57
Table 11. Minimum and maximum supply voltage.	61
Table 12. Permissible supply interruption level required for correct HART communication.	62
Table 13. Pressure measurement resolution.	63
Table 14. APC-2000ALW Exd, Exi/Exd. Measuring ranges.	64
Table 15. APR-2000ALW Exd, Exi/Exd. Measuring ranges.	65
Table 16. APR-2000ALW Exd, Exi/Exd with diaphragm seals. Measuring ranges with distance separators or distance and direct separators	65
Table 17. APR-2000ALW/G Exd, Exi/Exd. Measurement ranges of the version with the connection for low pressure gases measurement.	66
Table 18. Basic measurement error of APC(R)-2000ALW Exd, Exi/Exd	66
Table 19. Basic measurement error of APR-2000ALW Exd, Exi/Exd with connection for low pressure gases measurement	66
Table 20. Temperature error of pressure and differential pressure transmitter	67
Table 21. Measurement error due to static pressure of differential pressure transmitter APR-2000ALW Exd, Exi/Exd	
Table 22. Long-term stability.	68

## **APLISENS**°

Table 23. Operating temperature range.	78
Table 24. Storage temperature range	
Table 25. IP protection rating	79
Table 26. Climatic class	
Table 27. Vibration and surge resistance.	79
Table 28. Electromagnetic compatibility	80
Table 29. Temperature limit for individual transmitter components.	81
Table 30. Temperature ranges for the transmitter sealing elements.	82
Table 31. Diversification of the head height depending on the type of connection and version	101
Table 32. APC(R)-2000ALW Exd, Exi/Exd. Change of setpoints, parameterisation, read-out of variable diagnostics.	
Table 33. Dimensions of S-P separators	133
Table 34. Recommended minimum measurement range width (kPa).	133
Table 35. Additional absolute "zero" error due to the ambient temperature changes	133
Table 36. Range of the measured medium temperature	134
Table 37. Dimensions of S-T separators	136
Table 38. Recommended minimum measurement range width (kPa).	137
Table 39. Additional absolute "zero" error due to the ambient temperature changes for separator wi         100mm of tube.	
Table 40. Range of the measured medium temperature	137
Table 41. The dimensions of the Aplisens separators are similar to those specified in DIN EN1092-1	143
Table 42. The dimensions of the Aplisens separators are similar to those specified in ANSI ASME 16.5	143
Table 43. Recommended minimum measurement range width (kPa).	143
Table 44. Additional absolute "zero" error due to the ambient temperature changes	144
Table 45. Offered chemical-resistant materials with the major application limits	144
Table 46. Recommended minimum measurement range width of separator S-Comp/K (kPa).	150
Table 47. Additional absolute "zero" error due to the ambient temperature changes.	150
Table 48. Recommended minimum range width of separator S-Comp10/25/60MPa.	156
Table 49. Recommended minimum measurement range width of separator S-CompCh/K (kPa)	160
Table 50. Additional absolute "zero" error due to the ambient temperature changes.	160
Table 51 Recommended minimum measurement range width (kPa).	161
Table 52. Additional absolute "zero" error due to the ambient temperature changes	161
Table 53. Size of S-DIN separators acc. to DIN 11851, for pipes acc. to DIN 11850 series 2	162
Table 54. Dimensions of separators S-K DIN according to DIN 11851 for pipes consistent with DIN 118	

## *APLISENS*°

Table 55. Dimensions of separator S-SMS according to SMS (SS 3352) for pipes consistent with         2 or ISO 2037/1992.	
Table 56. Dimensions of separator S-K SMS according to SMS (SS 3352) for pipes consistent wi Series 2 or ISO 2037/1992	
Table 57. Dimensions of separator S-Clamp according to DIN 32676 for pipes consistent with D or ASME BPE	
Table 58. Dimensions of separator S-Clamp according to DIN 32676 for pipes consistent with D A or DIN 11850 series 2	
Table 59. Dimensions of separator S-K Clamp according to DIN 32676 for pipes consistent with         series C or ASME BPE.	
Table 60. Dimensions of separator S-K Clamp according to DIN 32676 for pipes consistent with A or DIN 11850 series 2	
Table 61. Recommended minimum measurement range width (kPa) for separator S-Mazut/K.	186
Table 62. Additional absolute "zero" error due to the ambient temperature changes of separa Mazut75 and S-Mazut100	
Table 63. List of fluid parameters for separators.	190
Table 64. Numbers of error statuses displayed on the display	197
Table 65. Flameproof Exd version (IECEx). Permissible ranges of operating temperatures. Temp	
Table 66. Flameproof Exd version (IECEx). Permissible ranges of operating temperatures. Temp	
Table 67. Applied standards and guidelines.	209
Table 68. Inspection certificates.	210

### 1. Document information

### 1.1. Purpose of the document

The purpose of the Technical Information is to provide broader knowledge of the design, application, installation and parameterisation of pressure and differential pressure transmitters. All versions of the transmitters with the ID numbers listed on pages 2–3 of this document shall continue to appear under the common name **APC(R)-2000ALW Exd, Exi/Exd**, unless it is intentional to distinguish the specific characteristics of a given type.

### 1.2. Symbols used

Symbol	Description
$\triangle$	Warning to proceed strictly in accordance with the information contained in the documen- tation in order to ensure the safety and full functionality of the device.
i	Information particularly useful during installation and operation of the device.
(Ex)	Information particularly useful during installation and operation of an Ex type device.

Table 1. Symbols used.

### 1.3. Trademarks

HART<sup>®</sup> is a registered trademark of FieldComm Group. Windows<sup>®</sup> is a registered trademark of Microsoft Corporation. Google Play<sup>®</sup> is a service registered and managed by Google<sup>®</sup> Inc. Varivent<sup>®</sup> is a registered trademark of GEA Tuchenhagen Gmbh. Tri-Clamp<sup>®</sup> is a registered trademark of Alfa Laval Corporate AB. Teflon<sup>®</sup> is a registered trademark of E. I. du Pont de Nemours and Company. Monel<sup>®</sup> is a registered trademark of Alloys International, Inc. Hastelloy<sup>®</sup> is a registered trademark of Haynes International, Inc.



### 1.4. Definitions and abbreviations

		APC(R)-2000ALW Exd, Exi/Exd. Definitions and abbreviations.
ITEM NO	Abbreviation	Meaning
1	LRV	"Lower Range Value" – the value of the set range expressed in physical units corre- sponding to the current of 4.000 mA, i.e. 0% of the output setpoint. The set range can- not exceed the set range limits. The minimum width of the set range <b> (URV-LRV) </b> is limited to 10% of the base range <b>(URL-LRL)</b> .
2	URV	"Upper Range Value" — the value of the set range expressed in physical units corre- sponding to the current of 20.000 mA, i.e. 100% of the output setpoint. The set range cannot exceed the set range limits. The minimum width of the set range <b> (URV-LRV) </b> is limited to 10% of the base range <b>(URL-LRL)</b> .
3	LRL LSL	"Lower Range Limit" or "Lower Sensor Limit" – lower limit of set range expressed in physical units. Value (URL-LRL) or (USL-LSL) is referred to as the base transmitter range.
4	URL USL	"Upper Range Limit" or "Upper Sensor Limit" – upper limit of set range expressed in physical units. Value (URL-LRL) or (USL-LSL) is referred to as the base transmitter range.
5	LPL	"Lower Processing Limit" – lower limit of digital processing of measured value. The transmitter processes a digital measurement up to 50% of the base range width below the lower limit of set range LRL (LSL). After reaching the LPL and when below this value up to LSAL, the transmitter freezes the refreshing of digital value of the meas- urement. In this situation, message "UndEr" will be displayed on the display and diag- nostic alarm mode will be activated depending on the settings I_AL < 3.600 mA. Addi- tionally, collective status PV_OUT_OF LIMITS and status PV_LOW_LIMITED in the Trans- ducer Block will be set, which can be read out in the diagnostic tab via HART communi- cation.
6	UPL	"Upper Processing Limit" – upper limit of digital processing of measured value. The transmitter processes a digital measurement up to 50% of the base range width above the upper limit of set range <b>URL (USL).</b> After reaching the <b>UPL</b> and when above this value up to <b>USAL</b> , the transmitter freezes the refreshing of digital value of the measurement. In this situation, message E0128 will be displayed on the display and diagnostic alarm mode will be activated depending on the settings I_AL< 3.600 mA. Additionally, collective status PV_OUT_OF LIMITS and status PV_HIGH_LIMITED in the Transducer Block will be set, which can be read out in the diagnostic tab via HART communication.
7	LSAL	"Lower Saturation Limit" – lower limit of the ADC transmitter processing range. The lower limit of the ADC transmitter saturation is on the pressure/differential pressure scale below the LPL point and is associated with the minimum pressure, at which the analog-digital pressure measurement transmitter reaches the lower limit of the processing capacity. The exact determination of this pressure is not possible, however usually the pressure does not exceed the pressure corresponding to 200% of the base range width (URL-LRL) below the lower limit of the digital processing of measured LPL value. After reaching LSAL and when below this value, error number E0136 will be displayed on the display and the diagnostic alarm mode I_AL<3.600 mA will be activated. Additionally, collective status SENSOR_FAULT, PV_OUT_OF LIMITS, status NOREF+ERR@AIN1_AD7794 in the Sensor Block and PV_LOW_LIMITED in the Transmitter Block will be set, which can be read out in the diagnostic tab via HART communication.
8	USAL	"Upper Saturation Limit" – upper limit of the ADC transmitter processing range. The upper limit saturation point of ADC transmitter is on the pressure/differential pressure scale above the <b>UPL</b> point and is associated with the maximum pressure at which the analogue-digital pressure measurement transmitter reaches the upper limit of the pro- cessing capacity. The exact determination of this pressure is not possible, however usually the pressure does not exceed the pressure corresponding to 200% of the base



r ,		
		range width <b>(URL-LRL)</b> above the upper limit of the digital processing of measured <b>UPL</b> value. After reaching <b>USAL</b> and when above this value, error number E0256 will be
		displayed and the diagnostic alarm mode will be activated depending on the settings
		I_AL < 3.600 mA. Additionally, collective status SENSOR_FAULT, PV_OUT_OF LIMITS and
		status NOREF+ERR@AIN1_AD7794 in the Sensor Block will be set, which can be read
		out in the diagnostic tab via HART communication.
		"Minimum Span Value" – a value of the minimum set range width [URV - LRV] that
9	MSV	possible to be set in the transmitter. This value is entered into the transmitter at the
		manufacturing stage and cannot be changed by the user. It is used to limit the applica-
		tion of the scaling of the <b>MSF</b> set range.
		"Minimum Span Factor" – scaling coefficient of set range. Specifies the ratio of the base
10	MSF	range to the minimum set range that can be set in the transmitter. This coefficient is
		usually x 10. The parameter defining the minimum set range width can be read-out
		using HART communications.
11	FSO	"Full Scale Output" – this term refers to full scale of setpoints (range of setpoints). For
		setpoints expressed as percentage values, it corresponds to 100% of the range value.
12	ADC	"Analog to Digital Converter", an analog-digital transmitter used to change the analog
	_	value of voltage or current to a digital value.
13	DAC	"Digital to Analog Converter", a digital-analog transmitter used to change the digital
		value to an analog value of voltage or current.
14	LCD1,	LCD information fields. The exact description is included in ( $\rightarrow$ 13.2.1).
	LCD2, LCD3	
		Alarm current.
		For non-critical safe diagnosable damages, the diagnostic alarm current is: $I_AL < 3.600$
15		mA (nominal 3.440 mA).
15	I_AL	For critical safe diagnosable failures, the diagnostic alarm current value is: I_AL << 3.600 mA (nominal 0.240 mA).
		For safe non-diagnosed failures, the assumed alarm current value may be I_AL < 3.600
		mA or $I_AL > 20.660$ mA.
	PV	First process variable (pressure or differential pressure).
	SV	Second process variable (pressure sensor temperature).
16	TV	Third process variable (temperature of main CPU microcontroller).
	FV	Fourth process variable (ADC transmitter temperature).

Table 2. Definitions and abbreviations.



### 2. Selection of transmitter version depending on application

### 2.1. Principle of pressure and differential pressure measurement

The measurement principle is based on the measurement of the output voltage from the piezoelectric bridge proportional to the process pressure acting on the sensor diaphragm. The external pressure is fed through the flexible diaphragm of the sensor and the gauge fluid filling the sensor to the piezoresistive diaphragm of the measuring bridge, causing its deflection and changing the resistance of the bridge piezoresistors. Depending on the purpose, the measuring sensor may be installed in simple pressure heads or in more complex differential pressure heads. Additionally, pressure or differential pressure heads may be equipped with hydraulic separators. The electrical signal from the pressure sensor is transmitted to the ADC analog-digital transmitter where it is converted to a digital value. The digital value of the measurement signal with diagnostic measurements and the temperature measurement of the structure and the ADC transmitter via an optoelectrical galvanic barrier is transmitted to the main CPU microcontroller that manages the calculations and control of the transmitter modules. Here the analysis of the correctness of measurements, normalization of measurements to physical pressure values, compensation of temperature impacts on measurements, conversion of units, conversion of the characteristics and output setpoint ranges are performed depending on the client's settings. As a result, the standardized, calibrated and configured measurement controls the output current controller 4 ... 20 mA, ensuring that a user will obtain a precise and stable read-out of the measured input value of the process variable.

### 2.2. Selection of the transmitter version

Transmitter APC(R)-2000ALW Exd, Exi/Exd is manufactured in flameproof Exd version and in an intrinsically safe and flameproof Exi/Exd version.

The following versions are available:

- low pressure measurement with an ultra-stable HS header;
- measurement of medium and high pressures;
- measurement of low pressure differences with the ultra-stable HS head;
- measurement of medium and high differential pressure.

The transmitters are available with several types of process connections and various versions of separators. The list of parameters is presented in the table below.



Smart transmitters						
	Pressure	Pressure Differential pressure				
	APC-2000ALW Exd, Exi/Exd	APR-2000ALW Exd, Exi/Exd with diaphragm seals		APR-2000ALW/G Exd, Exi/Exd		
Version				Contraction		
Application in measure- ments	<ul> <li>Level measurement</li> <li>Pressure measurement</li> <li>Negative pressure measurement</li> <li>Absolute pressure measurement</li> </ul>	<ul> <li>Level measurement</li> <li>Differential pressure measurement</li> <li>Flow measurement</li> </ul>	- Level measurement	<ul> <li>Level measure- ment in closed tanks</li> <li>Density measure- ment</li> <li>Phase limit meas- urement</li> <li>Differential pres- sure measurement</li> </ul>	<ul> <li>Level measurement</li> <li>Density measurement</li> <li>Phase limit measurement</li> <li>Differential pressure measurement         <ul> <li>(at varied height of pulse collection points)</li> </ul> </li> </ul>	<ul> <li>Pressure meas- urement</li> <li>Negative pressure measurement</li> <li>Differential pres- sure measurement</li> </ul>
			-	on (Exd, Exi):	(res)	
Housing	- high pressure aluminium alloy casting, varnished or acid resistant steel 1.4401 (316)				teel 1.4401 (316)	

Table 3. Transmitter versions, used in measurements.



	APC-2000ALW Exd, Exi/Exd	APR-2	APR-2000ALW EXA EXI/EXA		APR-2000ALW/G Exd, Exi/Exd
				Contraction of the second seco	
Process connections	<ul> <li>M (M20x1.5, Ø4)</li> <li>P (M20x1.5, Ø12)</li> <li>1/2NPT(ext. 1/2" NPT, inner G1/4")</li> <li>G1/2 (G1/2, Ø4)</li> <li>GP (G1/2, Ø12)</li> <li>CM30x2(M30x2)</li> <li>CG1(G1")</li> <li>G1/4 (G1/4" Ø4)</li> <li>CG1/2(G1/2")</li> <li>RM(M20x1.5 Ø4)</li> <li>RG radiator with G1/2 stub</li> <li>Specification of process connections for APC- 2000ALW Exd, Exi/Exd</li> </ul>	<ul> <li>P (M20x1.5, Ø9)</li> <li>C</li> <li>CR</li> <li>Specification of process connections for APR- 2000ALW Exd, Exi/Exd</li> </ul>	<ul> <li>For APR-2000ALW:</li> <li>1/4 NPT (for impulse tube welding)</li> <li>For APC(R)-2000ALW:</li> <li>Flanged flat S-P</li> <li>Flanged tubular S-T</li> <li>Separator S-TK-P with built-in diaphragm flushing unit</li> <li>Chemical resistant flanged S-Ch</li> <li>Compact S-Comp</li> <li>Compact distance separators S-Comp10MPa, S-Comp25MPa, S-Comp60MPa</li> <li>Compact chemical resistant S-CompCh</li> <li>Hygiene</li> <li>S-Mazut</li> <li>S-RC</li> </ul>	<ul> <li>Flanged flat S-P</li> <li>Flanged tubular S-T</li> <li>Separator S-TK-P with built-in diaphragm flushing unit</li> <li>Chemical resistant flanged S-Ch</li> <li>Compact S-Comp</li> <li>Compact distance separators</li> <li>S-Comp10MPa, S-Comp25MPa,</li> <li>S-Comp60MPa</li> <li>Compact chemical resistant</li> <li>S-CompCh</li> <li>Hygiene</li> <li>S-Mazut</li> <li>S-RC</li> </ul>	<ul> <li>PCV (stubs with clamping end for Ø6 tube)</li> <li>P (M20 x 1.5)</li> <li>GP (G1/2" Ø12)</li> <li>Block valve adapter (1/4NPT)</li> <li>Process connections for measuring low gas pressure</li> </ul>

Table 4. Transmitter versions, process connections.



	APC-2000ALW Exd, Exi/Exd	APR-2000ALW	APR-2000ALW Exd, Exi/Exd APR-2000ALW Exd, Exi/Exd APR-2000/ with diaphragm seals Exd, Exi,			
				COLOR AND COLOR		
Measuring ranges <sup>1</sup>	-100 kPa to 100 MPa	-50 kPa to 7 MPa Static pressure up to 41.3 MPa	According to the rele- vant separator data sheet <sup>2</sup> .	-160 kPa to 1600 kPa		-10 to 10 kPa Static pressure up to 100 kPa
Overload*	Up to 120 MPa	With type C connection: 25 MPa –standard version. 41.3 MPa – special version. With type P connection: 7 MPa	According to the relevant separator data sheet <sup>2</sup> .			Overload depending on the measurement range and the head used.
Operating temperature <sup>6</sup>	-40°C	80°C	-40°C 80°C		-25°C 80°C	
Ambient temperature <sup>6</sup>	-40°C	80°C	-40°C 80°C			-40°C 80°C
Measurement error <sup>5</sup>	Basic error 0.05% 0.1%	Basic error ≤ <b>± 0.075%</b>	Basic error <b>≤ ± 0.1%</b> Please note! Measurement errors depending on the effect of separation			Basic error from ± 0.075% to ± 1,6% Please note! Measure- ment errors depending on the measurement range.

Table 5. Transmitter versions, measurement ranges, overload, operating temperature, measurement error.



	APC-2000ALW Exd, Exi/Exd	APR-2000ALW	/ Exd, Exi/Exd	APR-2000ALW Exd, Exi/Exd with diaphragm seals		APR-2000ALW/G Exd, Exi/Exd
					C Strange	
Power supply voltage	For Exd: 13,5 - 55 V DC For Exi/Exd: 11,5 - 30 V DC / 11,5 - 55 V DC Note: backlight for special order, switched on at the production level. For transmitters with LCD backlight + 3 V.					
Output			<b>4 20 mA</b> with	h HART protocol		
Options <sup>4</sup>	<ul> <li>KAL – factory calibration certificate;</li> <li>WZ — calibration certificate issued by Accredited Laboratory;</li> <li>AU – gold-plated diaphragm;</li> <li>2.1, 3.1 – material certificate acc. to PN-EN10204:2006 (wetted parts);</li> <li>NACE – material certificate NACE MR0175/ISO 15156 (wetted parts);</li> <li>PZH – Certificate of the National Institute of Hygiene;</li> <li>TH – hydrostatic test;</li> <li>filling with edible oil, silicone oil, chemically neutral liquid for oxygen measurement versions and clean gases.</li> </ul>					
Special versions	<ul> <li>IP67 — housing protection rating — special version;</li> <li>MR – version for marine applications;</li> <li>Hastelloy – diaphragm made of Hastelloy C 276 (not for HS version;)</li> <li>Oxygen – transmitter adapted for measurement of oxygen and pure gases<sup>3</sup>;</li> <li>SS – housing made of steel 316 (stainless steel – maximum vibrations up to 1g);</li> <li>HS — Ultra stable measuring element;</li> <li>Other – to be agreed with Aplisens consultants.</li> </ul>					

Table 6. Transmitter versions, supply voltages, output, options, special versions.



- \* Limit value of the device pressure depends on the measuring system component with the lowest rated pressure.
- <sup>1</sup> Measurement ranges of pressure and differential pressure transmitters and transmitters with the connection for low gas pressure measurement are shown in:
- → Table 14, → Table 15, → Table 16, → Table 17 of Technical Information.
- <sup>2</sup> Scope of applicability according to the relevant separator data sheet. The data are included in section ( **>** Separators and their application).
- <sup>3</sup> For selected ranges.
- <sup>4</sup> Special versions with regard to separators according to the relevant separator data sheet.
- <sup>5</sup> Measurement error depending on the measurement range.
- <sup>6</sup> Range of storage temperatue and operating temperature is depends on the measuring system components see **→** Table 23, **→** Table 24.

### 2.3. Flow measurement, methods of mounting and mechanical connection of transmitters


Transmitter APR-2000ALW Exd, Exi/Exd enables to perform the measurement of gas, steam and liquid flow. In order to obtain the output current proportional to the flow, the transmitter should be set to the output set-point root characteristics mode ( $\rightarrow$  4.4). The transmitter configuration allows for selection of one of 3 types of root characteristics. These characteristics differ from each other in the method of controlling the current output below the root dead band. The selection of characteristics is possible via HART communication and the corresponding software, e.g. Raport 2 manufactured by Aplisens S.A. or other using DD or DTM libraries.

In transmitters APR-2000ALW Exd, Exi/Exd the following characteristics are available:

- second-stage root characteristics with relay characteristics and 0.2% hysteresis in the dead band
   (→ 4.5);
- manufacturer's dual linear characteristics No 1 + second-stage root characteristics for constant dead band = 0.6% ... 0.8% of setpoints (→ 4.6);
- manufacturer's single linear characteristics No 2 + second-stage root characteristics and 0.2% hysteresis in the dead band (→ 4.7);
- square characteristics;
- special characteristics based on user-modified table.

#### 2.3.1. Measurement of gas flow rate

Transmitter APR-2000ALW Exd, Exi/Exd must be installed above the measuring point so that the condensate can flow from the capillaries to the process pipe.

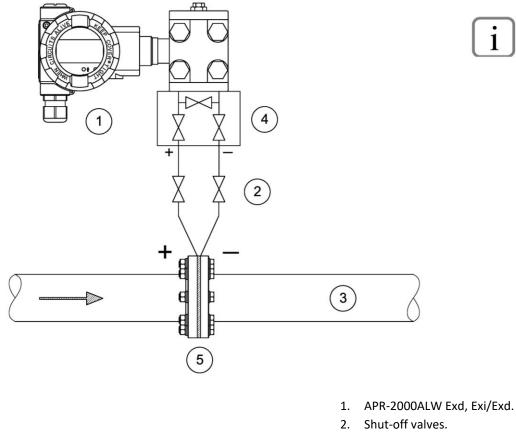

- 3. Pipeline.
- 4. Three-way valve.
- 5. Orifice or Pitot tube.

Figure 1. Gas flow rate measurement system using APR-2000ALW Exd, Exi/Exd.



### Measurement of gas flow rate of low pressure

Transmitter APR-2000ALW/G Exd, Exi/Exd must be installed above the measuring point so that the condensate can flow into the piping.


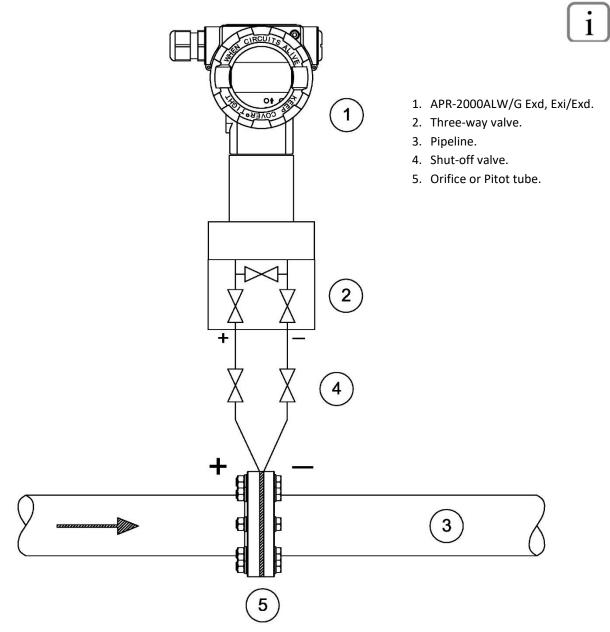


Figure 2. Gas flow rate measurement system using APR-2000ALW/G Exd, Exi/Exd.

### 2.3.2. Measurement of steam flow rate

Transmitter APR-2000ALW Exd, Exi/Exd must be installed below the measuring point.

Traps (siphons) should be located at the same level as the sampling points and at the same distance from the transmitter. Before turning the device on fill the impulse tubes up to the height of condensate traps.

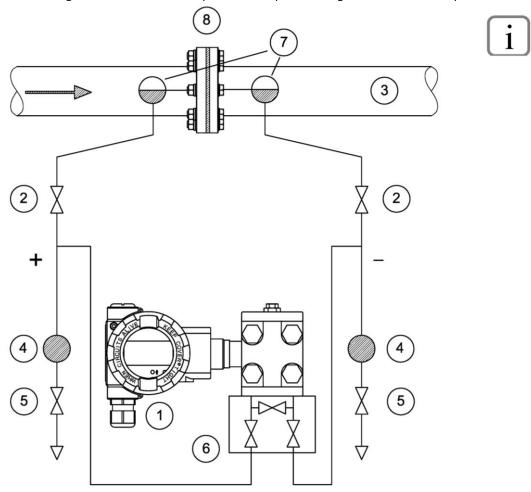


- 1. APR-2000ALW Exd, Exi/Exd.
- 2. Shut-off valves.
- 3. Pipeline.
- 4. Separators.
- 5. Drain valves.
- 6. Three-way valve.
- 7. Traps (condensate traps).
- 8. Orifice or Pitot tube.

Figure 3. Steam flow rate measurement system using APR-2000ALW Exd, Exi/Exd.

### 2.3.3. Liquid flow measurement

Transmitter APR-2000ALW Exd, Exi/Exd must be mounted below the measuring point so that the impulse tubes are always filled with liquid and the gas bubbles can freely escape to the process pipe.

If the measured medium contains particles, it is useful to install separators and drain valves to remove deposits.

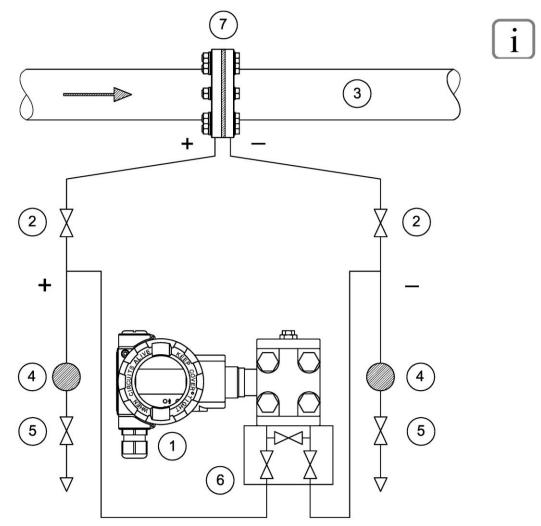

- 1. APR-2000ALW Exd, Exi/Exd.
- 2. Shut-off valves.
- 3. Pipeline.
- 4. Separators.
- 5. Drain valves.
- 6. Three-way valve.
- 7. Orifice or Pitot tube.

Figure 4. Liquid flow rate measurement system using APR-2000ALW Exd, Exi/Exd.

### 2.4. Level measurement


Transmitter APC-2000ALW Exd, Exi/Exd or APR-2000ALW Exd, Exi/Exd enables to measure the level of liquids. In order to obtain the output current proportional to the liquid column, the transmitter should be set to the linear output setpoint characteristics mode ( $\rightarrow$  4.4). The transmitter configuration also enables to select a 21point user characteristics and define the user's own unit and scaling the output setpoint. In this way, it is possible, for example, to measure the volume/weight of liquid in the tanks with irregular shapes.

### 2.4.1. Liquid level measurement system in open tanks

Transmitter APR-2000ALW Exd, Exi/Exd must be mounted below the measuring point so that the impulse tubes are always filled with liquid.

The negative side of pressure connection is open to the atmosphere.


If the measured medium contains particles, it is useful to install separators and drain valves to remove deposits.

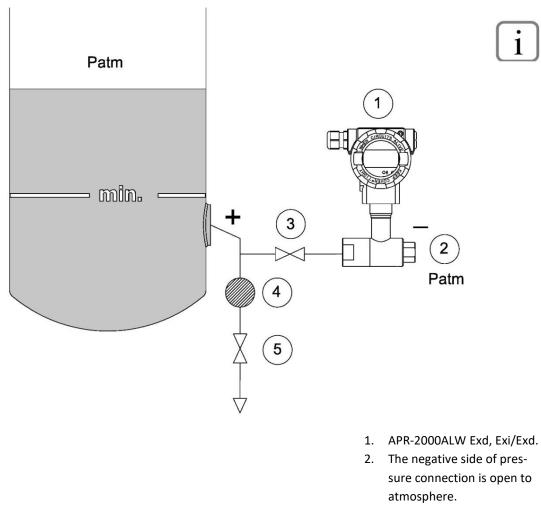

- 3. Shut-off valve.
- 4. Separators.
- 5. Drain valves.

Figure 5. System of liquid level measurement in open tanks using APR-2000ALW Exd, Exi/Exd.

Transmitter APR-2000ALW Exd, Exi/Exd shall be mounted directly into the tank using an integrated separator always below the minimum liquid level.

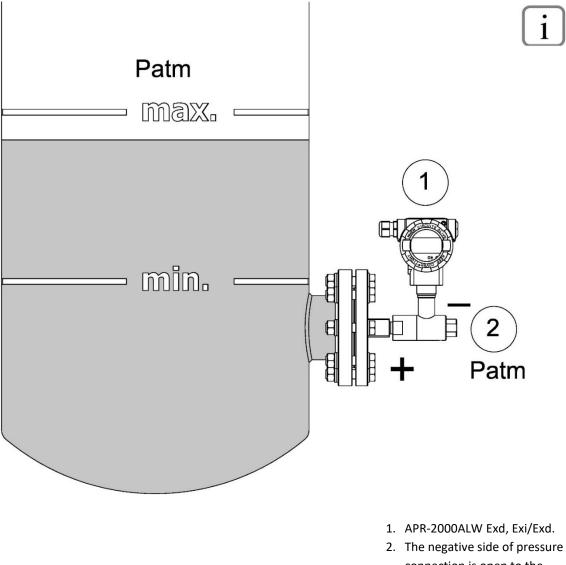


 The negative side of pressure connection is open to the atmosphere.

Figure 6. Liquid level measurement system in open tanks using APR-2000ALW Exd, Exi/Exd with direct separator.

### 2.4.3. Liquid level measurement system in open tanks with the use of direct separator and pressure transmitter APC-2000ALW Exd, Exi/Exd

Transmitter APC-2000ALW Exd, Exi/Exd shall be mounted directly into the tank using an integrated separator always below the minimum liquid level.

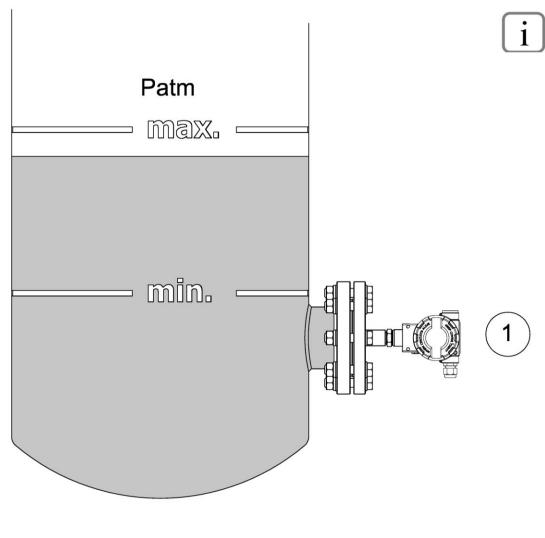

1. APC-2000ALW Exd, Exi/Exd.


Figure 7. Liquid level measurement system in open tanks using APC-2000ALW Exd, Exi/Exd with direct separator.

#### 2.4.4. Liquid level measurement system in closed tanks

Transmitter APR-2000ALW Exd, Exi/Exd must be mounted below the measuring point so that the impulse tubes are always filled with liquid.

The negative side of pressure connection must be connected through a capillary tube always above the maximum liquid level.

If the measured medium contains particles, it is useful to install separators and drain valves to remove deposits.

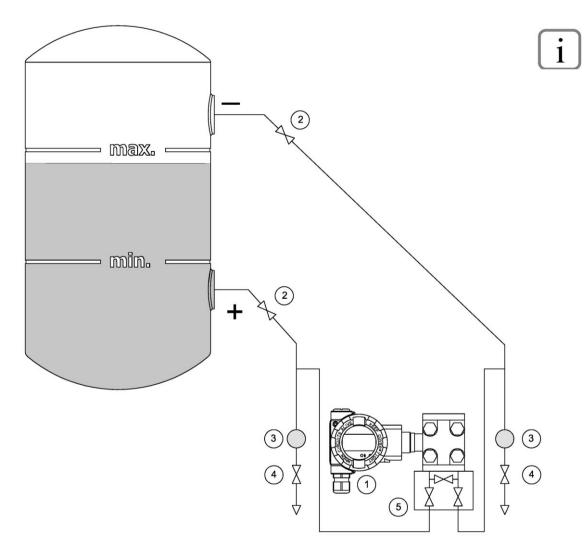

- 1. APR-2000ALW Exd, Exi/Exd.
- 2. Shut-off valves.
- 3. Solids separators.
- 4. Drain valves.
- 5. Three-way valve.


Figure 8. Liquid level measurement system in closed tanks using APR-2000ALW Exd, Exi/Exd.



### 2.4.5. Liquid level measurement system in closed tanks with the use of direct separator

Transmitter APR-2000ALW Exd, Exi/Exd must be mounted directly into the tank using an integrated separator. The negative side of pressure connection must be connected through a capillary tube always above the maximum liquid level.

If the measured medium contains particles, it is useful to install separators and drain valves to remove deposits.

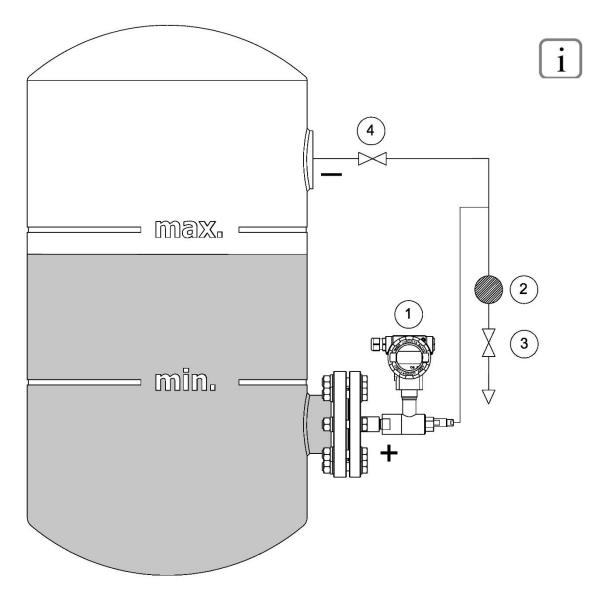

- 1. APR-2000ALW Exd, Exi/Exd.
- 2. Solids separators.
- 3. Drain valve.
- 4. Shut-off valve.


Figure 9. Liquid level measurement in closed tanks using APR-2000ALW Exd, Exi/Exd and direct separator.

#### 2.4.6. Liquid level measurement system in closed tanks with the use of distance separators

Transmitter APR-2000ALW Exd, Exi/Exd with diaphragm seals must be installed below the mounting points of distance separators.

Approximate ambient temperature in both capillaries connecting the transmitter with separators must be ensured.

The correct measurement is ensured only between the upper edge of the lower separator and the lower edge of the upper separator.

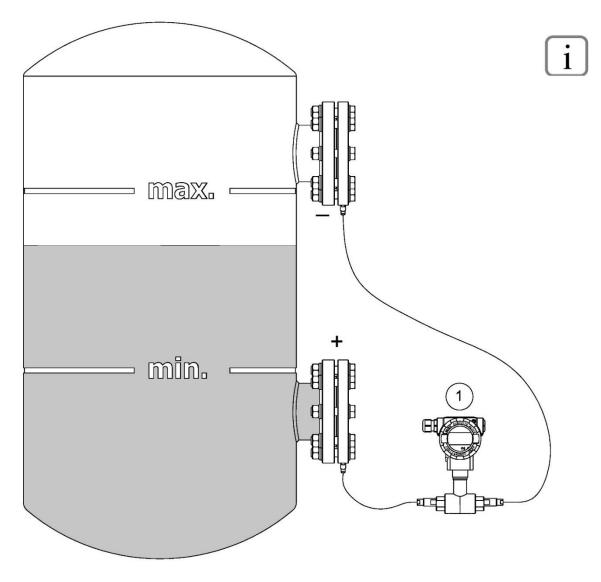

1. APR-2000ALW Exd, Exi/Exd with distance separators.

Figure 10. Liquid level measurement in closed tanks using APR-2000ALW Exd, Exi/Exd with distance separators.

### 2.4.7. Liquid level measurement system in closed tanks with the use of direct and distance separators

Transmitter APR-2000ALW Exd, Exi/Exd must be mounted directly into the tank using an integrated separator. The negative side of pressure connection must be connected through a distance separator always above the maximum liquid level.

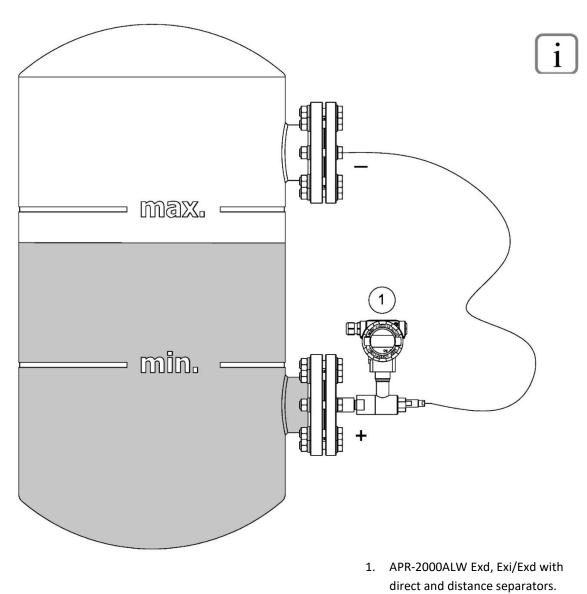



Figure 11. Liquid level measurement in closed tanks using APR-2000ALW Exd, Exi/Exd with direct and distance separators.

#### 2.4.8. Liquid level measurement system in closed tanks with steam pillow


Transmitter APR-2000ALW Exd, Exi/Exd must be mounted below the measuring point so that the impulse tubes are always filled with liquid.

The negative side of pressure connection must be connected through a capillary tube always above the maximum liquid level.

If the measured medium contains particles, it is useful to install separators and drain valves to remove deposits.

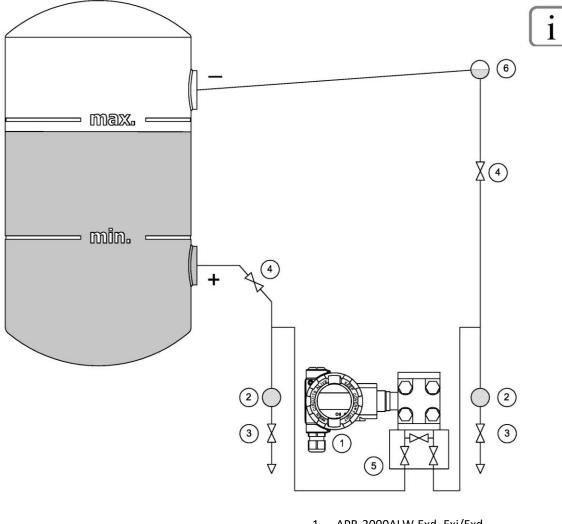

 - 1. APR-2000ALW Exd, Exi/Exd.
- 2. Solids separators.
- 3. Drain valves.
- 4. Shut-off valves.
- 5. Three-way valve.
- 6. Condensate trap.




#### 2.4.9. Liquid level measurement system in closed tanks with steam cushion with the use of direct separator

Transmitter APR-2000ALW Exd, Exi/Exd must be mounted directly into the tank using a direct separator. The negative side of pressure connection must be connected through a capillary tube always above the maximum liquid level.

Condensate trap ensures constant pressure from the negative process pressure side.

When measuring medium contains solid particles, it is useful to install a separator and drain valve to remove deposits.

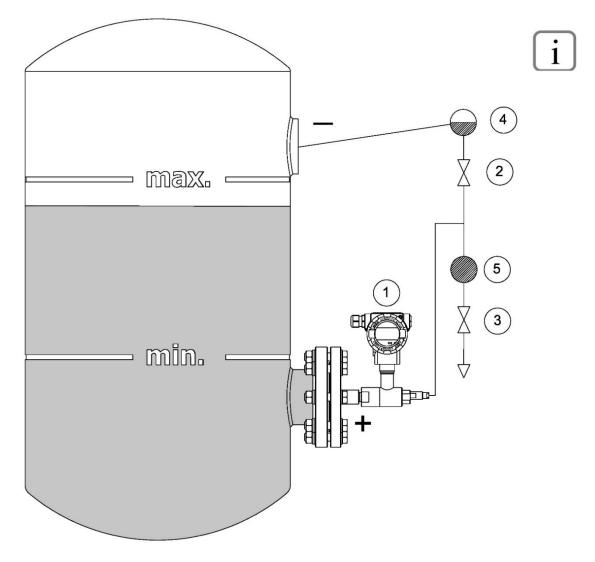

- 1. APR-2000ALW Exd, Exi/Exd with direct separator.
- 2. Shut-off valve.
- 3. Drain valve.
- 4. Condensate trap.
- 5. Solids separator.


Figure 13. Liquid level measurement system in closed tanks with steam cushion using APR-2000ALW Exd, Exi/Exd with direct separator.

## 2.5. Pressure measurement

Transmitter APC-2000ALW Exd, Exi/Exd or APR-2000ALW Exd, Exi/Exd enables to measure pressure. A range of process connections with separators and a large number of standard process ranges of the measured pressures are available. The transmitter configuration also allows for pressure presentation in many physical units ( $\rightarrow$  13.2.2) or the user's own units ( $\rightarrow$  13.2.6).

#### 2.5.1. Gas pressure measurement system

Transmitter APC-2000ALW Exd, Exi/Exd must be installed above the measuring point so that the condensate can flow into the piping.

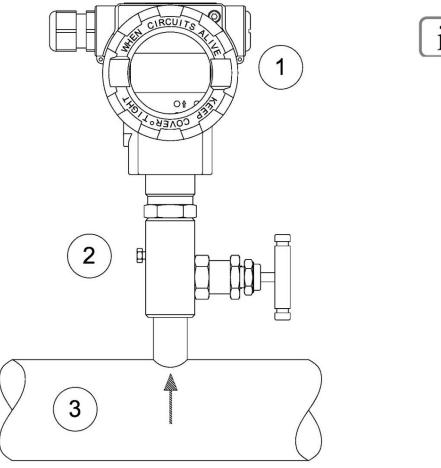


- 1. APC-2000ALW Exd, Exi/Exd.
- 2. Pressure gauge valve.
- 3. Pipeline.

Figure 14. Gas pressure measurement system using APC-2000ALW Exd, Exi/Exd.



#### 2.5.2. Steam pressure measurement system


Steam temperature reducing water-seal tubes should be used to measure the steam pressure. Preferably transmitter APC-2000ALW Exd, Exi/Exd should be installed below the measuring point. Before starting the water-seal tubes must be filled with liquid.

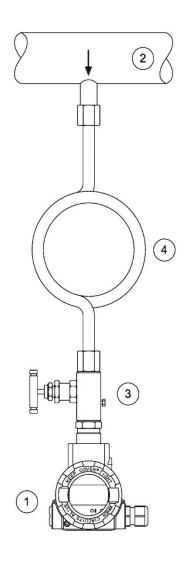

- 1. APC-2000ALW Exd, Exi/Exd.
- 2. Pipeline.
- 3. Pressure gauge valve.
- 4. Loop water-seal tube.

Figure 15. Steam pressure measurement system on horizontal pipeline using APC-2000ALW Exd, Exi/Exd.

# APLISENS<sup>®</sup>

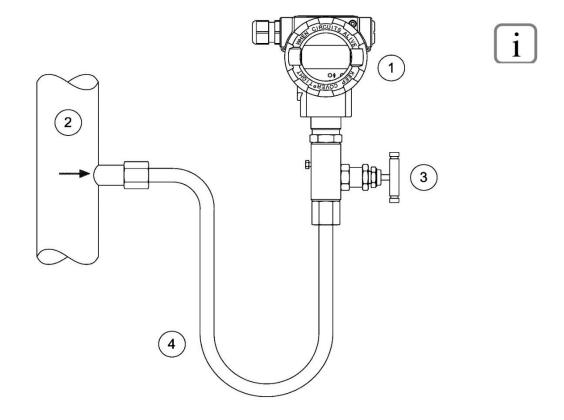

- 1. APC-2000ALW Exd, Exi/Exd.
- 2. Pipeline.
- 3. Pressure gauge valve.
- 4. Water-seal tube.

Figure 16. Steam pressure measurement system on vertical pipeline using APC-2000ALW Exd, Exi/Exd.




## 2.6. Differential pressure measurement

Transmitter APR-2000ALW Exd, Exi/Exd makes it possible to measure differential pressure at high static pressures. A range of valve manifolds with separators and a large number of standard process ranges of the measured differential pressures are available. The transmitter configuration also allows for differential pressure presentation in many physical units ( $\rightarrow$  13.2.2) or the user's own units ( $\rightarrow$  13.2.6).

#### 2.6.1. Gas and steam differential pressure measurement system

Transmitter APR-2000ALW Exd, Exi/Exd must be installed above the measuring point so that the condensate can flow through impulse tubes into the process pipes.

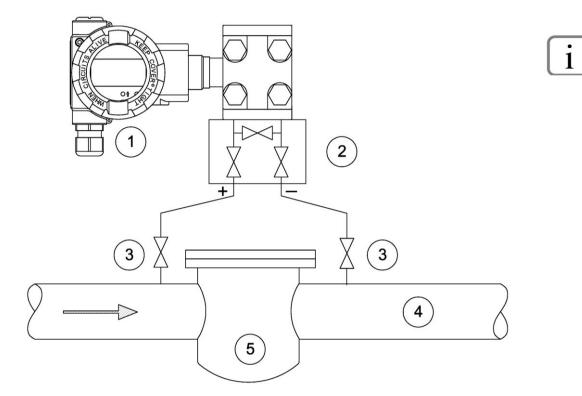


- 1. APR-2000ALW Exd, Exi/Exd.
- 2. Three-way valve.
- 3. Shut-off valves.
- 4. Pipeline.
- 5. Filter or other element.

Figure 17. Gas and steam differential pressure measurement system using APR-2000ALW Exd, Exi/Exd.

#### 2.6.2. Liquid differential pressure measurement system

Transmitter APR-2000ALW Exd, Exi/Exd must be mounted below the measuring point so that the impulse tubes are always filled with liquid and the gas bubbles can freely escape to the process pipe.

If the measured medium contains particles, it is useful to install separators and drain valves to remove deposits.

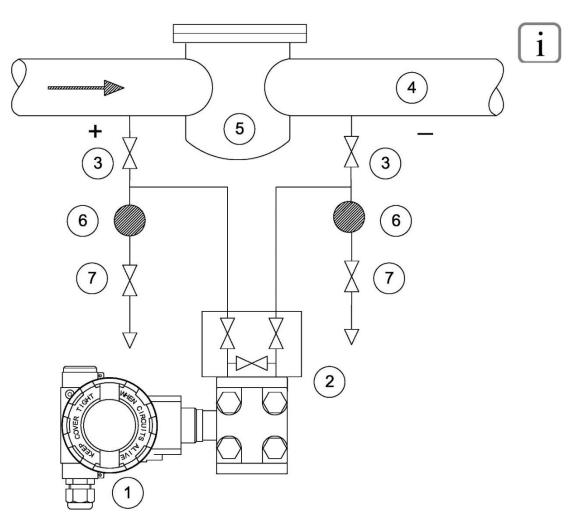


- 1. APR-2000ALW Exd, Exi/Exd.
- 2. Three-way valve.
- 3. Shut-off valves.
- 4. Pipeline.
- 5. Filter or other element.
- 6. Solids separators.
- 7. Drain valves.

Figure 18. Liquid differential pressure measurement system using APR-2000ALW Exd, Exi/Exd.

#### 2.6.3. Gas, steam and liquid differential pressure measurement system with the use of distance separators

The separators must be mounted on the top or side of the pipeline.

For vacuum measurements, transmitter APR-2000ALW Exd, Exi/Exd must be installed below the measuring point. Approximate ambient temperature in both capillaries connecting the transmitter with separators must be ensured.

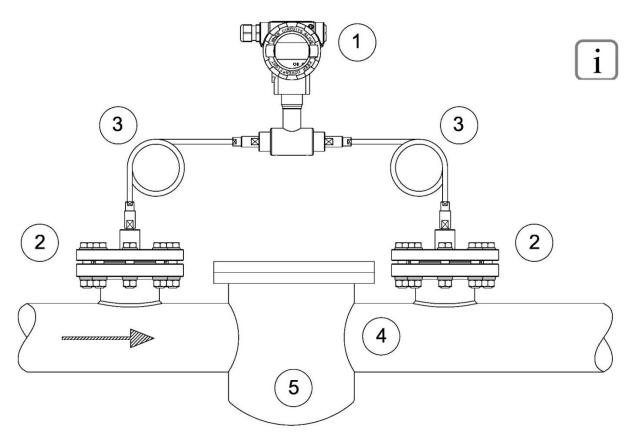

- 1. APR-2000ALW Exd, Exi/Exd with diaphragm seals.
- 2. Separators.
- 3. Capillary tubes.
- 4. Pipeline.
- 5. Filter or other element.

Figure 19. Gas, steam and liquid differential pressure measurement system using APR-2000ALW Exd, Exi/Exd with distance separators.

# 3. Characteristics of process measurement input

## 3.1. Measurement process variables

The basic input variable of the measuring process is pressure or differential pressure (PV). They are used to measure derivative values such as level (liquid column, volume, weight) or flow. Additionally, further process variables related to temperature are measured. These are:

- temperature of the pressure measuring module in the measuring head (SV);
- temperature of the structure of an ADC analog-digital transmitter used to perform pressure measurements (TV);
- temperature of the main microcontroller CPU (FV).

Temperature measurement process variables are used to adjust the temperature impact on the transmitter measuring elements to ensure high measurement accuracy. Process variables can be read out through Raport 2, Aplisens Mobile Configurator or other software using DD or DTM library – example below.

Current and four dynamic variables				
Current	3,96	mA		
PoR	-0,28	%		
PV	3,684	kРа		
SV	3,089	°C		
τv	14,046	°C		
FV	20,155	°C		
Continuous reading				
Separate window				

Figure 20. Example of process variables read-out window in Raport 2.

## 3.2. Measurement input diagnostics

The input measurement circuits are subject to continuous diagnostics, providing the CPU with data on the correctness of the measurement process. The monitoring covers, inter alia, the sensor measuring bridge, ADC transmitter, EEPROM of sensor parameters, sensor power supply systems, connections between sensor components, digital data transfer via sensor galvanic insulation barrier. The detected failures are analysed by the software and in the event of a threat to the safety function, the current output is set to alarm mode ( $\rightarrow$  4.8), ( $\rightarrow$  4.9).

## 4. Characteristics of process measurement output

## 4.1. Basic unit and user's unit

The transmitter allows for setting one of many available physical units of pressure, level or force ( $\rightarrow$  13.2.2). After changing the physical unit, the conversion to a newly selected unit occurs automatically. Using HART communication, the user can configure his/her own 6-character description of the unit displayed on LCD3 ( $\rightarrow$  13.2.6). It is possible to display ASCII characters from the range (32...96 dec) or (20 ... 60 hex), i.e.: !"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMNOPQRSTUVWXYZ[\]^\_`

Lowercase letters are exchanged automatically to uppercase ones; other unsupported characters are displayed as \*.

When a user-defined unit is used, it is required to enter its name and scaling parameters. The scaling of the user's unit involves entry of a digital value for 0% setpoint of the set range width and 100% setpoint of set range width. The user's unit is used to visualize the value displayed on LCD and does not affect the process variable of the measurement expressed in the basic unit and the process value of the current setpoint in the current loop.

LCD parameters			
Local operation	Enabled	•	
Display	Installed	•	
LCD 1 display variable	Current	•	
LCD 2 display variable	Primary process variable	•	Display unit
User lower range	0,00		
User upper range	0,00		
User unit			
Display decimal point	XXX.XX	•	
Meter display mode			
Inversion	Reverse	-	
Rotation	Rotation	~	
Test LCD	Normal mode	T	
LCD bias ratio	LCD bias ratio 1/5	-	
Constrast		1	
	Read par	ameters	Write parameters

Figure 21. Exemplary settings of the start of range, end of range and user's unit name in Raport 2.



## 4.2. Set range

The set range refers to the setpoints of the process current output. The setpoint of the process output can be presented in percent or in milliamperes. The LRV point of the set range corresponds to the current of 4.000 mA, whereas the URV point corresponds to the current of 20.000 mA. The LRV and URV points can be assigned to different pressures from the transmitter's base range while maintaining the condition for minimum range width of the set MSV. The reversal characteristics can also be set where the LRV point is assigned to the pressure higher than the URV point, while maintaining the minimum MSV set range width.

The figure below shows the transmitter set range and limits related to the permissible set range, digital processing range and saturation limits of ADC pressure measurement transmitter. As standard, values of 4 mA/20 mA currents are assigned to LRV/URV points. In order to obtain reverse characteristics, it is possible to reverse the assignment so that the LRV/URV points are assigned to 20 mA/4 mA currents.

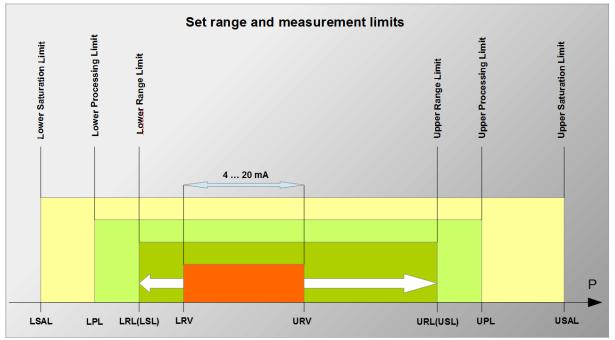


Figure 22. Set range and measurement limits.

## 4.3. Digital damping time constant

The transmitter allows for adjusting the damping of the measurement process value. The standardized measurement process variable can be suppressed by a digital inertial element of the first order for time constant parameterised in the range of  $\tau = 0$  ... 30 s. Entry of a parameter in a floating-point format is available via software using HART communication ( $\rightarrow$  6), e.g. Raport 2 by Aplisens S.A. It is also possible to set in the local MENU ( $\rightarrow$  13.2.11) one of the six predefined fixed damping time constants  $\tau = 0, 2, 5, 10, 30, 60$  s. The pressure process variable subjected to damping in the inerting unit is:


- converted to the selected unit and presented on the display ( $\rightarrow$  13.2.1) or available for reading via HART communication ( $\rightarrow$  13.1);
- converted according to the set range and presented as output setpoint percentage (0... 100%) or output current setpoint (4 ... 20 mA).

## 4.4. Linear characteristics transfer functions

In some applications it is recommended to convert the linear process variable of the output control setpoint with a specific function. The following mathematical control signal transformation functions are available:

- linear, i.e. no transformation;
- second-stage root characteristics with relay characteristics and 0.2% hysteresis of the setpoint value in the dead band;
- manufacturer's dual linear characteristics No 1 + second-stage root characteristics for constant dead band = 0.6% of setpoint value;
- manufacturer's single linear characteristics No 2 + second-stage root characteristics and 0.2% hysteresis of the setpoint value in the dead band;
- square characteristics;
- special multi-point linearization based on user-modified table.

In addition to the linear characteristics used in the measurements of level, force, pressure and differential pressure, the root characteristics is often used for flow measurements. Therefore, transmitter APC(R)-2000ALW Exd, Exi/Exd allows the user to select 3 types of root characteristics as described below.

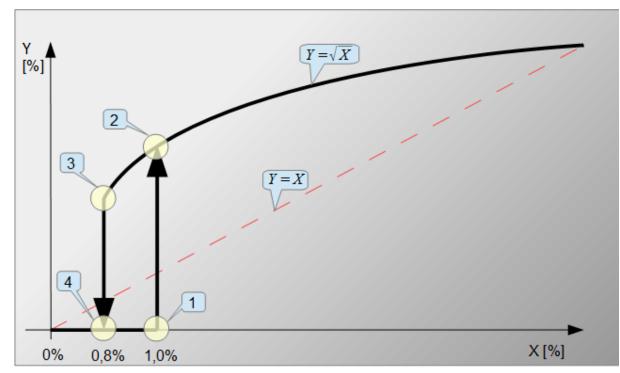

#### 4.5. Basic root characteristics

Figure 23. Root characteristics with adjustable dead band.

"Relay" characteristics below the dead band. The figure shows exemplary values for the set dead band of 1%. (1) – (2) In the case of pressure/flow increase in point [1]–[2], the hysteresis of 0.2% is activated and function Y = 0 is converted to root function Y =  $\sqrt{X}$ . The pressure measured above point [3] will be converted to the root function.

(3) - (4) In the case of pressure/flow drop in point [3]–[4], root function Y= $\sqrt{X}$  is converted to function Y=0. The pressure below point [1] will be converted to Y= 0. The dead band of the root characteristics is configurable in the full range of 0-100% using HART communication or in a limited range of pre-defined values using the local MENU. In on-site applications the values are typically set to approx. 1% of the output setpoint.

## 4.6. Manufacturer's root characteristics 1

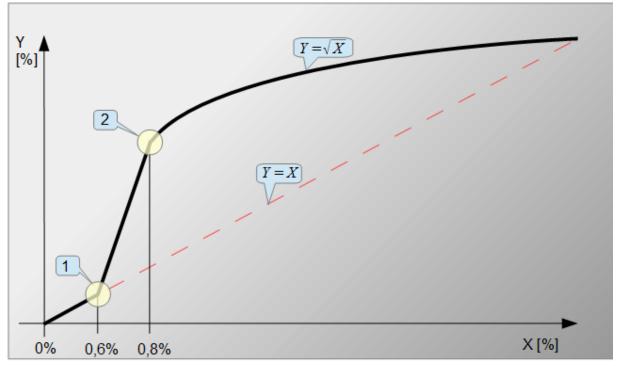


Figure 24. The manufacturer's root characteristics 1 with fixed points of the characteristic change at points 0.6% and 0.8%.

(1) – Point [1] of the 0.6% setpoint of the X output (4.096 mA on linear characteristic) in which linear function Y = X is converted to linear function with a larger slope Y = Xn.

(2) – In point [2] of the 0.8% setpoint of the X output (4.128 mA on linear characteristics), linear function Y= Xn is converted to root function  $\sqrt{X}$ . Unlike the base root characteristics, this characteristics allows for monitoring of small flows below the dead band, e.g. when the valve closes or is unscrewed. The "stroke" effect of the measurement at the limit of the function concatenation is also significantly smaller. The values of concatenation points are fixed and cannot be modified.

## 4.7. Manufacturer's root characteristics 2

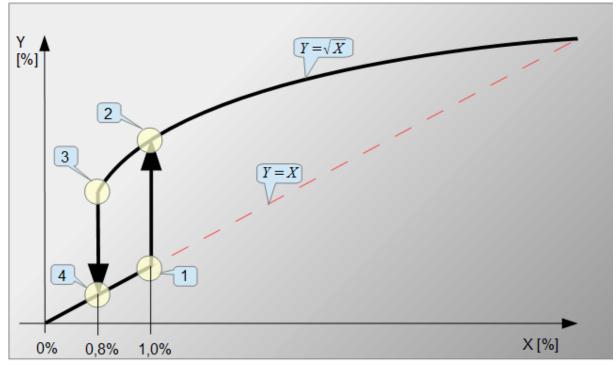


Figure 25. Manufacturer's root characteristics 2 with adjustable dead band and hysteresis 0.2%.

The figure shows exemplary values for the set dead band of 1%.

(1) – (2) In the case of pressure/flow increase in point [1]–[2], the hysteresis of 0.2% is activated and linear function Y = X is converted to root function  $\sqrt{X}$ . The pressure measured above point [1]-[2] will be converted to the root function.

(3) - (4) In the case of pressure/flow drop in point [3]–[4], root function Y= $\sqrt{X}$  is converted to linear function Y=X. The pressure below point [3]-[4] will be converted to linear function. The dead band of the root characteristics can be configured in a limited range of pre-defined values using the local MENU or in the full range of 0-100% using HART communications. In on-site applications the values are typically set to approx. 1% of the output setpoint. Unlike the base root characteristics, this characteristics allows for monitoring of small flows, e.g. when the value closes or is unscrewed, simultaneously reducing the "ringing" of the input signal on the limits when the linear function concatenates with the root function.





Raport 2.0				
File Converter Settin	ngs Help			
Q, 🛃 🔶 📋				
1 Identification	Common-Practice commands			
:00000:	Unit	kPa 🔻		
Description	Transfer function	Square root function 🔹	Start point rad 1 %	
Process variables	Lower sensor limit	-1,00	kPa	
Common parameters	Upper sensor limit	101,00	kPa	
Ŷ	Minimum span	6,00	kPa	
Basic commands	Lower range value	0,21	kPa	
Specific parameters	Upper range value	11,21	kPa	
	Damping value	0	S	
281 LCD				J
Linearisation		F	Read parameters Write parameters	

Figure 26. Example of a tab in Raport 2, in which the type of processing characteristics and the dead band of the root characteristics are configured.

## 4.8. Output signal 4 ... 20 mA HART

 Transmitter APC(R)-2000ALW Exd, Exi/Exd provides a process variable of the measurement referenced to the set range of pressure via the value of current in current loop 4 ... 20 mA. For practical reasons, the transmitter's current controller lower saturation point is below the 0% setpoint and is -0.64% (3.900 mA) for the NORMAL mode and -1.25% (3.800 mA) for the NAMUR mode. For the same reasons, the upper saturation point of the setpoint is 103.13% (20.500 mA).

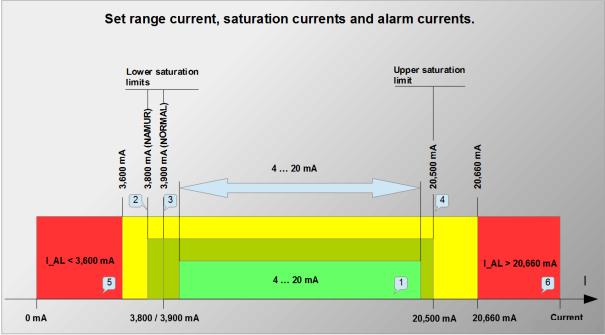



- 1 Area of current set to 4 ... 20 mA corresponding to the 0 ... 100% setpoint of the process output.
- (2) Lower saturation current of 3.800 mA for NAMUR mode.
- ③ Lower saturation current of 3.900 mA for NORMAL mode.
- (4) Upper saturation current of 20.500 mA for NAMUR and NORMAL mode.

- (5) Alarm current area I\_AL < 3.600 mA for internal diagnostic alarms or alarms related to safe failures with external diagnostics.
- (6) Alarm current area I\_AL > 20.660 mA for alarms related to safe failures with external diagnostics.

The measurement process variable expressed in the basic unit of pressure, force or level is also available via HART communication using a current loop as a physical layer. Digital HART communication is based on FSK modulation of BELL202 type with frequencies of 2200 Hz and 1200 Hz respectively for "0" and "1". Transmitter APC(R)-2000ALW Exd, Exi/Exd has an implemented communication stack with an application layer consistent with HART 5.1 and HART 7 ( $\rightarrow$  13.1).

## 4.9. Alarm signal levels

Below lower saturation thresholds, there is an alarm current setting area covering the range < 3.600 mA. Due to the specification of Exd, Exi / Exd converters, the FMEDA calculation has adopted a closed safe error related to controlling the output exceeding E =  $\pm$  1%. For this reason, the transducer sets the current at the current output in the active diagnostic alarm mode: For this reason, the transducer sets the current at the current output in the active diagnostic alarm mode:

I\_AL= 3,600 - 
$$\frac{E[\%]}{100[\%]}$$
 \* 16 [mA]

The diagnostic alarm current is therefore nominally 3.440 mA. In addition to the diagnostic alarm supported by the transmitter current controller, there is also a critical diagnostic alarm. This is an alarm mode supported by an additional independent watchdog system. It is triggered in the following cases:

- error of floating-point mathematical calculations;
- error in RAM dynamic memory;
- error in the coefficient memory or FLASH memory;
- error in main CPU logs;
- inconsistency of 8 successive values of the current setpoint with the measured current value in the current loop;
- disturbance of the programme automatic system resulting in exceeding the watchdog refresh time window of the critical alarm mode WDT\_SIL.

The critical alarm mode is used due to the need of immediate disconnection of the transmitter from the current loop (associated process current drop below the alarm threshold). The specified causes of the errors are critical due to the inability to guarantee in such conditions the correct course of numerical calculations and consequently the reliability of the output process variable.

# Occurrence of a critical alarm usually indicates a serious damage to the transmitter and the necessity to repair it at the manufacturer's plant.

However, there are two exceptions.

The first one is too low power voltage inconsistent with the technical conditions, causing shortage of supply voltage on the transmitter terminals when the output current is high.

The other one is a very high excessive interruption level in the current loop line supplying the transmitter. Excessive interference may destabilize the operation of the transducer systems responsible for the control measurement of current flowing in the current loop. The difference between the value of the set current for the controller and the measured value, which lasts for a longer period of time may also cause the critical alarm to be set. In the case of a critical alarm, the transmitter display goes out, and the alarm current is much less than 3.440 mA and it is approximately 0.300 mA.

APC(R)-2000ALW Exd, Exi/Exd. Types of diagnostic alarms with comment				
Alarm type	Alarm current [mA]	Comment		
Diagnostic alarm	< 3,600 mA	Nominal alarm current = 3.440 mA. This is an alarm cur- rent caused by non-critical events or failures in terms of the process and operation of the transmitter. In case of a hazardous event the transmitter internal diagnostics always applies alarm current < 3.600 mA.		
Critical alarm	<< 3,600	The rated alarm current is 0.2 0.3 mA. This is an alarm current caused by critical events or failures in terms of the process and operation of the transmitter. The critical alarm latches its condition, which means that it is neces- sary to disconnect power supply from the transmitter and then to reconnect it in order to restore the transmitter to operation.		
Alarm of dan- gerous defects with external diagnostics	>20,660 mA	The internal diagnostics does not use alarm current > 20.660 mA (this is the maximum value of the current setpoint increased by a maximum safe error 1%). This current may, however, appear in the current loop in the case of occurrence of the so-called dangerous failure, i.e. the failure which results in the increase of current in the current loop above 20.660 mA without the participation of the transmitter internal diagnostics. If the supporting PLC is configured to detect a dangerous condition for currents above 20.660 mA, such errors may be detected as diag- nosable. Some of the dangerous failures that are not diag- nosed by internal diagnostics also result in the current value < 3.600 mA.		

Table 7. Types of diagnostic alarms with comment.

## 4.10. Loading of current loop 4 ... 20 mA with serial resistance

The power line resistance, power source resistance and other additional serial resistances increase the voltage drops between the power source and the transmitter terminals. The maximum transmitter current under normal operation conditions is defined as:  $I_max = 20.500 \text{ mA} + \text{E}$ 

where E is a permissible safe error which is  $\pm$  0.160 mA. The maximum resistance value in the power circuit (along with the power cables resistance) is defined by the formula:

$$R_{L_{MAX}} [\Omega] \le \frac{(U - U_{min})[V]}{0,02066 [A]}$$

where:

U – voltage of 4 ... 20 mA current loop power supply unit in [V];

U<sub>min</sub> – minimum power supply voltage;

 $R_{L\_MAX}$  – maximum power supply line resistance in [ $\Omega$ ].

The above formula may be used to describe the indicative dependency of the maximum load resistance on the power supply voltage. Figure 29 show maximum load resistance for Exi/Exd version without backlight.

The values of power supply voltages is defined in **Table 6**.

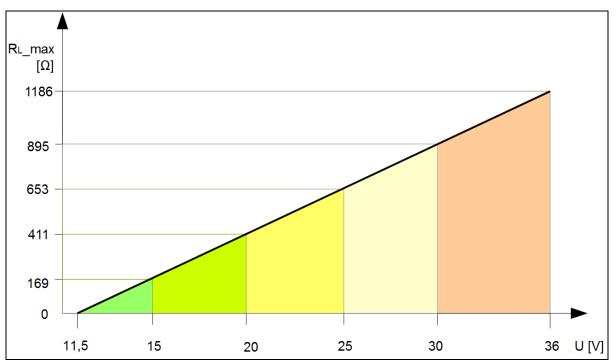


Figure 28. The maximum load resistance  $R_{L_{MAX}}[\Omega]$  in the supply line of transmitter in Exi/Exd version without backlight depending on the power supply voltage U [V].

HART local communication jumper (→ Figure 30) mounted.

In applications where the supply voltage is lower than the nominal supply voltage (24 V DC), it is necessary to pay particular attention to the voltage drop on the resistance incorporated in series into the power supply line in order to use the local HART communication ( $\rightarrow$  Figure 30). After removing the jumper mounted on the electrical connection terminals, the resistor 240 [ $\Omega$ ] shunted by the jumper, integrated with the transmitter is switched in series to the current line, causing additional voltage drop. It can be up to approx. 5 V DC, increasing the minimum supply voltage by this value. After performing configuration or local HART read-outs, it is recommended to reassemble the jumper ( $\rightarrow$  Figure 30).

## 4.11. Current controller resolution 4 ... 20 mA

The current controller used to control the output current of the transmitter operates on the basis of a 16-bit DAC digital-analog transmitter. Effective controller current resolution is approximately 1.0  $\mu$ A ( $\rightarrow$  8.3).

## 4.12. Dynamic parameters of digital measurement

In the full measurement cycle the transmitter performs the measurements of basic input pressure values and temperatures and measurements of additional diagnostics-related variables. The full measurement cycle related to the refreshing of the process output with a successive value lasts 330 ms (3 measurement cycles per second).

## 4.13. Dynamic parameters of current output

The process current output is refreshed every 330 ms. Time constant  $\tau$  of analog output path damping entered by the hardware low-pass filter is approx. 66 ms.

## 4.14. Process measurement output diagnostics

The transmitter diagnostic systems control the process variable of the current measurement output for compliance with the calculated current set value. If the measured value of current in the current loop is different by more than 1% of the set range (160  $\mu$ A) than the set value, the transmitter diagnostics will activate alarm I\_AL < 3.600 mA. If the alarm current is also affected by the error greater than 1% of the set range (160  $\mu$ A), the diagnostic system will activate the critical alarm by enabling an additional protection module WDT\_SIL. In this case the alarm current will be lower than 0.300 mA. The critical alarm will last until the power supply is disconnected and then reconnected to the transmitter. For more information on diagnostic alarms, see ( $\Rightarrow$  4.9).

## 5. Software version of the main microcontroller CPU

APC(R)-2000ALW Exd, Exi/Exd. Software version of the main microcontroller CPU				
Major/minor version number Date of entry		Comments		
2/3 MPC5-CPU_0x77_203.hex	11-2019	First version of the software		

Table 8. Software version of the main microcontroller CPU.

# 6. HART – specific data related to the protocol application layer

Universal commands and general-purpose commands are implemented in the transmitter according to the requirements of HART standard rev. 5.1 and HART 7. The manufacturer's specific commands meet the requirements of the HART standard, but have a structure not described in the standard. Data with the structure of the manufacturer's specific commands are not available in this documentation. However, they may be made available in specific cases. The following commands and associated parameters and methods are available:

APC(R)-200	APC(R)-2000ALW Exd, Exi/Exd. Specific data related to the HART rev.5.1 protocol application layer				
HART	Tures	Function			
Command No	Туре	Function			
Universal comm	ands				
0	READ	Read unique identifier			
1	READ	Read primary variable			
2	READ	Read current and percent of range			
3	READ	Read current and four dynamics variables			
6	WRITE	Write pooling address			
11	READ	Read unique identifier associated with TAG			
12	READ	Read message			
13	READ	Read TAG, DESCRIPTOR, DATE			
14	READ	Read PV sensor information			
15	READ	Read output information			
16	READ	Read final Assembly Number			
17	WRITE	Write message			
18	WRITE	Write tag, descriptor, date			
19	WRITE	Write final assembly number			
General-purpose	e commands				
34	WRITE	Write PV damping value			
35	WRITE	Write PV unit code and upper and lower range values			
36	WRITE	Set PV upper range value URV by PV value			
37	WRITE	Set PV lower range value LRV by PV value			
38	WRITE	Reset "configuration changed" flag			
40	WRITE	Enter/exit PV current mode			
42	WRITE	Perform master reset			
43	WRITE	Set PV zero			
44	WRITE	Write PV unit			



45	WRITE	Trim PV current DAC zero	
46	WRITE	Trim PV current DAC gain	
47	WRITE	Write PV transfer function	
48	READ	Read additional transmitter status	
59	WRITE	Set numbers of response preambles	
Manufactu	irer's specific command	ls	
128	READ	Read static data materials	
129	READ	Read device variable trim points	
130	WRITE	Trim upper sensor calibration	
131	WRITE	Trim lower sensor calibration	
132	WRITE	LCD1 variable, LCD2 variable, decimal points, LCD operation, key- boards operation – set local control modes	
133	READ	Read local control modes	
135	WRITE	Write user's characteristic coefficients	
136	READ	Read user's characteristic coefficients	
138	WRITE	Return to factory settings	
141	WRITE	Write Analog Input function block configurations	
142	READ	Read Analog Input function block configurations	
230	READ	Read CPU, Master, Slave, HART firmware revision	
231	READ	Read product codes	
233	READ	Read separator codes	
235	READ	Read manifold codes	
237	READ	Read operational limits	
240	WRITE	Write long TAG	
241	READ	Read long TAG	
242	WRITE	Write sqrt start point coefficient	
243	READ	Read sqrt start point coefficient	
244	WRITE	Write User's unit name and rearrange coefficients	
245	READ	Read User's unit name and rearrange coefficients	
246	WRITE	Write customer's security code	
247	WRITE	Set write protect code	

Table 9. Specific data related to the HART application layer HART rev.5.1.

APC(R)-2000	APC(R)-2000ALW Exd, Exi/Exd. Specific data related to the HART rev.7 protocol application layer				
HART Com- mand No	Туре	Function			
Universal comm	ands				
0	READ	Read unique identifier			
1	READ	Read primary variable			
2	READ	Read current and percent of range			
3	READ	Read current and four dynamics variables			
6	WRITE	Write pooling address			
7	WRITE	Read Loop Configuration			
8	READ	Read Dynamic Variable Classifications			
9	READ	Read Device Variables with Status			
11	READ	Read unique identifier associated with TAG			
12	READ	Read message			
13	READ	Read TAG, DESCRIPTOR, DATE			
14	READ	Read PV sensor information			
15	READ	Read output information			
16	READ	Read final Assembly Number			
17	WRITE	Write message			
18	WRITE	Write tag, descriptor, date			



19	WRITE	Write final assembly number	
20	READ	Read Long Tag	
21	READ	Read Unique Identifier Associated With Long Tag	
22	WRITE	Write Long Tag	
38	WRITE		
		Reset Configuration Changed Flag	
48	READ	Read Additional Device Status	
General-purpos			
31	READ/WRITE	Extended Command Numbers	
34	WRITE	Write Primary Variable Damping Value	
35	WRITE	Write Primary Variable Range Values	
36	WRITE	Set Primary Variable Upper Range Value	
37	WRITE	Set Primary Variable Lower Range Value	
38	WRITE	Reset Configuration Changed Flag	
40	WRITE	Enter/Exit Fixed Current Mode	
42	WRITE	Perform Device Reset	
43	WRITE	Set Primary Variable Zero	
44	WRITE	Write Primary Variable Units	
45	WRITE	Trim Loop Current Zero	
46	WRITE	Trim Loop Current Gain	
47	WRITE	Write Primary Variable Transfer Function	
50	READ	Read Dynamic Variable Assignments	
54	READ	Read Device Variable Information	
59	WRITE	Write Number Of Response Preambles	
80	READ	Read Device Variable Trim Points	
81	READ	Read Device Variable Trim Guidelines	
82	WRITE	Write Device Variable Trim Point	
83	WRITE	Reset Device Variable Trim	
1280	READ	Read Pressure Status	
1281	READ	Read Capabilities	
1282	READ	Read Supported Status Mask	
1283	READ	Read Pressure Sensor Information	
1284	READ	Read Process Connection	
1285	READ	Read Associated Device Variables	
Manufacturer's	specific commands		
128	READ	Read static data materials	
129	READ	Read device variable trim points	
130	WRITE	Trim upper sensor calibration	
131	WRITE	Trim lower sensor calibration	
132	WRITE	LCD1 variable, LCD2 variable, decimal points, LCD operation, key-	
		boards operation - set local control modes	
133	READ	Read local control modes	
134	WRITE	Write HART5/HART7 mode	
135	WRITE	Write user's characteristic coefficients	
136	READ	Read user's characteristic coefficients	
138	WRITE	Return to factory settings	
141	WRITE	Write Analog Input function block configurations	
142	READ	Read Analog Input function block configurations	
230	READ	Read CPU, Master, Slave, HART firmware revision	
231	READ	Read product codes	
233	READ	Read separator codes	
235	READ	Read manifold codes	
237	READ	Read operational limits	
240	WRITE	Write long TAG	
241	READ	Read long TAG	



242	WRITE	Write sqrt start point coefficient
243	READ	Read sqrt start point coefficient
244	WRITE	Write User's unit name and rearrange coefficients
245	READ	Read User's unit name and rearrange coefficients
246	WRITE	Write customer's security code
247	WRITE	Set write protect code


Table 10. Specific data related to the HART application layer HART rev.7.

# 7. Power supply

## 7.1. Cabling specification

Aplisens S.A. recommends using two-wire screened twisted pair cable. The recommended external diameter of the cable for the glands sold with the product is from 5 to 10 mm. In the case of using glands purchased by the customer, the outer diameter of the conductor shall be selected according to the gland specifications so as to ensure tightness of the cable gland.

## 7.2. Electric connection terminals functions

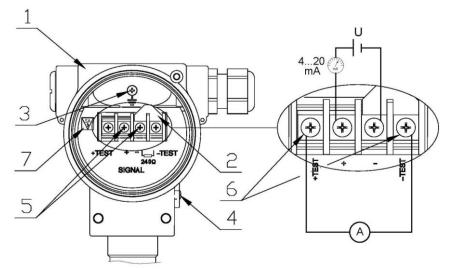

- Figure 29. APC(R)-2000ALW Exd, Exi/Exd. Electrical connection compartment, electrical terminals and their functions.
  - 1 Housing.
  - 2 Local HART communication jumper.
  - 3 Internal ground terminal.
  - 4 External ground terminal.
  - 5 Transmitter power terminals, current loop 4 ... 20 mA.
  - 6 Ammeter connection terminals for uninterruptible current measurement.
  - 7 Designation SA variant with integrated overvoltage protection.



Internal electrical switching terminals are suitable for conductors with the cross-section from 0.5 to 2.5 mm<sup>2</sup>. The internal and external electrical ground terminal of the body is suitable for conductors with cross-section from 0.5 to 5 mm<sup>2</sup>.

## 7.3. Electrical connection of power supply



Warning!

Power cables may be live!

There is a risk of electric shock and/or explosion!

- When using the transmitter in explosion-risk atmospheres, the system must comply with local national standards and regulations, with intrinsic safety instructions and installation drawings.
- All explosion protection data is given in separate documentation which is available on request
   (→ 16.2). The Ex documentation is typically supplied with all transmitters approved for use in explosion-risk atmospheres.

Power supply from cable line 4 ... 20 mA should be connected to terminals [SIGNAL +] and [SIGNAL -] according to the figure ( $\rightarrow$  Figure 29).

## 7.4. Shielding, equipotential bonding

Optimal protection against interference is provided by the earthing of the screen on both sides (in the cabinet and equipment). In case of potential difference between earthing points of devices which may result in the flow of equipotential currents, the screen shall be earthed on one side – preferably at the transmitter. When used in potentially explosive environments, the applicable regulations must be observed. Separate Ex documentation with additional technical data and instructions is attached to all Ex transmitters.

## 7.5. Electrical connection of uninterruptible current measurement in the current loop

The transmitter enables uninterruptible current measurement in the current loop using a milliammeter. In order to maintain the measurement error  $\leq 0.05\%$ , the internal resistance of the milliammeter shall be  $\leq 10 \Omega$ . The milliammeter must be connected to terminals **[+ Test]** and **[- Test]**. The milliammeter connection diagram is shown in Figure ( $\rightarrow$  Figure 29).

## 7.6. Electrical connection of local and remote HART communication

#### 7.6.1. Connection of transmitter with the option of using local HART communication.

Transmitter APC(R)-2000ALW Exd, Exi/Exd allows to use the local HART communication. To do this you can use a HART communicator unit or modem interoperating with a computer or a smartphone.

In order to establish the local communication, it is necessary to:

- unscrew the transmitter's electrical connection cover;
- remove HART communication jumper (2);
- connect the communicator or modem to terminals and carry out the planned operations;
- after completing the communication, install the HART communication jumper (2) on the correct position according to (→ Figure 30);
- close the cover of the transmitter electrical connection, paying attention to its correct tightening.

#### Please note!

Opening of the HART jumper results in applying resistance of 240  $\Omega$  in series in line 4 ... 20 mA. This resistance reduces voltage on transmitter supply terminals by approximately 5 V DC for the maximum current, which can be set by the transmitter. Therefore, when the jumper is removed, the minimum power supply voltage increases by 5,3 VDC. When using power supplies with supply voltages below 17 V DC, to avoid the supply voltage deficit on the transmitter terminals during operation, the HART jumper must be dismantled only for the time of performing the HART local communication. Connection diagram of the communicator or modem to energized transmitter APC(R)-2000ALW Exd, Exi/Exd is shown in the figure below.



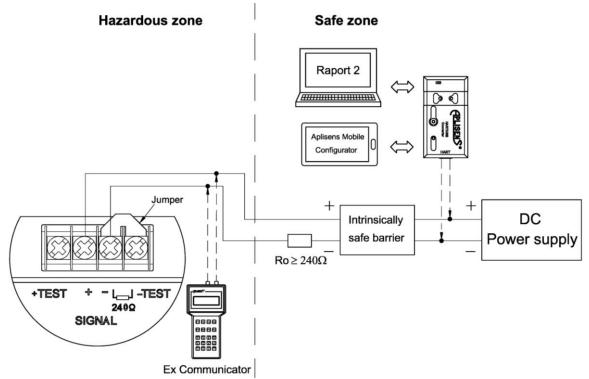


Figure 30. Electrical connection 4...20 mA of HART to transmitter in Exi version

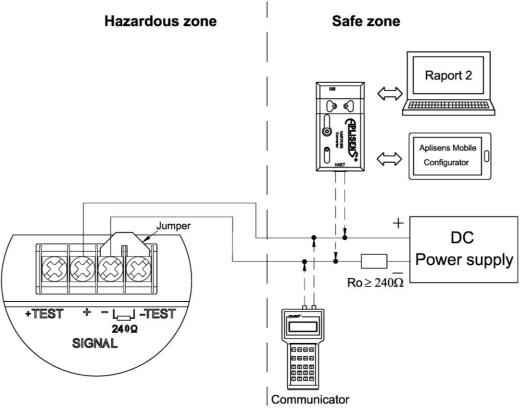


Figure 31. Electrical connection 4...20 mA of HART to transmitter in Exd version.



It is mandatory to read EN.IX.APC.APR.ALW Explosion-proof Device User Manual, containing important information related to the installation of flameproof versions of the transmitter.

#### 7.6.2. Connection of transmitter with the option of using remote HART communication

For remote communication, where the connection point of Master HART is not local as for the transmitter, it is necessary to ensure the resistance of  $\geq$  240  $\Omega$  between the power supply and the communicator/modem connection point. In the case when the transmitter is supplied from smart cards of measuring systems equipped with HART communication, such resistance is usually not required. Its function is fulfilled by the active impedance on the system measurement card provided with HART communications module. In case of measurement cards with HART communication, the manufacturer's recommendations shall be adhered to.

## 7.7. Overvoltage protections (optional)

Transmitters comply with EMC standards for safety-related products used in general industrial environment. Transmitters in flameproof version are fitted with overvoltage protection. In intrinsically safe transmitters, in order to increase the resistance to excessive surge, it is possible to use the overvoltage protection **SA** version. Transmitters with integrated overvoltage protection **SA** should be grounded.

Overvoltage protection parameters in transmitters in Exd or Exi/Exd SA versions:

- discharge threshold voltage: 230 V DC;
- discharge threshold impulse voltage: 450 V (pulse 100 V/µs);
- discharge threshold impulse voltage: 600 V (pulse 1000 V/μs);
- discharge current for 1 surge: 20 kA, 8/20 μs;
- discharge current for 10 surges: 10 kA, 8/20 μs;
- discharge current for 300 surges: 200 A, 10/1000 μs.

Transmitter APC(R)-2000ALW Exd, Exi/Exd has an internal and external earthing terminal. The method of earthing and the type of conductors used are defined by local regulations.

## 7.8. Supply voltages



APC(R)-2000ALW Exd, Exi/Exd. Minimum and maximum supply voltage					
Electronics version	Minimum supply voltage	Maximum supply voltage			
4 20 mA HART, Exd version *	10.5 V DC	55 V DC			
4 20 mA HART, Exi/Exd	11.5 V DC	30 V DC for Exi version			
version *	11.5 V DC	55 V DC for Exd version			
* For details on intrinsically safe and flameproof version see Exi and Exd documentation					
(➔ 16.2).					

Table 11. Minimum and maximum supply voltage.

Check that for the maximum possible current setpoint (20.660 mA) the voltage on the transmitter's supply terminals complies with the requirements set out in the table and on the transmitter nameplate.

# 7.9. Impact of supply voltage on ADC transmitter (supply voltage range from minimum to maximum under reference conditions)

Any noticeable impact of voltage change within the range from the minimum to maximum on digital readings of the process variable value of the measurement was not found.

## 7.10. Impact of supply voltage on DAC transmitter

It was found that the supply voltage variation has negligible impact on the value of process current. This effect results from the flow of the shunt current of overvoltage elements used in the transmitter input power supply system. The maximum impact of the supply voltage referenced to the current range width of 16 mA does not exceed 0.0005 %/V.

## 7.11. Total impact of supply voltage on measurement (ADC + DAC)

The total impact of the supply voltage covering the impact on ADC +DAC referenced to the current range width of 16 mA does not exceed 0.0005%/V.

## 7.12. Permissible levels of ripple and differential interruptions in power supply line

Transmitter APC(R)-2000ALW Exd, Exi/Exd complies with the requirements of PN-EN 61326-1, PN-EN 61326-2-1, PN-EN 61326-2-3, PN-EN 61326-3-1 and PN-EN 61000 referenced therein.

With regard to voltages dips and failures for the I/O control connections, the standards do not determine the levels and duration of the tests. However, using the approach where loop 4 ... 20 mA is regarded as DC supply port, resistance measurements were performed.

Maximum permissible duration of supply voltage failure < 1 ms when the DS criterion is met in terms of continuous performance of the safety function.

Maximum permissible duration of voltage dip up to 40% of the rated voltage of 24 V DC on the transmitter terminals < 3 ms, when the DS criterion is met in terms of continuous performance of the safety function.

Maximum permissible duration of voltage dip up to 70% of the rated voltage of 24 V DC on the transmitter terminals < 3 ms, when the DS criterion is met in terms of continuous performance of the safety function.

A separate issue is the permissible interruption level required to ensure the correct HART communication. In order to ensure a low error rate, it is required to provide the power supply that meets the following criteria:

APC	APC(R)-2000ALW Exd, Exi/Exd. Permissible supply interruption level required for correct HART communication				
ltem No	Maximum interruption voltage	Voltage value, characteristics			
1	Maximum interruption voltage in band 0 63 Hz	138 mV RMS			
2	Maximum interruption voltage in band 63 500 Hz	138 mV 2.2 mV RMS with decrement of 40 dB/decade			
3	Maximum interruption voltage in band 500 10 kHz	2.2 mV RMS			
4	Maximum interruption voltage in band 10 kHz 3.2 MHz	2.2 mV 707 mV RMS with increment of 20 dB/decade			

Table 12. Permissible supply interruption level required for correct HART communication.

The above-mentioned conditions are illustrated in the following figure

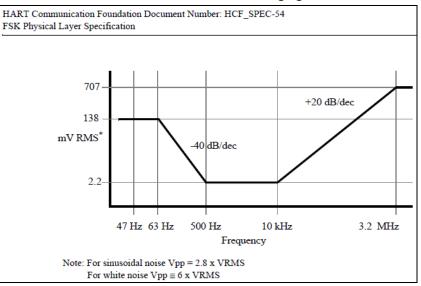


Figure 32. Requirements for the maximum interruption level in the transmitter power supply approved for correct HART communication.

## 8. Transmitter parameters related to process measurement

## 8.1. Reference climatic conditions

Constant reference temperature of 22°C (± 5)°C. Constant relative humidity in the range of: 10 ... 80% rH.

#### 8.2. Impact of mounting position on measurement

During installation of the transmitter on site it may be required to correct the effect of the position on the measurement. This impact applies to the transmitter "zero" offset, which is connected to the gravitational impact on the silicon measuring diaphragm and is greater, the lower base measurement range of the transmitter is. To perform the pressure resetting after installation, use the local MENU ( $\rightarrow$  13.2.11) and perform a **PVZERO** function in it or perform this operation using HART communication using a communicator, PC or smartphone. It should be noted that the transmitters with ABS ranges do not enable resetting operations. However, ABS ranges due to the use of higher pressure ranges are less sensitive to the impact of the mounting position.

#### 8.3. Measurement resolution

The resolution of the digital measurement value depends on the measuring range of the transmitter and is slightly different for each base range. A 24-bit ADC analog-digital transmitter is used for pressure/differential pressure measurements. Approximately 25% of the range is used out of the transmitter full range of processing voltage, which reduces the theoretical resolution to about 22 bits. Therefore, the theoretical resolution of the digital measurement is approximately 0.000024% of the base range. The effective resolution of digital measurement taking into account the stable number of measurement bits is however lower and amount to approximately 0.0015% of the base range. Since, simply speaking the entire pressure process variable processing path basically consists of a serial connection of the ADC stage and the DAC stage, the final resolution will be determined by the module with the smallest processing resolution. It is an analog-digital DAC transmitter module based on a 16-bit transmitter. The measurement resolution referenced to the process current output is therefore approx. 1.0  $\mu$ A.

APC(R)-2000ALW Exd, Exi/Exd. Pressure measurement resolution			
Type of	Measurement	Comments	
measurement	resolution	comments	
ADC	0.000024%	Refers to the total resolution of the analog-digital module for the	
ADC	ADC 0.000024%	base range.	
ADC	0.0015%	Refers to the effective resolution of the analog-digital module for the	
ADC	0.001376	base range.	
DAC	0.005% ≈1 μA	Refers to total resolution of the analog-digital and digital-analog	
DAC	0.005‰≈1 μA	module referenced to the current output.	

Table 13. Pressure measurement resolution.

## 8.4. Impact of vibration on measurement

During the tests of transmitters APC(R)-2000ALW Exd, Exi/Exd in aluminium housing ( $\rightarrow$  10.5) vibrations have slight impact on the process variable measurement. The maximum impact of vibrations was observed in resonance frequencies, the variation amplitude of the current process variable for the transmitter's base range did not exceed 0.032% of the measurement range (5  $\mu$ A). Tests were performed in 3 transducer axes in accordance with PN-EN 60068-2-6:2008 for the range of 10 Hz ... 60 Hz with displacement amplitude of ± 0.35 mm, and for a range of 60 Hz ... 1000 Hz with constant acceleration of 50 m/s<sup>2</sup>. During the tests of transmitters APC(R)-2000ALW Exd, Exi/Exd in the stainless steel housing ( $\rightarrow$  10.5) vibrations have slight impact on the process variable measurement. The maximum impact of vibrations was observed in resonance frequencies, the variation amplitude of the current process variable for the transmitter's base range did not exceed 0.032% of

the measurement range (5  $\mu$ A). The tests were performed in 3 transmitter axes in accordance with PN-EN 60068-2-6:2008 for the range 10 Hz ... 60 Hz with displacement amplitude of ± 0.15 mm, and for a range of 60 Hz ... 1000 Hz with constant acceleration of 20 m/s<sup>2</sup>.

## 8.5. Measuring ranges

#### 8.5.1. APC-2000ALW Exd, Exi/Exd

	APC-2000ALW Exd, Exi/Exd. Measuring ranges					
No.	Base range	Minimum adjusta- ble width of the measuring range	Option of changing the start of the measuring range	Permissible overload (without hysteresis)		
1	0 100 MPa	1 MPa	0 99 MPa	120 MPa		
2	0 60 MPa	600 kPa	0 59,4 MPa	120 MPa		
3	0 30 MPa **	300 kPa	0 29,7 MPa	45 MPa		
4	0 16 MPa**	160 kPa	0 15,84 MPa	45 MPa		
5	0 7 MPa **	70 kPa	0 6,93 MPa	14 MPa		
6	-0,1 7 MPa **	71 kPa	-0,1 6,929 MPa	14 MPa		
7	0 2,5 MPa **	25 kPa	0 2,475 MPa	5 MPa		
8	-0,12,5 MPa **	26 kPa	0 2,474 MPa	5 MPa		
9	0 0,7 MPa **	7 kPa	0 693 kPa	1,4 MPa		
10	-100 700 kPa**	8 kPa	0 692 kPa	1,4 MPa		
11	-100 150 kPa **	12 kPa	-100 138 kPa	400 kPa		
12	0 200 kPa **	10 kPa	0 190 kPa	400 kPa		
13	0 100 kPa **	5 kPa	0 95 kPa	200 kPa		
14	-50 50 kPa **	5 kPa	-50 45 kPa	200 kPa		
15	0 25 kPa **	2,5 kPa	0 22,5 kPa	100 kPa		
16	-10 10 kPa **	2 kPa	-10 8 kPa	100 kPa		
17	-1,5 7 kPa */**	0,5 kPa	-1,5 6,5 kPa	50 kPa		
18	-2,5 2,5 kPa * (only for HS)	0,2 kPa	-2,5 2,3 kPa	50 kPa		
19	-0,7 0,7 kPa * (only for HS)	0,1 kPa	-0,7 0,6 kPa	50 kPa		
20	0 130 kPa (ABS)	10 kPa	0 120 kPa (ABS)	200 kPa		
21	0 700 kPa (ABS)	10 kPa	0 690 kPa (ABS)	1,4 MPa		
22	0 2,5 MPa (ABS)	25 kPa	0 2,475 MPa (ABS)	5 MPa		
23	0 7 MPa (ABS)	70 kPa	0 6,93 MPa (ABS)	14 MPa		
24	0 30 MPa (ABS)	300 kPa	0 29,7 MPa (ABS)	45 MPa		
25	0 10 MPa **	100 kPa	0 9,90 MPa	45 MPa		
26	0 10 MPa (ABS)	100 kPa	0 9,90 MPa (ABS)	45 MPa		
** _	nly for transmitters without range available in standard	and HS versions.				

HS — Ultra stable measuring element.

ABS- absolute pressure

Table 14. APC-2000ALW Exd, Exi/Exd. Measuring ranges.

## 8.5.2. APR-2000ALW Exd, Exi/Exd

	APR-2000ALW Exd, Exi/Exd. Measuring ranges						
No.	Base range	Minimum ad- justable width of the measur- ing range	Option of changing the start of the measuring range	Permissible overload / Permissible static pressure.			
1	0 7 MPa	700 kPa	0 6300 kPa	C type connection:			
2	0 1,6 MPa **	160 kPa	0 1440 kPa	25 MPa			
3	0 250 kPa **	20 kPa	0 230 kPa	32 MPa – special execution			
4	0 100 kPa **	5 kPa	0 93 kPa	41,3 MPa – special execution			
5	0 25 kPa **	1 kPa	0 24 kPa				
6	-50 50 kPa */**	10 kPa	-50 40 kPa	P type connection:			
7	-10 10 kPa	0,4 kPa	-10 9,6 kPa	4 MPa			
8	-0,5 7 kPa **	0,4 kPa	-0,5 6,6 kPa	7MPa (for the first range)			
9	-2,5 2,5 kPa (only for HS)	0,2 kPa	-2,5 1,8 kPa	20 MPa 4 MPa for P type connection.			
10	-0,7 0,7 MPa (only for HS)	0,1 kPa	-0,7 0,6 kPa	2 MPa			
* – re	* – recommended for level measurement with direct separator and flooded (or empty) impulse tube.						

\*\* – range available in standard and HS versions.

Hitra stable mascuring element

HS — Ultra stable measuring element.

Table 15. APR-2000ALW Exd, Exi/Exd. Measuring ranges.

A	APR-2000ALW Exd, Exi/Exd. Measuring ranges with distance separators or with distance and direct						
	separators						
No.	Base range	Minimum ad- justable width of the measuring range	Distance between vertical separators	The maximum adjustable measuring range (taking into account actual spacing of sep., vertically	Permissible static pres- sure.		
1	-16 16 kPa	0,1m H₂O	≤ 1,7m	[1,6 + (distance between sep. vertical x 0,94)]m H <sub>2</sub> O	4 MPa		
2	-50 50 kPa	0,5m H₂O	≤ 6 m	[5 + ( distance between sep. vertical x 1,04)]m H <sub>2</sub> O	4 MPa		
3	-160 200 kPa	1,5m H₂O	≤ 15m	[20 + ( distance between sep. vertical x 1,04)]m H <sub>2</sub> O	4 MPa		
4	-1601600 kPa	100 kPa	≤ 15m	1600 kPa	4 MPa		
Diag	Please noted Presented in the table maximum spacing of vertical congrators applies to lovel measuring the						

Please note! Presented in the table maximum spacing of vertical separators applies to level measuring, the ability to reset the transmitter with an empty tank. For measuring the density or the phase boundary (sugar industry, chemical industry, refineries) spacing of vertical separators can be larger.

Table 16. APR-2000ALW Exd, Exi/Exd with diaphragm seals. Measuring ranges with distance separators or distance and direct separators.



APF	APR-2000ALW/G Exd, Exi/Exd. Measurement ranges of the version with the connection for low					
	pressure gases measurement					
No.	Base range	Minimum adjust- able width of the measuring range	Option of chang- ing the start of the measuring range	Permissible overload	Permissible static pressure.	
1	0 2500 Pa	100 Pa	0 2400 Pa	100 kPa	35 kPa	
2	-250 250 Pa	20 Pa	-250 230 Pa	35 kPa	35 kPa	
3	-700 70 Pa	100 Pa	-700 600 Pa	35 kPa	35 kPa	
4	-2500 2500 Pa	500 Pa	-2500 2000 Pa	100 kPa	100 kPa	
5	-10 10 kPa	2 kPa	-10 8 kPa	100 kPa	100 kPa	

Table 17. APR-2000ALW/G Exd, Exi/Exd. Measurement ranges of the version with the connection for low pressure gases measurement.

#### 8.6. Basic measurement error

#### 8.6.1. Basic measurement error of pressure transmitter APC(R)-2000ALW Exd, Exi/Exd

The basic measurement error of APC(R)-2000ALW Exd, Exi/Exd			
Transmitter	Declared error		
APC-2000ALW Exd, Exi/Exd	<ul> <li>- ≤ ±0,075%;</li> <li>- ≤ ±0,1% (for the range 19);</li> <li>- ≤ ±0,05 (special execution).</li> </ul>		
APR-2000ALW Exd, Exi/Exd	- ≤ ±0,075%.		

Table 18. Basic measurement error of APC(R)-2000ALW Exd, Exi/Exd.

# 8.6.2. Basic measurement error of differential pressure transmitter APR-2000ALW/G Exd, Exi/Exd with connection for low pressure gases measurement.

Basic mea	Basic measurement error of APR-2000ALW/G Exd, Exi/Exd with connection for low pressure gases					
		mea	surement			
Basic range	0 2500 Pa	-250 250 Pa	-700 700 Pa	-2500 2500 Pa	-10 10 kPa	
Basic error	≤ ±0,075%	≤ ±0,25%	≤ ±0,1%	≤ ±0,1%	≤ ±0,075%	
Basic range	0 250 Pa	-50 50 Pa	-50 50 Pa	-250 250 Pa	-1 1 kPa	
Basic error	≤ ±0,4%	≤±1,6%	≤±1,6%	≤ ±0,4%	≤ ±0,4%	

Table 19. Basic measurement error of APR-2000ALW Exd, Exi/Exd with connection for low pressure gases measurement.

## 8.7. Temperature error

Temperature error				
Transmitter	Declared error			
	- < ±0,05% (FSO)/10°C			
APC-2000ALW Exd, Exi/Exd	(0,1% for ranges: 16, 17, 18, 19);			
APC-2000ALW EXU, EXIJEXU	<ul> <li>Max ± 0,25% (FSO) entire range of compensation</li> </ul>			
	(0,4% for ranges: 16, 17, 18, 19).			
	– <±0,05% (FSO)/10°C			
APR-2000ALW Exd, Exi/Exd	(for ranges: 1, 2, 3, 4, 5, 6, 7, 8, 9);			
APR-2000ALW EXU, EXI/ EXU	- < ±0,08% (FSO)/10°C (for range 10;			
	<ul> <li>Max ±0,25% (FSO) entire range of compensation.</li> </ul>			
	- ±0,1% (FSO)/10°C;			
APR-2000ALW/G Exd, Exi/Exd	<ul> <li>Max ±0,4% (FSO) entire range</li> </ul>			
	of temperature compensation.			

Table 20. Temperature error of pressure and differential pressure transmitter.

## 8.8. Static pressure error

#### 8.8.1. Measurement error due to static pressure of differential pressure transmitter APR-2000ALW Exd, Exi/Exd

APR-2000ALW Exd, Exi/Exd. Measurement error due to static pressure				
Base range No.	Maximum declared			
(FSO)	measurement error referenced	Comments		
(F30)	to the base range			
3, 4, 5, 6, 7, 9;	<ul> <li>±0,01% (FSO) / 1 MPa</li> </ul>			
8	— ±0,03% (FSO) / 1 MPa			
1, 2	— ±0,06% (FSO) / 1 MPa			
2, 8 (HS)	— ±0,01% (FSO) / 1 MPa	Version HS		
10	— ±0,02% (FSO) / 1 MPa			
HS - Ultra stable measuring element.				

Table 21. Measurement error due to static pressure of differential pressure transmitter APR-2000ALW Exd, Exi/Exd.

#### 8.9. Total measurement error

When calculating the total measurement error, the square average of the sum of errors shall be assumed, taking into account the conditions such as the base range, set range, range of ambient temperature variations, range of static pressure variations, long-term stability. Other parameters, such as supply voltage variation or humidity, have a negligible impact on the measurement and may be omitted in calculations.

## 8.10. Long-term stability

	APC(R)-2000ALW Exd, Exi/Exd. Long-term stability			
Transmitter type.	Maximum declared measurement error referenced to the base range			
APC-2000ALW Exd, Exi/Exd	<ul> <li>for base range ≤ base error for 3 years (FSO) or</li> <li>≤ 2 x base error for 5 years (FSO);</li> <li>special execution HS ≤ (ranges 315) base error for 6 years (FSO)</li> <li>≤ 2 x base error for 10 years (FSO).</li> </ul>			
APR-2000ALW Exd, Exi/Exd	<ul> <li>for base range ≤ base error for 3 years (FSO)</li> <li>≤ 2 x base error for 5 years (FSO);</li> <li>special execution HS ≤ (ranges 2, 4, 5, 8, 9) base error for 10 years (FSO).</li> </ul>			

Table 22. Long-term stability.

## 8.11. Time from switch-on to first measurement

The start-up of the transmitter from the activation to the end of the first measurement lasts approx. 5 seconds. It is the time of performing basic programme tests and pressure and temperature measurements which constitute a complete process variable measurement chain.

## 8.12. Measurement thermal stabilization time

Thermal stabilization of the measurement is related to the determination of thermal equilibrium of measurement elements warmed with power supply energy. The transmitter is equipped with mechanisms compensating the impact of temperature on the measurement. After the transmitter is energized, the measurements performed are within the tolerance limits of the errors described in the Technical Information, but in order to perform calibration or adjustment it is recommended to stabilize the temperature conditions. If the transmitter has already been located in a stable temperature, the recommended stabilization time of the transmitter to perform these operations is approximately 15 minutes. When in the transmitter there is a significant difference between the body temperature and the ambient temperature, at which the measurement is to be performed, the temperature stabilization time shall be at least 2 hours.

# 9. Installation

## 9.1. General mounting instructions

During installation of transmitter APC(R)-2000ALW Exd, Exi/Exd on site it may be required to correct the effect of the position on the measurement. This impact applies to the transmitter zero offset ( $\rightarrow$  8.2). Pressure resetting can be performed by the following methods:

- in the transmitter's local MENU, select and accept the PV ZERO function with the buttons (→ 13.2.12);
- using the KAP-03Ex communicator manufactured by Aplisens S.A. or other communicator using DD and DTM libraries;
- using a PC, Raport 2 and HART/USB communicator.

The transmitter with ABS ranges is not capable of performing a pressure resetting operation.

The ABS ranges due to the use of larger pressure ranges are less sensitive to the influence of the mounting position.

The body of transmitter APC(R)-2000ALW Exd, Exi/Exd can be rotated by max. 330° ( $\rightarrow$  9.5).

Transmitter APC(R)-2000ALW Exd, Exi/Exd gives the possibility of adjusting the display position to the mounting position of the body. The display may be rotated in total by an angle of  $345^{\circ}$  with a step of  $15^{\circ}$  ( $\rightarrow$  9.6).

Transmitters APC(R)-2000ALW Exd, Exi/Exd may be mounted on a pipe or wall using special brackets and clamps. Exact mounting method is described in ( $\rightarrow$  9.3). Specification of mounting brackets is included in ( $\rightarrow$  12.3).

The method of mounting the transmitter and the configuration of impulse tubes used to feed pressure shall be based on the following conditions:

- impulse tubes should be as short as possible and with a sufficiently large cross section, run without sharp bends;
- impulse tubes must have a constant slope, e.g. 10 cm/m, unless they are looped;
- if the impulse pipes are installed in open air, they must be adequately protected against freezing;
- in the case of gaseous medium, the transmitter must be installed above the measuring point so that the condensate can flow from capillary tubes to the process pipe;
- for liquid and steam, the transmitter must be installed below the measuring point;
- if the measured medium contains particles, it is useful to install separators and drain valves to remove deposits;
- keep the same liquid level or constant level difference in the impulse tubes. It is necessary to ensure the same temperature of both tubes and correct the error due to the impact of the position and filling of impulse tubes by pressure resetting;
- avoid installation of a measuring orifice at high points of a process system for liquids and at low points for gases;
- the configuration of impulse tubes and three- or five-way valve connection system shall be selected taking into account the measurement conditions and such functions as "pressure resetting" of transmitters on site. In addition, it is necessary to take into account the impulse routes during degassing, dewatering and flushing.

The transmitter parts must be selected according to chemical (corrosive) properties of the process medium. Pay particular attention to the diaphragm material. For more information on wetted parts materials in item ( $\rightarrow$  12.5).

## 9.2. Measuring system

#### Flow measurement.

Transmitter **APR-2000ALW Exd, Exi/Exd** enables to perform the measurement of gas, steam and liquid flow ( $\rightarrow$  2.3). In case of gas flow measurement, the transmitter must be installed above the measuring point ( $\rightarrow$  2.3.1). For measurement of steam and liquid flow, the transmitter should be installed below the measuring point ( $\rightarrow$  2.3.2;  $\rightarrow$  2.3.3). Additionally, when measuring the steam flow, condensate traps must be installed at the level of the measuring point and at the same distance from transmitter **APR-2000ALW Exd, Exi/Exd**.

#### Level measurement.

Transmitters APC(R)-2000ALW Exd, Exi/Exd enable the liquid level measurement in open and closed tanks ( $\rightarrow$  2.4).

- Level measurement system in open tanks

**APR-2000ALW Exd, Exi/Exd**: install the transmitter below the measuring point; the negative side of the pressure connection remains open to the atmosphere ( $\rightarrow$  2.4.1).

**APR-2000ALW Exd, Exi/Exd**: install the transmitter directly on the tank; the negative side of the pressure connection remains open to the atmosphere ( $\rightarrow$  2.4.2).

Install transmitter APC-2000ALW Exd, Exi/Exd directly into the tank below the minimum liquid level ( $\rightarrow$  2.4.3).

- Level measurement system in closed tanks, also with steam pillow

**APR-2000ALW Exd, Exi/Exd:** install the transmitter below the measuring point; the negative side of the pressure connection should be connected via capillary tube to the tank above the maximum liquid level ( $\rightarrow$  2.4.4).

**APR-2000ALW Exd, Exi/Exd:** install the transmitter directly on the tank using an integrated separator; the negative side of the pressure connection must be connected via the capillary tube to the tank above the maximum liquid level ( $\rightarrow$  2.4.5).

**APR-2000ALW Exd, Exi/Exd with diaphragm seals:** install the transmitter below the mounting points of distance separators ( $\rightarrow$  2.4.6).

**APR-2000ALW Exd, Exi/Exd with diaphragm seals:** install the transmitter directly on the tank using an integrated separator; the negative side of the pressure connection must be connected via the distance separator above the maximum liquid level ( $\rightarrow$  2.4.7).

**APR-2000ALW Exd, Exi/Exd:** install the transmitter below the measuring point; the negative side of the pressure connection must be connected via the capillary tube above the maximum liquid level ( $\rightarrow$  2.4.8).

**APR-2000ALW Exd, Exi/Exd:** install the transmitter directly on the tank using a direct separator; the negative side of the pressure connection must be connected via the capillary tube above the maximum liquid level ( $\rightarrow$  2.4.9).

#### Pressure measurement.

Transmitters APC(R)-2000ALW Exd, Exi/Exd enable to measure pressure and differential pressure of gases, steam and liquids ( $\rightarrow$  2.5;  $\rightarrow$  2.6).

Gas pressure measurement:

**APC-2000ALW Exd, Exi/Exd:** install the transmitter above the measuring point (→ 2.5.1).

Steam pressure measurement:

**APC-2000ALW Exd, Exi/Exd:** install the transmitter below the measuring point (→ 2.5.2).



Differential pressure measurement.

– Gas and steam differential pressure measurement:

Transmitter **APR-2000ALW Exd, Exi/Exd** must be installed above the measuring point (→ 2.6.1). – Liquid differential pressure measurement:


Transmitter APR-2000ALW Exd, Exi/Exd must be installed below the measuring point (→ 2.6.2).

– Gas, steam and liquid differential pressure measurement with the use of distance separators:

Transmitter **APR-2000ALW Exd, Exi/Exd with diaphragm seals** must be installed below the measuring point (**→** 2.6.3).

## 9.3. Pipe and wall mounting

Transmitter APC(R)-2000ALW Exd, Exi/Exd can be mounted on the wall by means of an AL mounting arm (item 1) or to the pipe using the components as shown below:

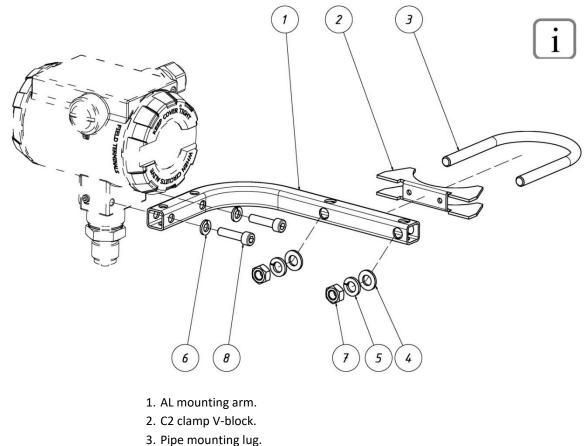


- A Flat washer Ø 8 4 and to DIN 12
- 4. Flat washer Ø 8.4 acc. to DIN 125 (2 pcs).
- 5. Spring washer Ø 8.1 acc. to DIN 127 (2 pcs).
- 6. Spring washer Ø 6.1 acc. to DIN 127 (2 pcs).
- 7. M8 nut acc. to DIN 934 (2 pcs).
- 8. Hex socket head cap screw M6x25 acc. to DIN 912 (2 pcs).

Figure 33. Transmitter APC-2000ALW Exd, Exi/Exd. Wall and pipe mounting.

<u> Aplisen</u>S°

The figure below shows how to mount the APR-2000ALW/G Exd, Exi/Exd.

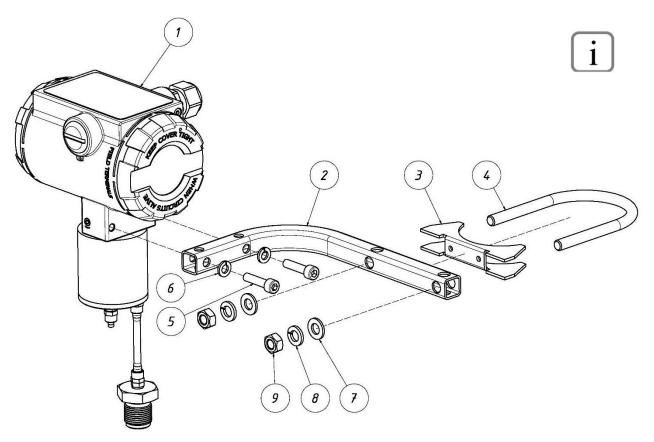


- 1. APR-2000ALW/G Exd, Exi/Exd.
- 2. AL mounting arm.
- 3. C2 clamp V-block.
- 4. Pipe mounting lug.
- 5. Hex socket head cap screw M6x25 acc. to DIN 912 (2 pcs).
- 6. Spring washerØ6,1 acc. to DIN 127 (2 pcs).
- 7. Flat washer Ø8,4 acc. to DIN 125 (2 pcs).
- 8. Spring washer Ø8,1 acc. to DIN 127 (2 pcs).
- 9. M8 nut acc. to DIN 934 (2 pcs).

Figure 34. Transmitter APR-2000ALW/G Exd, Exi/Exd. Wall and pipe mounting using AL mounting arm.



1


Differential pressure transmitters APR-2000ALW Exd, Exi/Exd with C type process connection can be mounted to the pipe using the mounting bracket C2 in the following way:

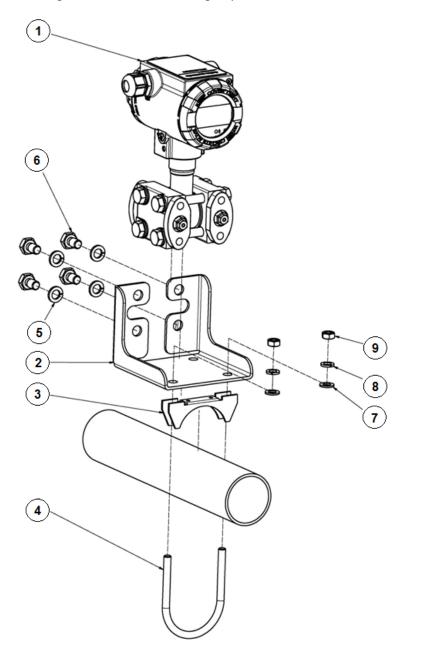

- 1. APR-2000ALW Exd, Exi/Exd with process connection C.
- 2. C2 bracket.
- 3. V-block.
- 4. Pipe mounting lug.
- 5. Spring washer Ø 10.2 acc. to DIN 127A (4 pcs).
- 6. Screw M10x16 acc. to DIN 933 (4 pcs).
- 7. Flat washer Ø 8.4 acc. to DIN 125 (2 pcs).
- 8. Spring washer Ø 8.1 acc. to DIN 127 (2 pcs).
- 9. M8 nut acc. to DIN 934 (2 pcs).

Figure 35. Transmitter APR-2000ALW Exd, Exi/Exd with C type process connection. Mounting on pipe.

Differential pressure transmitters APR-2000ALW Exd, Exi/Exd with process connection of CR type can be mounted to the pipe using the mounting bracket C2 in the following way:

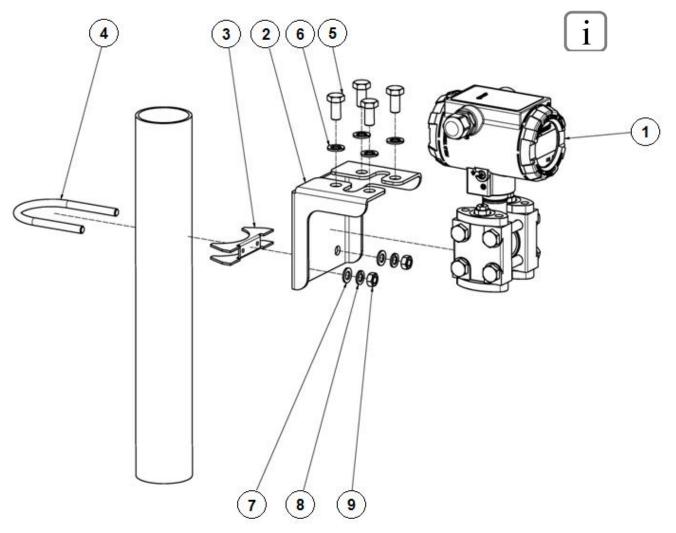

- 1. APR-2000ALW Exd, Exi/Exd with CR type process connection.
- 2. C2 bracket.
- 3. V-block.
- 4. Pipe mounting lug.
- 5. Screw M10x16 acc. to DIN 933.
- 6. Spring washer Ø10.2 acc. to DIN 127A (4 pcs).
- 7. Flat washer Ø 8.4 acc. to DIN 125 (2 pcs).
- 8. Spring washer Ø 8.1 acc. to DIN 127 (2 pcs).
- 9. M8 nut acc. to DIN 934 (2 pcs).

Figure 36. Transmitter APR-2000ALW Exd, Exi/Exd with CR type process connection. Mounting on pipe.

# AplisenS°

### 9.4. Version with distance separator

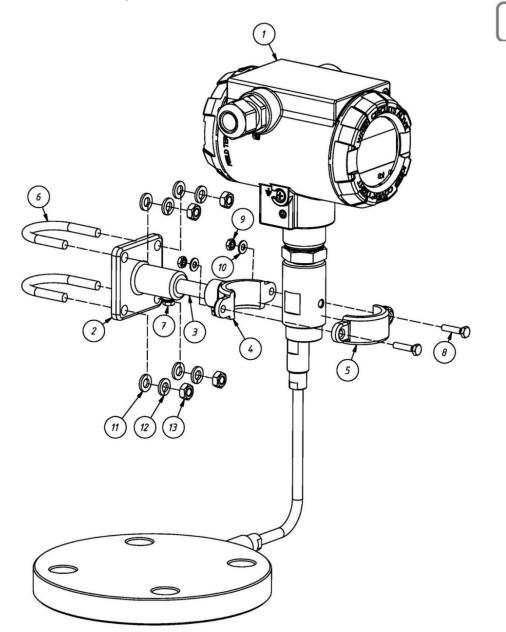


Figure 37. Assembly and mounting of the variant with distance separator.

List of parts for the PCR version bracket (pipe mounting):

- 1. APC-2000ALW Exd, Exi/Exd with distance separator.
- 2. Bracket body.
- 3. Bracket pin.
- 4. Bracket clamp (bottom).
- 5. Bracket clamp (top).
- 6. Pipe mounting lug (2 pcs).
- 7. Screw M5x10 acc. to DIN 933 (2 pcs).
- 8. Screw M5x18 acc. to DIN 933 (2 pcs).
- 9. M5 nut acc. to DIN 934 (2 pcs).
- 10. Flat washer ø5.3 acc. to DIN 433 (2 pcs).
- 11. Flat washer  $\emptyset$  6.4 acc. to DIN 125 (4 pcs).
- 12. Spring washer Ø 6.1 acc. to DIN 127 (4 pcs).
- 13. M6 nut acc. to DIN 934 (4 pcs).



List of parts for the PC version bracket (wall mounting):

- 1. APC-2000ALW Exd, Exi/Exd with distance separator.
- 2. Bracket body.
- 3. Bracket pin.
- 4. Bracket clamp (bottom).
- 5. Bracket clamp (top).
- 7. Screw M5x10 acc. to DIN 933 (2 pcs).
- 8. Screw M5x18 acc. to DIN 933 (2 pcs).
- 9. M5 nut acc. to DIN 934 (2 pcs).
- 10. Flat washer ø5.3 acc. to DIN 433 (2 pcs).

### 9.5. Rotation of transmitter body

Transmitters APC(R)-2000ALW Exd, Exi/Exd can be rotated by 330°. In order to do so:

- loosen the screw (item 1) to allow the housing to be rotated;
- position the transmitter housing as required (item 2);
- tighten the screw (item 1).


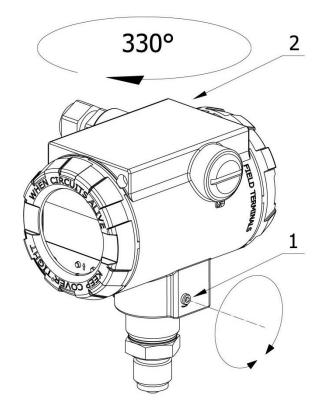


Figure 38. Rotation of APC(R)-2000ALW Exd, Exi/Exd transmitter housing.

## 9.6. Rotation of display

The transmitter gives the possibility of adjusting the display position to the mounting position of the body. Access to the extensions (item 2) used to rotate the display is provided after opening the front cover (item 1). The display may be rotated by an angle of 345° with a step of 15°.

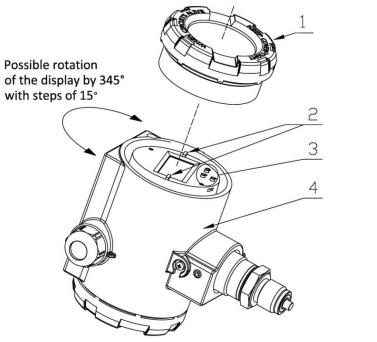

- 1. Front cover.
- 2. Extensions for display rotation.
- 3. Local keypad buttons.
- 4. Housing.

Figure 39. Change of display position and access to buttons.

#### 9.7. Oxygen applications

Oxygen and some other gases are highly explosive when they come into contact with oil, any fats and plastics, therefore it is necessary to take the following measures:

– all components of the measuring system must be cleaned and degreased.

Transmitters APC(R)-2000ALW Exd, Exi/Exd are available in the version suitable for oxygen measurements. At the user's request, a washing certificate ( $\rightarrow$  16.7.7) may be issued to confirm the possibility of using pressure and differential pressure transmitters in oxygen systems, and the interior of the measurement heads is filled with a chemically inert liquid.

#### 9.8. Hydrogen applications

For applications where the process medium contains hydrogen, there is a risk that the hydrogen atoms will penetrate through the metal and diaphragm into the sensor chamber. This phenomenon causes false measurement results and, in some cases, it may result in the damage to the sensor.

For this type of application, Aplisens S.A. offers diaphragms coated with gold (Au) layer, designed for pressure measurement of the hydrogen-containing media.

More information in item ( $\rightarrow$  12.5) "Specification of materials coming into contact with the process".

# 10.Environment

## 10.1. Operating temperature range

	APC(R)-2000ALW Exd, Exi/Exd. Operating temperature range			
	Exd version	Operating temperatures		
	APC-2000ALW Exd	-40°C +75°C		
	APR-2000ALW Exd	-40°C +75°C		
	APC(R)-2000ALW Exd with diaphragm seals	-25°C +75°C		
	APR-2000ALW/G Exd	-25°C +75°C		
	Exi/Exd version			
	APC-2000ALW Exi/Exd	-40°C +80°C		
(Ex)	APR-2000ALW Exi/Exd	-40°C +80°C		
	APC(R)-2000ALW Exi/Exd with diaphragm seals	-25°C +80°C		
	APR-2000ALW/G Exi/Exd	-25°C +80°C		
	Special version	From -50°C		
	Please note! APC(R)-2000ALW Exd, Exi/Exd transmitters have a thermal fuse which trips at +87 ± 2°C.			
	The exceeding the temperature exceeding of +85°C may result in permanent disconnection of the			
	transmitter power supply circuit and the need to repair the transmitter in the service centre.			

Table 23. Operating temperature range.

## 10.2. Storage temperature range

	APC(R)-2000ALW Exd, Exi/Exd. Storage temperature range				
	Exd version	Storage temperatures			
	APC-2000ALW Exd	-40°C +85°C			
	APR-2000ALW Exd	-40°C +85°C			
	APC(R)-2000ALW Exd with diaphragm seals	-25°C +85°C			
	APR-2000ALW/G Exd	-25°C +85°C			
	Exi/Exd version				
	APC-2000ALW Exi/Exd	-40°C +80°C			
>	APR-2000ALW Exi/Exd	-40°C +80°C			
	APC(R)-2000ALW Exi/Exd with diaphragm seals	-25°C +80°C			
APR-2000ALW/G Exi/Exd		-25°C +80°C			
	Special version	From -50°C			
	Please note! APC(R)-2000ALW Exd, Exi/Exd transmitters have a thermal fuse which trips at +87 ± 2°C.				
	The exceeding the temperature exceeding of +85°C may result in permanent disconnection of the				
	transmitter power supply circuit and the need to repair the transmitter in the service centre.				
r	24. Storage temperature range				

Table 24. Storage temperature range.

# 10.3. IP protection rating

APC(R)-2000ALW Exd, Exi/Exd. IP protection rating			
Transmitter type	IP		
	IP66		
APC-2000ALW Exd, Exi/Exd	IP67 special version		
APR-2000ALW Exd, Exi/Exd	IP66		
	IP67 special version		
ADC(D) 2000ALIM Evel Evi/Evel with disphrage scale	IP66		
APC(R)-2000ALW Exd, Exi/Exd with diaphragm seals	IP67 special version		
APR-2000ALW/G Exd, Exi/Exd	IP66		

Table 25. IP protection rating.

## 10.4. Climatic class

APC(R)-2000ALW Exd, Exi/Exd. Climatic class			
Test basis, standard title	Conditions		
EN 60068-2-2:2007, item 3.7 DNV, Dry heat	Test B, T = +70°C, RH = max 55%		
EN 60068-2-1:2007, item 3.9 DNV, Cold	Test A, T = -25°C		
EN 60068-2-30:2008, item 3.8 DNV, Damp heat, cyclic	Db test, (T = +55°C, RH = min. 95%, 24 h) x 2 cycles		
EN 60068-2-52:2001, item 3.10 DNV, Salt mist, cyclic (sodium chloride solution)	Kb test (spraying for 2 h, T = +25°C, storage for 7 days, T = +40°C, RH = 93%) x 4 cycles, together 28 days		

Table 26. Climatic class.

## 10.5. Vibration and surge resistance

APC(R)-2000ALW Exd, Exi/Exd. Vibration and surge resistance				
Type of	Standard	Type of hous-	Exposure parameters	
disturbance	Standard	ing		
Surges		Stainless steel	20g/10ms; 18 surges (3 per each direction of axle	
	EN 60068-2-27	AL	50g/10ms; 600 surges (100 per each axle direc-	
			tion)	
Sinusoidal vibrations	EN 60068-2-6, Fc test	Stainless steel	± 15mm, 10 60Hz	
			± 20m/s², 60 1000Hz	
		AL	± 35mm, 10 60Hz	
			± 50m/s², 60 1000Hz	

Table 27. Vibration and surge resistance.

# 10.6. Electromagnetic compatibility

Electromagnetic compatibility acc. to EN 61326-1, EN 61326-2-3 for industrial applications			
Type of disturbance	Standard	Level	
Electrostatic discharge (ESD)	EN 61000-4-2	contact ± 6 kV air ± 8 kV	
Radiated electromagnetic field	EN 61000-4-3	801000 MHz – 10 V/m 1.4 2 GHz – 3 V/m 2 2.7 GHz – 1 V/m	
Fast electrical transients (burst)	EN 61000-4-4	± 2 kV, I/O	
Surges	EN 61000-4-5	± 2 kV, line – earthing	
Conducted interruptions induced by radio- frequency fields:	EN 61000-4-6	0.15 80 MHz, 3 V	
Emission	EN 55011	30 1000 MHz (group 1, class A)	

Table 28. Electromagnetic compatibility.

# 11.Process

## 11.1. Process temperature limits (applies to the temperature of transmitter components)

Components of transmitter APC(R)-2000ALW Exd, Exi/Exd		Temperature limits of		
		Process	Medium	
Separators	1.4404 (316L) Hastelloy C 276 Teflon® Nickel Titanium Tantalum Monel		from -40°C to +120°C in direct measure-	
Diaphragms	Monel1.4404/1.4435 (316L)Hastelloy C 276NickelTitaniumTantalumMonelTeflon <sup>1)</sup> Gold <sup>1)</sup>	-40°C ÷ +75°C <sup>2)</sup> -25°C ÷ +75°C <sup>3)</sup> -40°C ÷ +80°C <sup>4)</sup> -25°C ÷ +80°C <sup>5)</sup>	ments. Above 120°C in distance measure- ments.	
Process connections	1.4404 (316L) Hastelloy C 276			
1) Layer sprayed on 316L steel diaphragm.				
2) APC(R)-2000ALW Exd.				
3) APR-2000ALW Exd with diaphragm seals, APR-2000ALW/G Exd.				

4) APC(R)-2000ALW Exi/Exd.

5) APR-2000ALW Exi/Exd with diaphragm seals, APR-2000ALW/G Exi/Exd.

Table 29. Temperature limit for individual transmitter components.

- The temperature of the measured medium cannot cause an increase in the temperature of the transmitter housing above the temperatures specified in the table;
- measurement of the medium with temperature above 80°C is possible only with the use of a separator, stub with a radiator or impulse tube;
- the temperature ranges of the measured medium should be observed due to the applied gauge fluid in the process connection. Information on gauge fluids is given in section (→ 14.2);
- for oxygen measurement applications, the guidelines given in item (→ 9.7) "Oxygen application" shall be observed;
- observe the permissible temperature range for gaskets, given in item (→ 11.2) "Operating temperature ranges of gaskets".

### 11.2. Operating temperature ranges of the used gaskets

Sealing material	Permissible ranges of operating temperatures*		
NBR	from -40°C to +80°C		
HNBR	from -40°C to +80°C		
PTFE	from -40°C to +80°C		
EPDM	from -40°C to +80°C		
Silicone	from -40°C to +80°C		
FPM	from -20°C to +80°C		
Copper	from -30°C to +80°C		
* The permissible operating temperature range depends on the transmitter configuration.			

Table 30. Temperature ranges for the transmitter sealing elements.

### 11.3. Specification of allowable pressures

The maximum pressure value for transmitters APC(R)-2000ALW Exd, Exi/Exd is dependent on the measuring system component with the lowest nominal pressure. The relevant data are included in section ( $\rightarrow$  8.5) "Measurement ranges".

The maximum static pressure is specified on the transmitter nameplate of APR-2000ALW type.

For oxygen measurement applications, it shall be necessary to follow the instructions and the values provided in section ( $\rightarrow$  9.7) "Oxygen applications".



# 12. Mechanical design

#### Housing:

standard version:

- varnished housing of AL 164 type made of high pressure casting of aluminium alloy ZLD 102;
- stainless steel housing: acid resistant steel 1.4401 (316).

Special version:

- high pressure aluminium alloy casting, varnished;
- stainless steel 1.4401 (316).


Housing protection rating (acc. to PN-EN60529:2003):


- IP66;
- IP67.


The main component of the transmitter and the probe is a measuring head with the silicon diaphragm installed. The measuring heads may be equipped with different pressure connections. Inside the head there is a "pressure chamber" filled with gauge fluid. On the side of the measured medium, it is limited by a separating diaphragm welded tightly to the head body (differential pressure transmitters have two separating diaphragms for inputs: "+" and "-").

## 12.1. Dimensions of body with pressure process connection

The transmitter height is calculated as a sum of heights of the following elements:

 

 

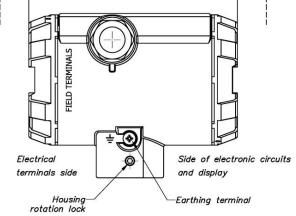

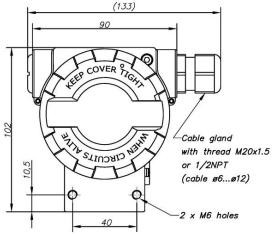


Figure 40. Overall dimensions of APC(R)-2000ALW Exd, Exi/Exd.

APLISENS<sup>®</sup>

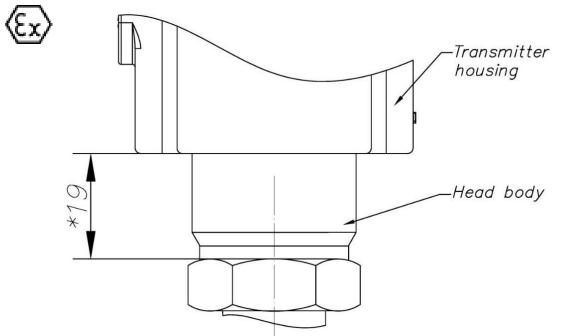



Figure 41. Diversification of the head body dimensions due to the versions.


\*33 mm for EXD version

### 12.2. Process connections

12.2.1. Specification of process connections for APC-2000ALW Exd, Exi/Exd

### Type M (M20x1.5, Ø4)

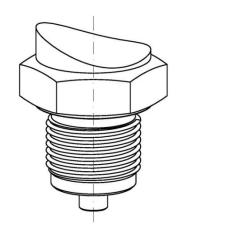

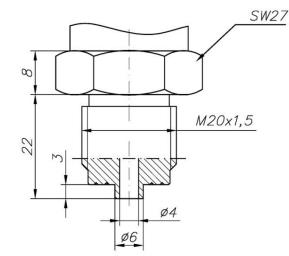

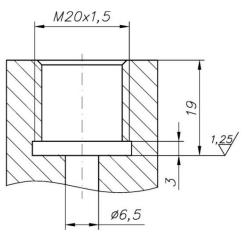


Figure 42. Type M connection (M20x1.5, Ø4) with socket.


Material:


- standard version: steel 316L;
- special version: Au gold-plated diaphragm; Oxygen head suitable for oxygen measurement.

Return → Table 4. Transmitter versions, process connections.



## Type P (M20x1.5, Ø12)

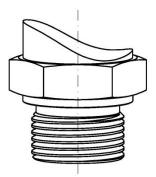

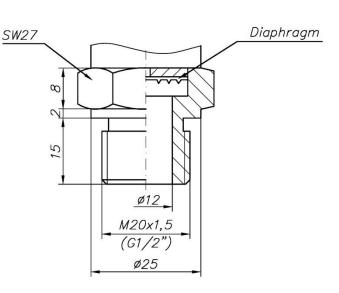


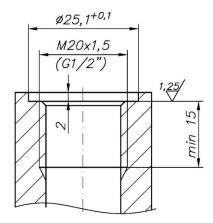


Figure 43. Type P connection (M20x1.5, Ø12) with socket.

- standard version: steel 316L;
- special version: Hastelloy C 276; Oxygen head suitable for oxygen measurement.

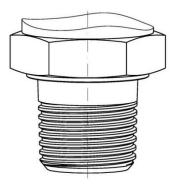

# Type ½ NPT (ext. ½ NPT, inner G ¼")



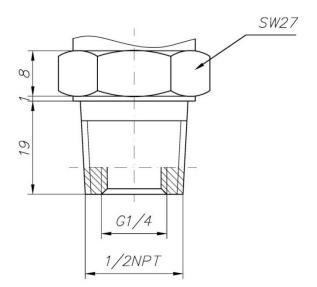
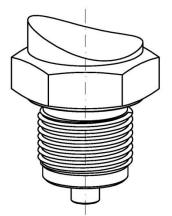



Figure 44. Type  $\frac{1}{2}$  NPT connection (ext.  $\frac{1}{2}$  NPT, inner G  $\frac{1}{4}$ ").

- standard version: steel 316L;
- special version: **Hastelloy** C 276.

APLISENS<sup>®</sup>

# Type G ½" (G ½", Ø4)



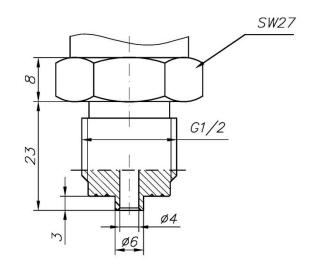


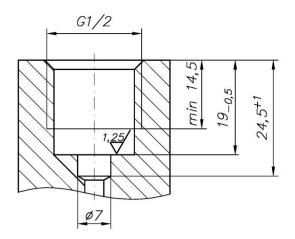



Figure 45. Type G  $\frac{1}{2}$ " connection (G  $\frac{1}{2}$ ", Ø4) with socket.

- standard version: steel 316L;
- special version: Au gold-plated diaphragm; Oxygen head suitable for oxygen measurement.

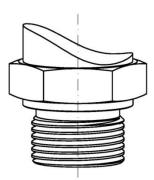

## Type GP (G ½, Ø12)



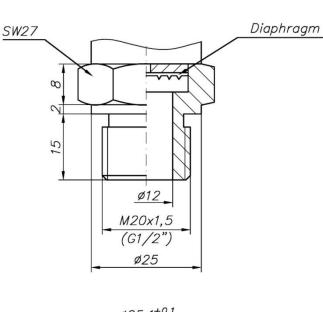

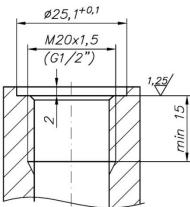
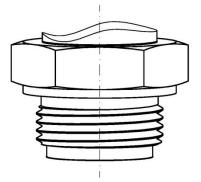



Figure 46. Type GP connection (G  $\frac{1}{2}$ , Ø12) with socket.


- standard version: steel 316L;
- special version: Hastelloy C 276; Oxygen head suitable for oxygen measurement.

APLISENS<sup>®</sup>

## Type CM30x2 (M30x2)



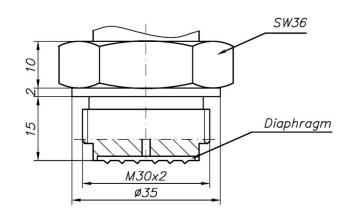

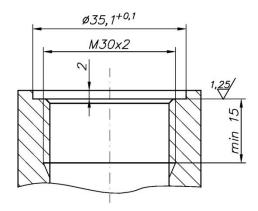

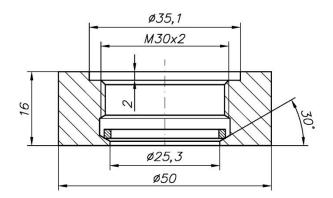
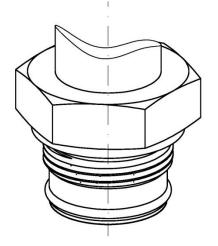



Figure 47. Type CM30x2 connection (M30x2) with socket and ring.

- standard version: steel 316L;
- special version: Hastelloy C 276; Au gold-plated diaphragm;
- sealing: PTFE.

APLISENS<sup>®</sup>

## Type CG1 (G1")



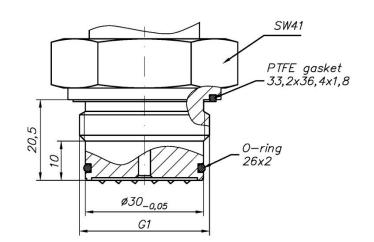

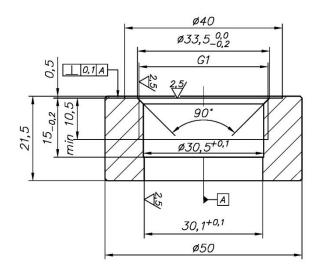


Figure 48. Type CG1 connection (G1") with socket.

- standard version: steel 316L;
- special version: Au gold-plated diaphragm.



Type G ¼ (G ¼", Ø4)



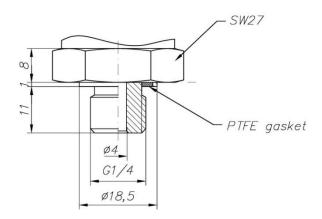


Figure 49. Type G  $\frac{1}{4}$  connection (G  $\frac{1}{4}$ ",  $\frac{0}{4}$ ).

Material – standard version: steel 316L.

## Type CG ½ (G ½")

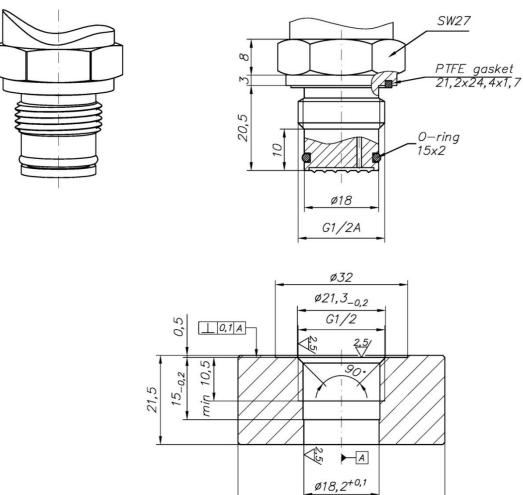


Figure 50. Type CG $\frac{1}{2}$  connection (G  $\frac{1}{2}$ ") with socket.

Material:

- standard version: steel 316L;
- special version: Au gold-plated diaphragm.

ø50

# Type: RM radiator with M stub M20x1,5 / RG radiator with G ½ stub

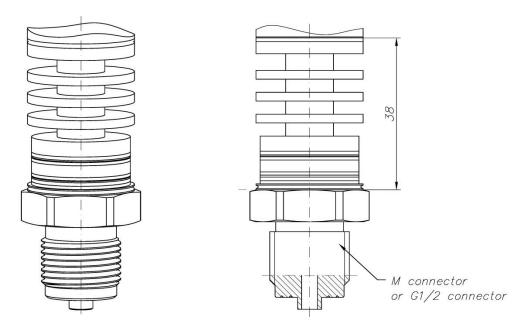


Figure 51. Radiator with M20x1,5 or G ½ stub.

Material – standard version: steel 316L.

**APLISENS**®

12.2.2. Adapters

Material:

- Steel 316L
- Brass

- G½"

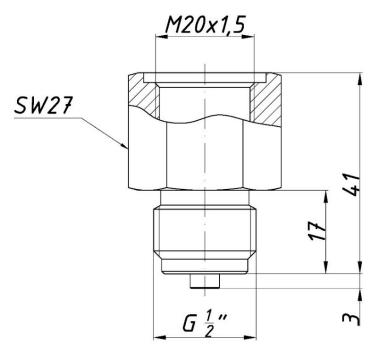


Figure 52. Adapter G 1/2".

- R1⁄2"

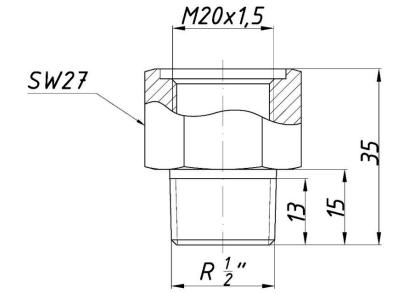


Figure 53. Adapter R ½".

- ¼ NPT

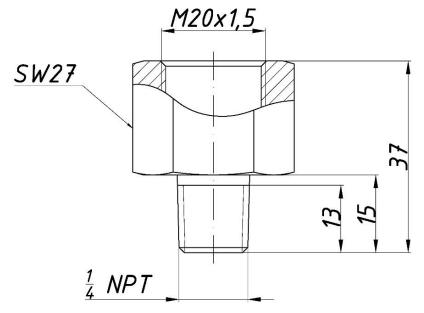


Figure 54. Adapter ¼ NPT.

- G¼"

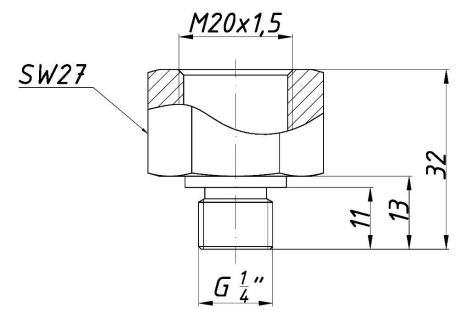


Figure 55. Adapter G ¼".

- ½ NPT F

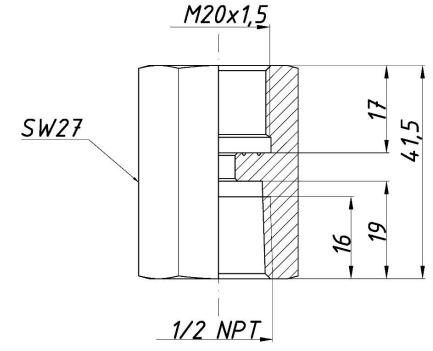


Figure 56. Adapter ½ NPT F.

- ¼ NPT F

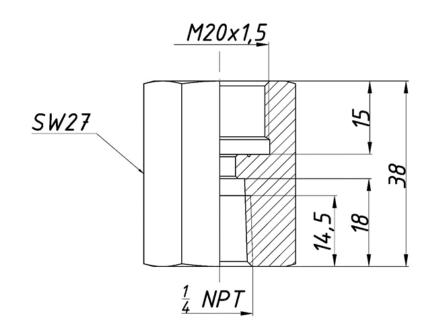


Figure 57. Adapter ¼ NPT F.

# - Elastic tube

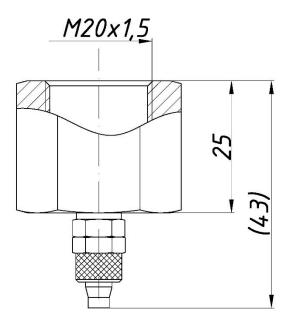


Figure 58. Elastic tube ø6x1.

### 12.2.3. Specification of process connections for APR-2000ALW Exd, Exi/Exd

### Type P

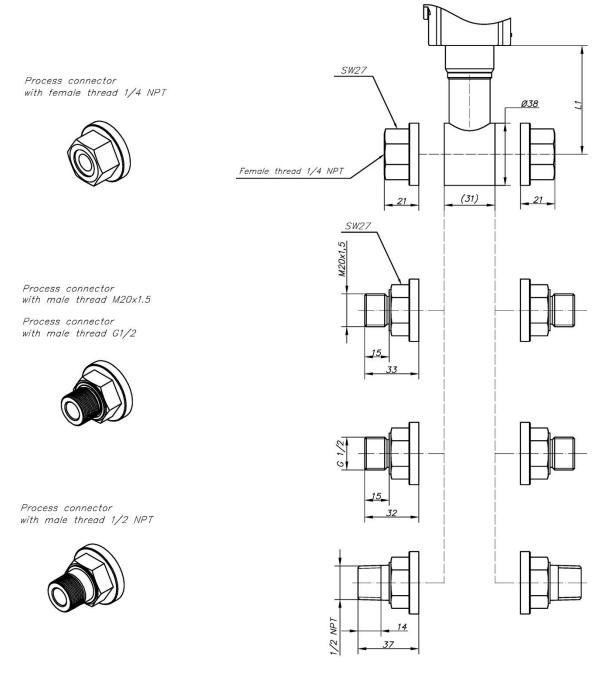


Figure 59. Type P connection for APR-2000ALW Exd, Exi/Exd.

\* L1 dimension due to different values depending on the version is shown in  $\rightarrow$  Table 31.

Material:

- standard version: steel 316L;
- special version: Au.

Return → Table 4. Transmitter versions, process connections.



Type C

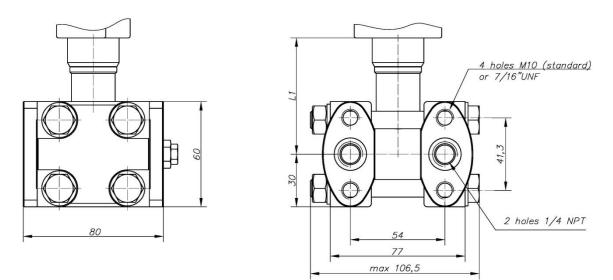


Figure 60. Overall dimensions of type C connection.

\* L1 dimension due to different values depending on the version is shown in **→** Table 31.

Material – standard version: steel 316L.



## Type CR

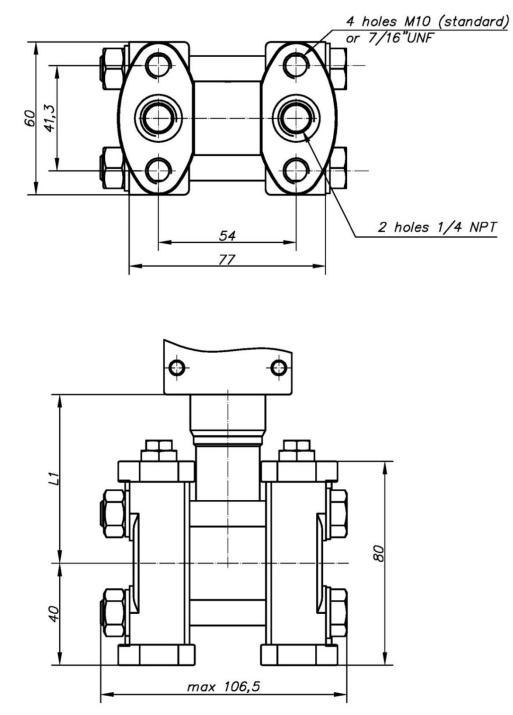


Figure 61. Overall dimensions of CR type connection.

\* L1 dimension due to different values depending on the version is shown in  $\rightarrow$  Table 31.

Material – standard version: steel 316L.




Connection	Size	Version Exd	Version HS Exd
С			
CR			
Two-side process connection: P (M20x1.5) G ½ ¼ NPT F ½ NPT M	L1 [mm]	80.5	92,5

Table 31. Diversification of the head height depending on the type of connection and version.

### 12.2.4. Process connections for measuring low gas pressure

PCV

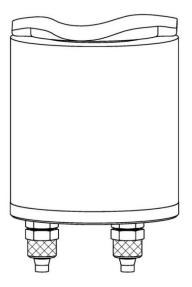

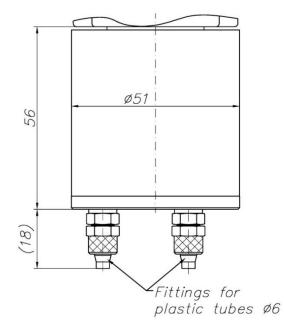


Figure 62. Process connection PCV type.

P GP

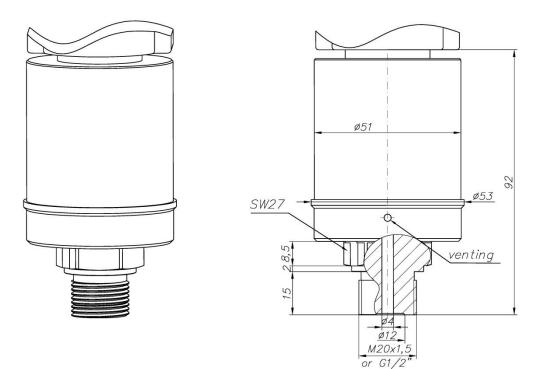
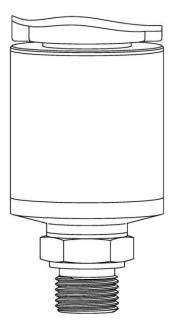


Figure 63. Process connection P or GP for low pressure gases measurement.

HS



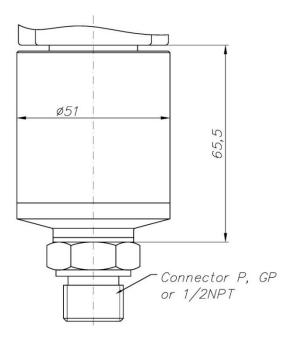


Figure 64. Process connection HS.

APLISENS<sup>®</sup>

## Adapter for block valve ¼ NPT

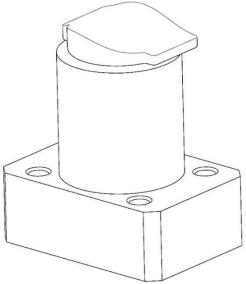


Figure 65. Block valve adapter ¼ NPT for low pressure gases measurement - view in isometry.

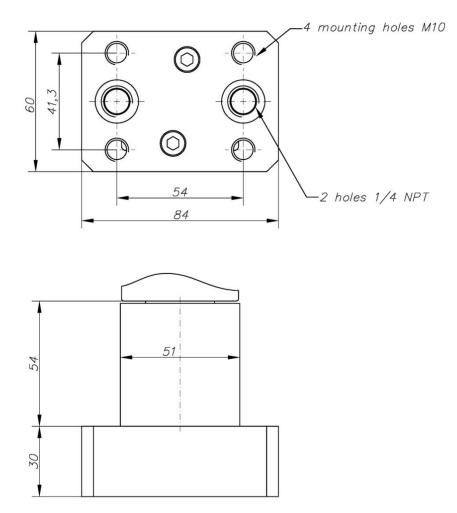



Figure 66. Overall dimension of block valve adapter ¼ NPT for low pressure gases measurement.




## 12.3. Specification of mounting brackets

## "AL" bracket for transmitters APC-2000ALW Exd, Exi/Exd, APR-2000ALW/G Exd, Exi/Exd.

A universal bracket for transmitters APC-2000ALW Exd, Exi/Exd, APR-2000ALW/G Exd, Exi/Exd allows to mount them in any position on the construction and vertical or horizontal pipe 2".

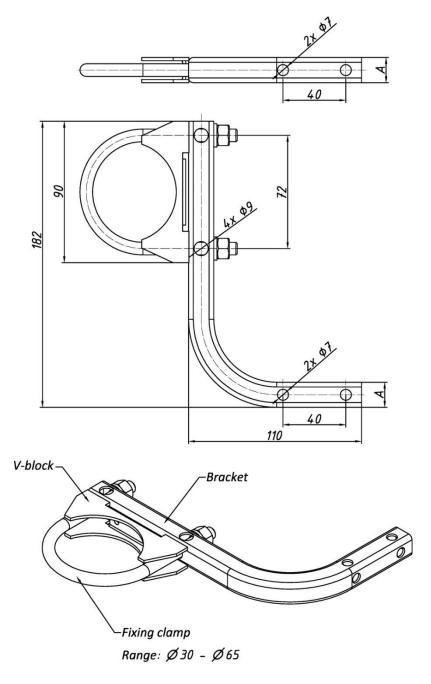

 A = 16 Bracket AL (galvanized) A = 15 Bracket AL (stainless steel)





## Bracket C-2 for transmitters APR-2000ALW Exd, Exi/Exd

Bracket for fixing of differential pressure transmitters with type C connection to pipe 2" or walls.

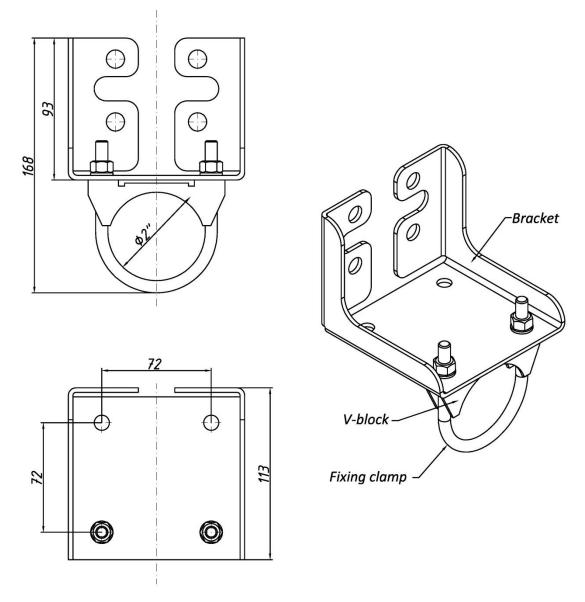


Figure 68. Mounting bracket C-2 for transmitters APR-2000ALW Exd, Exi/Exd.



# Bracket Ø25 for transmitters APR-2000ALW Exd, Exi/Exd.

A set for fixing differential pressure transmitters APR-2000ALW Exd, Exi/Exd with type P stub on a vertical or horizontal pipe Ø25.

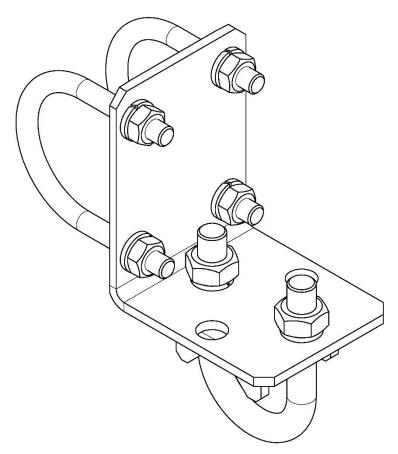
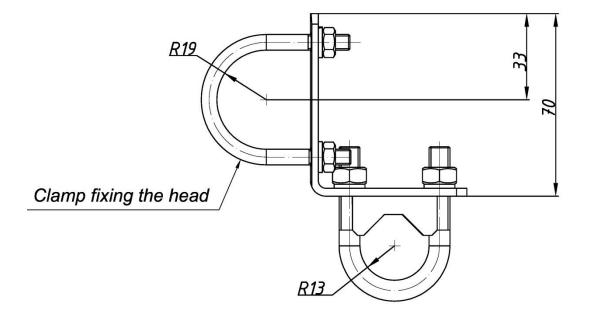


Figure 69. Mounting bracket Ø25 - view in isometry.

APLISENS<sup>®</sup>



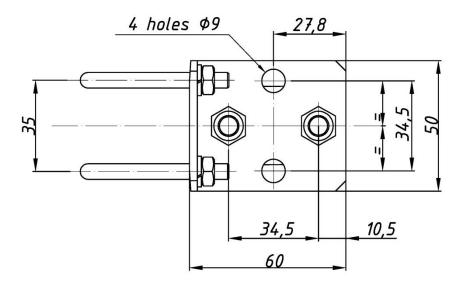


Figure 70. Overall dimensions of the mounting bracket ø25.

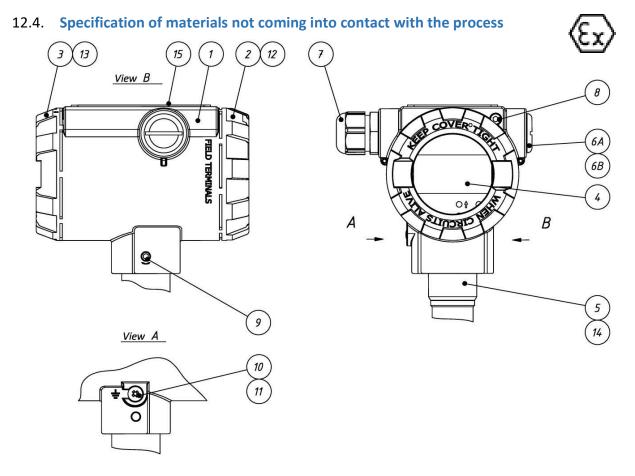


Figure 71. Specification of materials not coming into contact with the process.

- 1. Transmitter housing.
- 2. Full cover.
- 3. Cover with sight glass.
- 4. Glass window.
- 5. Head body.
- 6. A. Plug.
  - B. Plug EXD.
- 7. Gland.
- 8. Cover locking bolt.
- 9. Housing rotation locking screw.
- 10. Earthing bolt.
- 11. Earthing washer.
- 12. Full cover O-ring.
- 13. Sight glass cover O-ring.
- 14. Head body O-ring.
- 15. Nameplate.

# 12.5. Specification of materials coming into contact with the process

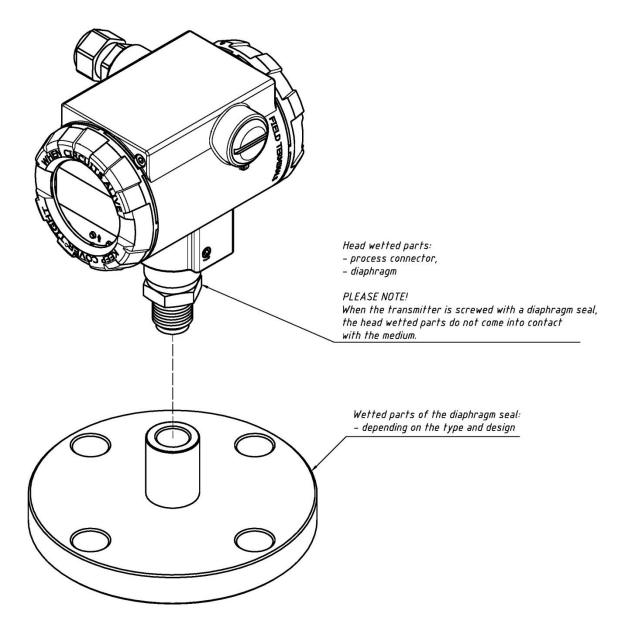


Figure 72. Specification of materials coming into contact with the process for APC-2000ALW Exd, Exi/Exd.



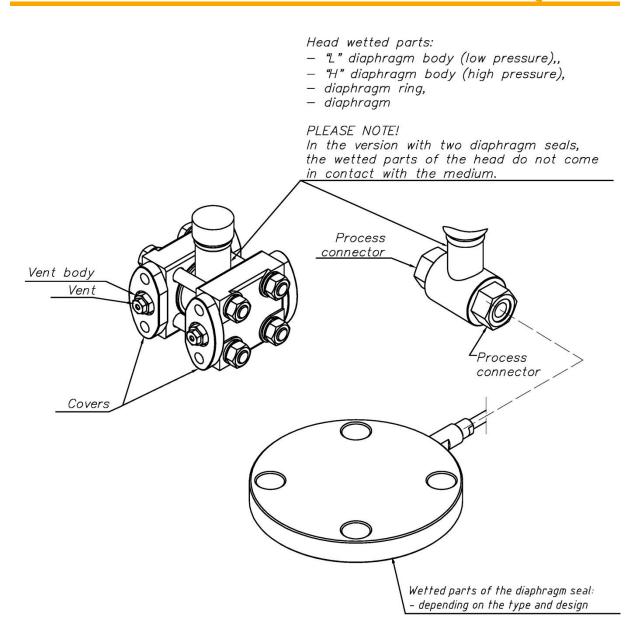


Figure 73. Specification of materials coming into contact with the process for APR-2000ALW Exd, Exi/Exd.

# 13.Operation

# 13.1. Change of setpoints, parameterisation, read-out of variables, diagnostics

The scope of the transmitter's operations include read-out of the settings, change of the settings, diagnostic read-outs. Some of the setpoint change functions (parameterisation) are available in local MENU with the use of the local buttons. Almost all the functions (except for activation and deactivation of the MID mode) are available via digital HART communications. The following table describes the functions available in local MENU supported by local buttons and functions available via digital HART communications.

APC(R)-2000ALW Exd, Exi/Exd. Change of setpoints, parameterisation, read-out of variables, diagnostics			
HART Command No / Function	Local buttons	Communication HART 5 / HART 7	
<b>CMD_0</b> Unique identifier read-out. <i>Read unique identifier.</i>	No.	Yes / Yes.	
<b>CMD_1</b> Read-out of basic process variable. <i>Read primary variable.</i>	Yes (LCD2).	Yes / Yes.	
<b>CMD_2</b> Read-out of current and control percentage. <i>Read current and percent of range.</i>	Yes (LCD1).	Yes / Yes.	
<b>CMD_3</b> Read-out of current and 4 variables: PV, SV, TV, FV. <i>Read current and four dynamics variables.</i>	Yes (LCD2). Except for ADC tem- perature.	Yes / Yes.	
CMD_6 Call address entry. Write pooling address.	No.	Yes / Yes.	
<b>CMD_7</b> Read-out of current loop configuration. <i>Read Loop Configuration.</i>	No.	No / Yes.	
<b>CMD_8</b> Read-out of dynamic variable classifications. <i>Read Dynamic Variable Classifications.</i>	No.	No / Yes.	
<b>CMD_9</b> Read-out of process variables and statuses. <i>Read Device Variables with Status.</i>	No.	No / Yes.	
<b>CMD_11</b> Read-out of unique TAG-related identifier. <i>Read unique identifier associated with TAG.</i>	No.	Yes / Yes.	
CMD_12 Message read-out. Read message.	No.	Yes / Yes.	
CMD_13 Read-out of Tag, Descriptor, Date. Read Tag, Descriptor, Date.	No.	Yes / Yes.	
<b>CMD_14</b> Read-out of information related to the PV sensor. <i>Read PV sensor information.</i>	No.	Yes / Yes.	
CMD_15 Read-out of output parameters. CMD_15 Read output information.	No.	Yes / Yes.	



APC(R)-2000ALW Exd, Exi/Exd. Change of setpoints, parameterisation, read-out of variables, diagnostics			
HART Command No / Function	Local buttons	Communication HART 5 / HART 7	
CMD_16 Read-out of device installation number. Read final Assembly Number.	No.	Yes / Yes.	
CMD_17 Message entry. Write message.	No.	Yes / Yes.	
<b>CMD_18</b> Entry of Tag, Descriptor, Date. <i>Write tag, descriptor, date.</i>	No.	Yes / Yes.	
<b>CMD_19</b> Entry of device installation number. <i>Write final assembly number.</i>	No.	Yes / Yes.	
CMD_20 Read Long Tag. Read Long Tag.	No.	No / Yes.	
<b>CMD_21</b> Read-out of unique Long Tag identifier. <i>Read Unique Identifier Associated With Long</i> <i>Tag.</i>	No.	No / Yes.	
CMD_22 Write Long Tag. Write Long Tag.	No.	No / Yes.	
CMD_31 Extended command entry. Extended Command Numbers.	No.	No / Yes.	
CMD_34 Damping value entry. Write PV damping value.	Yes (DAMPING). Predefined values: 0, 2, 5, 10, 30, 60 s.	Yes / Yes. Floating-point value from the range 0 30 s.	
<b>CMD_35</b> Entry of PV unit for URV and LRV, and URV and LRV values via the value. Set PV unit code for upper and lower range value. Set URV and LRV by value.	Yes, (SETURV → BYVALU), (SETLRV → BYVALU).	Yes / Yes.	
<b>CMD_36</b> Entry of URV set range through the set pressure. Set PV upper range value.	Yes (SETURV → BYPRES).	Yes / Yes.	
<b>CMD_37</b> Entry of LRV set range through the set pressure. Set PV lower range value.	Yes (SETLRV → BYPRES).	Yes / Yes.	
<b>CMD_38</b> Resetting of configuration change flag. <i>Reset "configuration changed" flag.</i>	No.	Yes / Yes.	
CMD_40 Forced current mode. Enter/exit PV current mode.	No.	Yes / Yes.	
CMD_42 Program reset. Perform master reset.	Yes (RESET).	Yes / Yes.	



APC(R)-2000ALW Exd, Exi/Exd. Change of setpoints, parameterisation, read-out of variables, diagnostics			
HART Command No / Function	Local buttons	Communication HART 5 / HART 7	
CMD_43		•	
Pressure resetting.	Yes (PVZERO).	Yes / Yes.	
Set PV zero.			
CMD_44			
Basic unit entry.	Yes (UNIT).	Yes / Yes.	
Write PV unit.			
CMD_45			
4 mA DAC calibration.	No.	Yes / Yes.	
Trim PV current DAC zero.			
CMD_46			
20 mA DAC calibration.	No.	Yes / Yes.	
Trim PV current DAC gain.			
	Yes (TRANSF).	Yes / Yes.	
	Linear;	Linear;	
CMD_47	root;	root;	
Transfer function entry.	;	manufacturer's root 1;	
Write PV transfer function.	;	manufacturer's root 2;	
	square;	square;	
	special user-defined.	special user-defined.	
CMD_48			
Read-out of additional diagnostic statuses.	No.	Yes / Yes.	
Read additional transmitter status.			
CMD_50			
Read-out of dynamic variable assignment.	No.	No / Yes.	
Read Dynamic Variable Assignments.			
CMD_54			
Read-out of dynamic variable information.	No.	No / Yes.	
Read Device Variable Information.			
CMD_59			
Entry of the number of preambles in the	No.	Yes / Yes.	
response.	NO.	Tes / Tes.	
Set numbers of response preambles.			
CMD_80			
Read-out of process variable calibration	No.	No / Yes.	
points.	NO.	1007 163.	
Read Device Variable Trim Points.			
CMD_81			
Read-out of process variable guidelines.	No.	No / Yes.	
Read Device Variable Trim Guidelines.			
CMD_82			
Process variable calibration point entry.	No.	No / Yes.	
Write Device Variable Trim Point.			
CMD_83			
Return to factory settings of process varia-	No.	No / Yes.	
ble calibration.	NO.	1007 103.	
Reset Device Variable Trim.			
CMD_1280			
Pressure measurement read-out status.	No.	No / Yes.	
Read Pressure Status.			
CMD_1281			
Read-out of optional parameter capability.	No.	No / Yes.	
Read Capabilities.			



APC(R)-2000ALW Exd, Exi/Exd. Change of setpoints, parameterisation, read-out of variables, diagnostics				
HART Command No / Function	Local buttons	Communication HART 5 / HART 7		
<b>CMD_1282</b> Read-out of supported status mask. <i>Read Supported Status Mask.</i>	No.	No / Yes.		
<b>CMD_1283</b> Read-out of pressure sensor information. <i>Read Pressure Sensor Information.</i>	No.	No / Yes.		
CMD_1284 Read-out of process connection infor- mation. <i>Read Process Connection.</i>	No.	No / Yes.		
CMD_1285 Read-out of associated process variable information. Read Associated Device Variables.	No.	No / Yes.		
CMD_128 Read-out of material data. <i>Read static data materials.</i>	No.	Yes / Yes.		
<b>CMD_129</b> Read-out of pressure calibration points. <i>Read device variable trim points.</i>	No.	Yes / Yes.		
<b>CMD_130</b> Calibration of upper pressure point. <i>Trim upper sensor calibration.</i>	No.	Yes / Yes.		
<b>CMD_131</b> Calibration of lower pressure point. <i>Trim lower sensor calibration.</i>	No.	Yes / Yes.		
<b>CMD_132</b> Selection of variable displayed on LCD2. <i>LCD2 variable, Set local control modes.</i>	Yes (LCD2VR).	Yes / Yes.		
<b>CMD_132</b> Selection of the decimal point position in LCD2. <i>LCD2 variable decimal point, Set local con-</i> <i>trol modes.</i>	Yes (LCD2DP).	Yes / Yes.		
<b>CMD_132</b> Enabling/disabling of LCD display. LCD operation, Set local control modes.	No.	Yes / Yes.		
<b>CMD_132</b> Local buttons activation/interlock. <i>Keyboard operation, Set local control</i> <i>modes.</i>	No.	Yes / Yes.		
<b>CMD_132</b> Selection of variable displayed on LCD1. <i>LCD1 variable, Set local control modes.</i>	Yes (LCD1VR).	Yes / Yes.		
<b>CMD_133</b> Read-out of keypad and display operation mode configuration. <i>Read local control modes.</i>	No.	Yes / Yes.		
CMD_134 HART 5 / HART 7 entry. Write HART mode (HART5/HART7).	No.	No / Yes.		



APC(R)-2000ALW Exd, Exi/Exd. Change of setpoints, parameterisation, read-out of variables,				
HART Command No / Function	diagnostics Local buttons	Communication HART 5 / HART 7		
<b>CMD_135</b> User's characteristics entry. <i>Write user's characteristic coefficients.</i>	No.	Yes / Yes.		
<b>CMD_136</b> User's characteristics read-out. <i>Read user's characteristic coefficients.</i>	No.	Yes / Yes.		
CMD_138 Return to factory settings. Return to factory settings.	Yes (FACTOR).	Yes / Yes.		
<b>CMD_141</b> Entry of AI function block configuration. Write AIFB Configuration.	No.	Yes / Yes.		
<b>CMD_142</b> Read-out of AI function block configuration. <i>Read AIFB Configuration.</i>	No.	Yes / Yes.		
CMD_230 Read-out of the CPU, Master, Slave, HART revisions. <i>Read CPU, Master, Slave, HART firmware</i> <i>revision.</i>	No.	Yes / Yes.		
CMD_231 Product code read-out. Read product codes.	No.	Yes / Yes.		
CMD_233 Separator code read-out. Read separator codes.	No.	Yes / Yes.		
CMD_235 Manifold code read-out. <i>Read manifold codes.</i>	No.	Yes / Yes.		
CMD_237 Read-out of limit parameters. Read operational limits.	No.	Yes / Yes.		
CMD_240 Write long TAG. Write long TAG.	No.	Yes / Yes.		
CMD_241 Read long TAG. Read long TAG.	No.	Yes / Yes.		
<b>CMD_242</b> Entry of the root characteristics start point. <i>Write sqrt start point.</i>	Yes (%SQRT). Predefined 0%, 0.2%; 0.4%; 0.6%; 0.8%; 1%.	Yes / Yes. Floating-point value from the range 0 100%.		
CMD_243 Read-out of the root characteristics start point. Read sqrt start point.	No.	Yes / Yes.		



APC(R)-2000ALW Exd, Exi/Exd. Change of setpoints, parameterisation, read-out of variables, diagnostics			
HART Command No / Function	Local buttons	Communication HART 5 / HART 7	
CMD_244 Entry of the user's unit and scaling coeffi- cients. Write User's unit name and rearrange coef- ficients.	No.	Yes / Yes.	
<b>CMD_245</b> Read-out of the user's unit and scaling coef- ficients. <i>Read User's unit name and rearrange coeffi-</i> <i>cients.</i>	No.	Yes / Yes.	
<b>CMD_246</b> Access code entry. <i>Write customer's security code.</i>	No.	Yes / Yes.	
CMD_247 Write (setpoint change) lock setting. Set write protect code.	No.	Yes / Yes.	
MID Selection of MID interlock mode. MID write protect.	Yes (MID_WP).	No / No.	

Table 32. APC(R)-2000ALW Exd, Exi/Exd. Change of setpoints, parameterisation, read-out of variables, diagnostics.

# 13.2. Local setpoints selected with local buttons

### 13.2.1. Local LCD display

The transmitter is equipped with a local LCD used to illustrate process variables, parameters during local configuration, error messages or failures.

The LCD has three primary information fields identified in the figure below as LCD1, LCD2, LCD3.

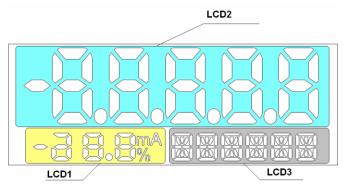


Figure 74. LCD display.

Depending on the configuration **LCD1** field is used to display:

- values of process variable for current in [mA] with 0.1 mA resolution;
- values of the set range of current output in percent [%] with 1% resolution.

[mA] – value (milliamperes) of process current in line 4 ... 20 mA, proportional to the measured pressure.

[%] – value (percentage) of the setpoint Y(t) of current controller in current loop 4 ... 20 mA. This value is the ratio of the process current Ip(t) to the current range width according to the following formula:

$$%Y(t) = \frac{Ip(t) - 4}{16} \frac{[mA]}{[mA]} * 100 [\%]$$

Depending on the configuration **LCD2** field is used to display:

- values of pressure / differential pressure in physical units;
- values of pressure / differential pressure in the user's units and scaling;
- value of temperature of the pressure sensor body;
- value of CPU temperature;
- values of the set range when changing the range by entering a number;
- information on error or failure number;
- information on exceeding the range of displayed values;
- information about exceeding the set range limits (only in MID mode).

The LCD2 field is used mainly to display floating-point decimal values in the unit displayed on LCD3. In some cases, other messages may be displayed:

- ERROR in the case of some operating errors or failure diagnosed in the transmitter, error/failure number E ===== will appear on LCD2; the ERROR message will be displayed on LCD3. The image will blink to attract the operator's attention. The transmitter will set the current output to alarm status depending on the configuration I\_AL < 3.600 mA.</li>
- undEr if the limit below LRV of the set range (only in MID mode) is exceeded by the process, undEr (under) message will appear on LCD1. The image will blink to attract the operator's attention. The transmitter will set the current output to alarm status I\_AL< 3.600 mA.</li>
- ovEr if the limit above URV of the set range (only in MID mode) is exceeded by the process, ouEr
   (over) message will appear on LCD1. The image will blink to attract the operator's attention.

Depending on the configuration, **LCD3** field is used to display:

- physical unit of pressure displayed on LCD2;
- user's unit when displaying values of pressure / differential pressure on LCD2 in user's units and scaling done by the user;
- option of selecting a setpoint using the local setpoint change MENU;
- numbers of errors related to the execution of commands of the local setpoint change MENU.

The display may be configured by means of a local keypad / local MENU or via HART communication. The local LCD has a limited number of character fields. For this reason, the majority of the messages are given in an abbreviated form. Below you will find a list of abbreviations used for each character field.

Depending on the configuration LCD3 field is used to display:

- physical unit of pressure displayed on LCD2;
- user's unit when displaying values of pressure/differential pressure on LCD2 in the units and scaling of the user;
- option of selecting a setpoint using the local setpoint change MENU;
- numbers of errors related to the execution of commands of the local setpoint change MENU.

The display configuration is possible by means of a local keypad/local MENU or via HART communication. The local LCD has a limited number of character fields. For this reason, the majority of the messages are given in an abbreviated form. Below you will find a list of abbreviations used for each character field.



## 13.2.2. Abbreviations of physical units of pressures and levels and their description

INH2O	inch of water column.
INGH	inches of mercury column with temperature of 0°C.
FTH2O	feet of water column with temperature of 20°C (68°F).
MMH2O	millimeters of water column with temperature of 20°C (68°F).
MMHG	millimeters of mercury column with temperature of 0°C.
PSI	pounds per square inch.
BAR	bars.
MBAR	millibars.
GSQCM	grams per square centimeter.
KGSQCM	kilograms per square centimeter.
ΡΑ	pascals.
КРА	kilopascals.
TORR	torrs.
ATM	atmosphere.
MH2O4	metres of water column with temperature of 4°C.
MPA	megapascals.
INH2O4	inches of water column with temperature of 4°C.
MMH2O4	millimeters of water column with temperature of 4°C.
NOUNIT	the shortcut displayed when a unit not implemented in the transmitter is configured via HART
	communication.

## 13.2.3. Abbreviations of temperature measurement point name

SENS °C	temperature of pressure/differential pressure sensor measurement structure expressed
	in degrees Celsius.
CPU °C	temperature of the main CPU structure expressed in degrees Celsius. This temperature refers to temperature of the main electronic components and is similar to transmitter body temperature.

## 13.2.4. Abbreviations displayed during configuration via local MENU and their descriptions

<-BACK	return to one level above in local MENU.
EXIT	going out of the local MENU.
UNIT	pressure and level unit selection menu.
SENS_T	option of measuring the temperature of pressure or differential pressure sensor measurement structure.
CPU_T	option of measuring the main CPU structure temperature.
DAMPIN	menu of selecting damping time constant of process variable.
TRANSF	menu of selecting the current output transfer function.
%SQRT	menu of selecting the dead band percentage of the root characteristics of the current output transfer function.
PVZERO	pressure transmitter resetting menu and option.
SETURV	URV setting menu (upper pressure of the set range).
SETLRV	LRV setting menu (lower pressure of the set range).
BYPRES	option of setting the range according to pressure.
BYVALU	option of setting the set range by entering a value.
RESET	transmitter hot restart software menu.
LCD1VR	menu for selection of the type of measurement displayed on LCD1.
LCD2VR	menu for selection of the type of measurement displayed on LCD2.
LCD2DP	menu for selecting position of comma / decimal point.
FACTOR	return to factory values menu.



RECALL	option of return to factory settings. Factory pressure/differential pressure calibrations, zero
	setpoints of pressure and current will be restored.
LINEAR	option of linear function of current output setpoint transfer.
SQRT	option of root function of current output setpoint transfer.
SPECIA	option of the user's special characteristics of current output setpoint transfer.
SQUARE	option of square function of current output setpoint transfer.
CURREN	option of selecting the display of set current on LCD1.
PERCEN	option of selecting the display of set percentage on LCD1.
PRESS	option of selecting the display of pressure/differential pressure on LCD2.
USER	option of selecting user's units and scaling to be displayed on LCD3.
MID_WP	MID mode setting menu. In this mode, the option of changing the setpoints related to the
	transmitter metrology is disabled. Additionally, the exceeding of LRV and URV limits results in
	displaying the <b>undEr</b> or <b>ovEr</b> message, blinking of the display and setting of the process out-
	put to the current alarm mode I_AL<3,600 mA.
ON	MID mode activation option.
OFF	MID mode deactivation option.
X.XXXX	option of selecting position of comma / decimal point.
XX.XXX	option of selecting position of comma / decimal point.
XXX.XX XXXX.X	option of selecting position of comma / decimal point.
XXXXX.	option of selecting position of comma / decimal point. option of selecting position of comma / decimal point.
0 [S]	option of selecting damping time constant.
2 [S]	option of selecting damping time constant.
5 [S]	option of selecting damping time constant.
10 [S]	option of selecting damping time constant.
30 [S]	option of selecting damping time constant.
60 [S]	option of selecting damping time constant. The 60-second damping constant is only available
00[5]	from the local keypad; the configuration via HART in Revision 5 does not allow a damping val-
	ue greater than 30 seconds. Other damping values are possible to be set via HART communi-
	cation.
0.0 %	option of selecting root characteristics dead band point.
0.2 %	option of selecting root characteristics dead band point.
0.4 %	option of selecting root characteristics dead band point.
0.6 %	option of selecting root characteristics dead band point.
0.8 %	option of selecting root characteristics dead band point.
1.0 %	option of selecting root characteristics dead band point. Other dead band values are possible
	to be set via HART communication.
DONE	message about the acceptance and implementation of the set-point change.
13.2.5. Abbrevia	tions of local configuration errors and description of abbreviations
ER_L07	message displayed on LCD3. It is displayed if a user tries to change the setpoint in the trans-
	mitter protected against entry (change of setpoints) or in active MID mode.
ER_L09	message displayed on LCD3. It is displayed if:
	<ul> <li>a user tries to change the set range by set pressure which is not within the allowable</li> </ul>
	upper URL pressure.
	<ul> <li>a user tries to reset pressure when the pressure exceeds the allowable upper limit.</li> </ul>
	· · · · · · · · · · · · · · · · · · ·
ER_L10	message displayed on LCD3. It is displayed if:
—	<ul> <li>a user tries to change the set range by set pressure which is not within the allowable</li> </ul>
	lower LRL pressure.
	<ul> <li>a user tries to reset pressure when the pressure exceeds the allowable lower limit.</li> </ul>
ER_L14	message displayed on LCD3. It is displayed if:



 the adopted URV value through the set pressure or entry of a value cannot be accepted because it causes a reduction of the set pressure range set below the allowable limit.

ER\_L16 message displayed on LCD3. It is displayed if:

- a user tried to perform an operation that is disabled or unavailable. It may be caused by:
  - attempting to access the local setpoint change MENU when the access to the local MENU is disabled;
  - attempting to reset pressure in the absolute pressure measurement transmitter.
- WG\_L14 the message will appear if the assumed LRV value through the set pressure or entry of a value causes a decrease of the current set range. Entry of LRV automatically results in the transmitter's attempt to set URV in such a way that the current width of the set range is maintained. If this is not possible due to exceeded URL, the transmitter automatically adopts the URV = URL and a new LRV. Since the set range width and URV deviate from previous values, a message is displayed.

### 13.2.6. ASCII characters displayed on LCD3 in user's unit

Using HART communication, the user can configure its own 6-character unit displayed on LCD3. It is possible to display ASCII characters from the range (32... 96 dec) or (20 ... 60 hex), i.e.:

## !"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMNOPQRSTUVWXYZ[\]^\_`

#### 13.2.7. Local keypad

The local keypad is used to enable the configuration mode of some transmitter parameters and to navigate through MENU and accept MENU options. The MENU can be accessed by pressing and holding any of the keys for at least 4 seconds. After this time, the LCD3 field of the local display will show an **EXIT** message. This means entering into the MENU navigation mode.

#### 13.2.8. Local configuration of setpoints

APC(R)-2000ALW Exd, Exi/Exd transmitter enables local configuration of some of the most common setpoints via local keypad and local LCD.

#### 13.2.9. Navigation in local setpoints MENU

The MENU can be accessed by pressing and holding any of the keys for at least 4 seconds. After this time, the LCD3 field of the local display will show an **EXIT** message. This means entry into the local configuration MENU. Pressing the buttons with arrows  $[\uparrow] [\downarrow]$  for at least 1 second you can move up or down MENU.

#### 13.2.10. Acceptance of local setpoints

The key marked with symbol [•] is used to accept the selection. The acceptance of setpoint change is confirmed by a **DONE** message displayed on LCD3. After changing the setpoint, the transmitter leaves the local configuration change MENU. If in MENU mode, we do not make any choice, after 2 minutes the transmitter automatically returns to display of standard messages. The MENU can also be left by selecting and accepting the **EXIT** option.

APLISENS<sup>®</sup>

# 13.2.11. List of local setpoints MENU messages

EXIT→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	◙ [set]	
PVZERO→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	☑ [set]	
	← BACK	← BACK			
	PVZERO	PVZERO			
$SETLRV \rightarrow$	[↓][scroll down]	[↑][scrollup]	$\rightarrow$	🖸 [set]	
	← BACK	← BACK			
	SETLRV	SETLRV			
SETURV $\rightarrow$	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	■ [set]	
	← BACK	← BACK			
	SETURV	SETURV			
UNIT→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	<b>◙</b> [set]	
	€BACK	← BACK			
	INH2O	MMH2O4			
	INHG	INH2O4			
	FTH2O	MPA			
	MMH2O	MH2O4			
	MMHG	ATM			
	PSI	TORR			
	BAR	KPA			
	MBAR	PA			
	GSQCM KGSQCM	KGSQCM GSQCM			
	PA	MBAR			
	KPA	BAR			
	TORR	PSI			
	ATM	MMHG			
	MH2O4	MMH2O			
	MPA	FTH2O			
	INH2O4	INHG			
	MMH2O4	INH2O			
DAMPIN→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	■ [set]	
	← BACK	← BACK			
	60 [S]	0 [S]			
	30 [S]	2 [S]			
	10 [S]	5 [S]			
	5 [8]	10 [S]			
	2 [S]	30 [S]			
	0 [S]	60 [S]			
TRANSF→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	■ [set]	
LIGHIDE /	€BACK	←BACK	,	E [Sot]	
	LINEAR	SQUARE			
	SQRT	SPECIA			
	SPECIA	SQRT			
	SQUARE	LINEAR			
0/ CODT -	[]][a]] ]]	[4][1]]	-	<b>Fa</b> [4]	
%SQRT→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	■ [set]	
	←BACK 1.0 %	←BACK 0.0 %			
	0.8 %	0.2 %			
	0.6 %	0.4 %			
	0.4 %	0.6 %			
	0.2 %	0.8 %			
	0.0 %	1.0 %			




LCD1VR→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	<b>◙</b> [set]	
	← BACK	← BACK			
	CURREN	PERCEN			
	PERCEN	CURREN			
$LCD2VR \rightarrow$	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	🖸 [set]	
	← BACK	← BACK			
	PRESS	CPU_T			
	USER	SENS_T			
	SENS_T	USER			
	CPU_T	PRESS			
LCD2DP→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	[set]	
	←BACK	← BACK			
	XXXXX•	X•XXXX			
	XXXX•X	XX•XXX			
	XXX•XX	XXX•XX			
	XX•XXX	XXXX•X			
	X•XXXX	XXXXXO			
FACTOR→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	■ [set]	
	<b>←</b> BACK	← BACK			
	RECALL	RECALL			
RESET→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	<b>◙</b> [set]	
ILLI)LI	←BACK	←BACK			
	RESET	RESET			
MID_WP→				<b>R</b> [ast]	
wm_wr→	[↓][scroll down]	[↑][scroll up]	$\rightarrow$	■ [set]	
	← BACK	← BACK			
	ON	OFF			
	OFF	ON			


### 13.2.12. Structure of local setpoints MENU

### (Press and hold any of 3 buttons for 4s.)

If you navigate through the active local MENU area, you should hold the button for at least 1 s to trigger the action. The pushing and holding of button  $\uparrow$  or  $\downarrow$  replaces single holding for min. 1 s. If you leave the Local Menu inactive for more than 2 minutes, the transmitter will automatically leave the Local Menu and begins displaying the process variable.

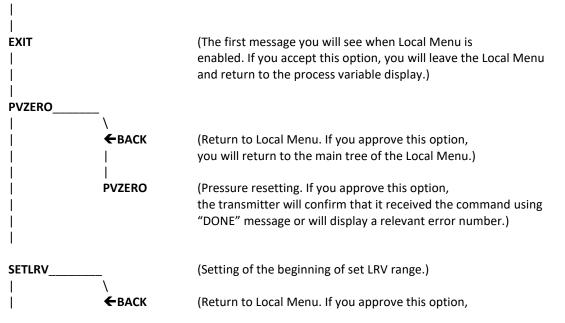



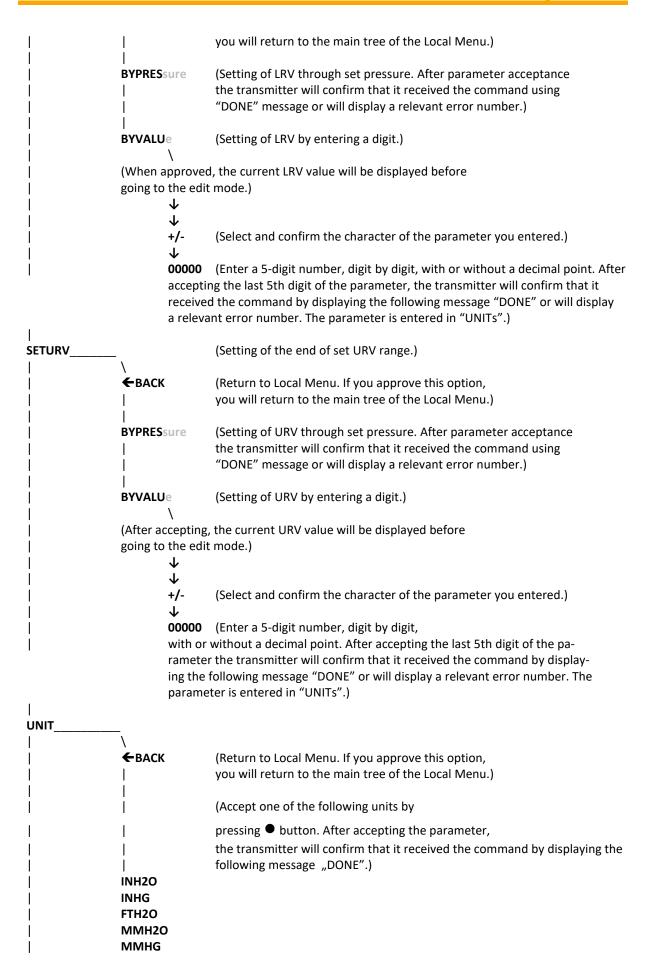




	PSI BAR MBAR GSQCM KGSQCM PA KPA TORR ATM MH2O4 MPA INH2O4 MMH2O4	
DAMPINg	<u> </u>	(Setting of damping time constant of process variable.)
	\ <b>€-BACK</b> 	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
		(Accept one of the following values of time constant by
   	   	pressing and holding ● button. After accepting the parameter, the transmitter will confirm that it received the command by displaying the following message "DONE".)
	0 [s] 2 [s] 5 [s] 10 [s] 30 [s] 60 [s]	
 TRANSFer	- 、	(Setting of transfer type for current output characteristics.)
	` <b>€</b> ВАСК 	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
		(Accept one of the following values of time by pressing and holding
	     LINEAr	<ul> <li>button. After accepting the parameter, the transmitter will confirm that it received the command by displaying the following message "DONE".) (Linear.)</li> </ul>
	SQRT SPECIA SQUARE	(Square root.) (Special user-defined.) (Square.)
 % SQRT		(Setting of root characteristic cut-off point.)
	<b>←</b> BACK	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
		(Accept one of the following values by pressing and holding
I	I	• button. After accepting the parameter,
	I	the transmitter will confirm that it received the command by displaying the



	 0.0 % 0.2 % 0.4 % 0.6 % 0.8 % 1.0 %	following message "DONE".)
 LCD1VaRiable	- ,	(Type of process variable displayed on LCD1.)
	<b>←</b> BACK	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
		(Accept one of the following options by
	     CURRENt 	pressing ● button. After accepting the parameter, the transmitter will confirm that it received the command by displaying the following message "DONE".) (LCD1 display will display a value of current in the current loop.)
	 PERCENt	(LCD1 display will display a percentage value of output setpoint.)
 LCD2VaRiable 	- \	(Type of variable displayed on LCD2.)
	<b>€-ВАСК</b> 	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
		(Accept one of the following options by
		pressing ● button. After accepting the parameter, the transmitter will confirm that it received the command by displaying the following message "DONE".)
	I PRESSure	(LCD2 will display pressure.)
	' USER   	(LCD2 display will display the value scaled in user units.)
	sens_t   	(LCD2 display will display the current temperature of pressure sensor – head in °C.)
	ĊPU_T	(LCD2 display will not display the current temperature of transducer CPU – electronic elements in °C.)
 LCD2DP   	- ←BACK	(Position of decimal point of the variable displayed on LCD2.) (Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
	i	(Accept one of the following options by
   	   	pressing ● button. After accepting the parameter, the transmitter will confirm that it received the command by displaying the following message "DONE".)

**APLISENS**®

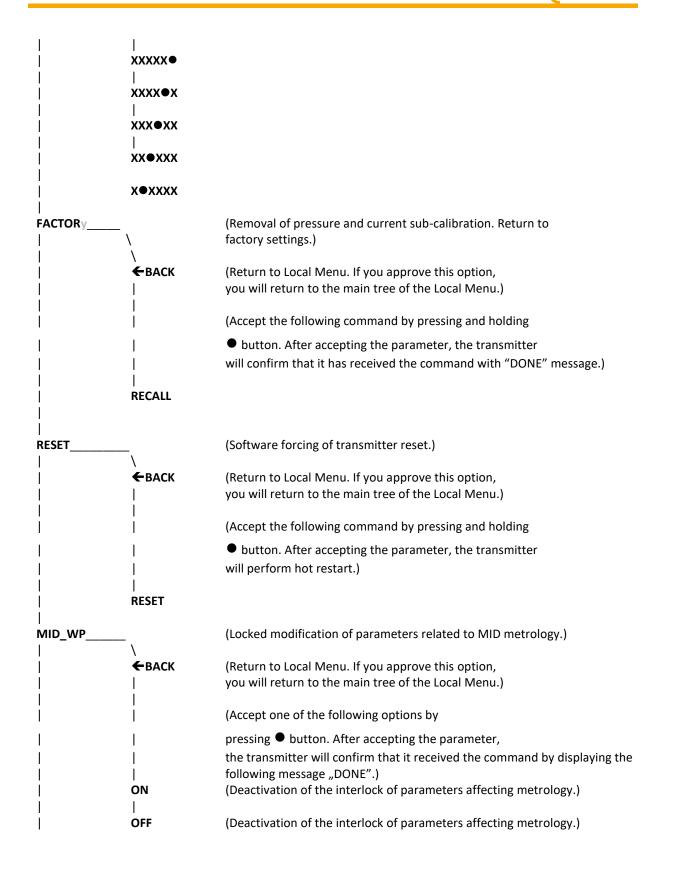

# 13.3. Local or remote selection of setpoints via HART communication

The transmitter allows to read out and configure the parameters via HART rev5.1 or HART rev7 with the use of 4...20 mA loop as a physical layer for BELL 202 FSK modulation. The transmitter allows to use the local HART communication. To do this you can use a HART communicator unit or modem interoperating with a computer or a smartphone. In order to establish communication, it is necessary to:

- remove HART communication jumper;
- connect the communicator or modem to electrical terminals ( $\rightarrow$  7.5).

In case of remote communication, HART modem should be incorporated in parallel to line 4 ... 20 mA as described in ( $\rightarrow$  7.5). It is required that resistance between the power supply and the modem connection point be greater than 240  $\Omega$ . The guidelines of the minimum load resistance  $R_{L_MAX}$  described in ( $\rightarrow$  4.10) must also be observed. When using measuring cards with built-in HART master, it shall be necessary to observe the regulations of the card manufacturer.

The following devices may be used to communicate with the transmitter:

- Aplisens S.A. KAP-03 or KAP-03EX communicator (only for HART 5);
- communicators from other companies, including those using DD and DTM libraries;
- PC computers equipped with HART modem (e.g. HART/USB converter manufactured by Aplisens S.A.) with WIN7, WIN10 operating system with the installed Raport 2;
- PC computers equipped with HART modem using software from other companies, accepting DD and DTM libraries;
- smartphones with Android system, using a converter providing wireless communications (e.g. HART/USB converter by Aplisens S.A.) with the use of Aplisens Mobile Configurator. The software is available on Google Play<sup>®</sup>.

## 13.4. Integration with DCS

The system integrator may provide the transmitter with a **TAG** consisting of 8 alphanumeric characters. It is possible to identify the transmitter in the HART network on the basis of its tag. The system integrator can assign any bus address other than zero to the transmitter. The bus address other than zero is suitable for digital multidrop communication. In multidrop mode the process output current is automatically set to <3,600 mA.



# 14. Separators and their application

The separator is a diaphragm pressure relay. The signal is transmitted to the associated pressure gauge, pressure transmitter, manometer via gauge fluid filling the space between the separator diaphragm and the pressure gauge. The function of the separator is to separate the pressure gauge from adverse parameters of the medium, such as:

- low or high temperature, increased viscosity, contamination;
- system vibrations (distance separation).

The basic metrological problem when using the separators is an absolute "zero" temperature error resulting from the effects of thermal expansion of gauge fluid, which must be compensated by the flexibility of the separating diaphragm.

In order to minimize this impact, it is recommended to:

- use of as short capillaries as possible, which reduces the volume of the gauge fluid in the system;
- use of larger DNs to maximize diaphragm flexibility;
- location of capillary tubes in such a way to minimize the changes of their temperatures.

## 14.1. Design and operation modes

The separator is a diaphragm device used in situations where the measuring medium or installation structure does not allow for direct connection of a pressure transmitter. This is the case when:

- the process temperature is outside the temperature range acceptable for the pressure gauge (and it is not possible to use an impulse tube);
- the medium is corrosive;
- the medium is characterised by increased viscosity, solidification or forms slurries;
- the application requires the use of hygienic connection;
- there are vibrations in the installation.

The separator transfers a pressure signal of the measured medium to the associated transmitter via a pressure gauge fluid that fills the space between the separator diaphragm and the transmitter.

The measuring sets of the separator and transmitter are available in the following configurations:

- pressure transmitter direct separator;
- pressure transmitter distance separator;
- differential pressure transmitter direct separator;
- differential pressure transmitter distance separator;
- differential pressure transmitter two separators, including at least one distance separator.

The following drawings show possible separator configurations along with the application of process connections.

Return → Table 4. Transmitter versions, process connections.



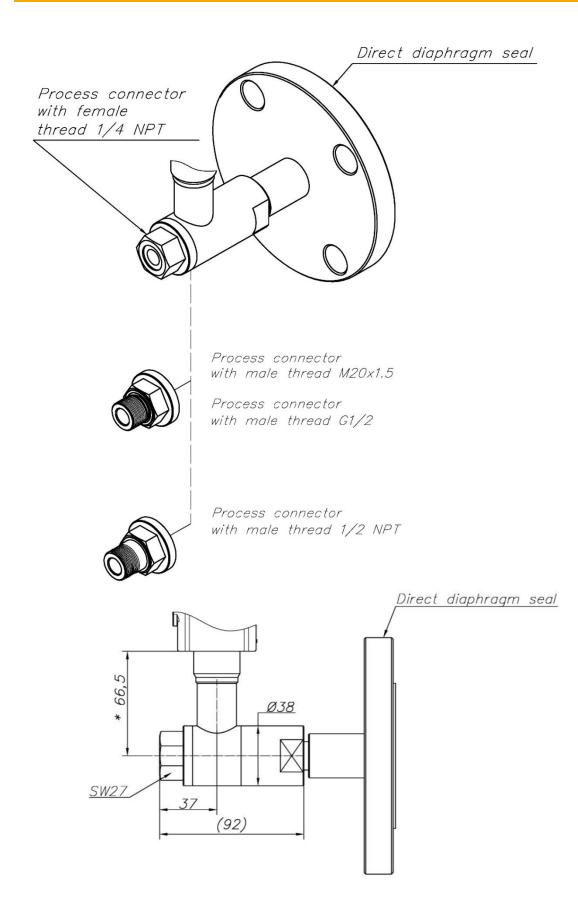


Figure 75. Direct separator and possible process connections.

\*80,5 mm for EXD version



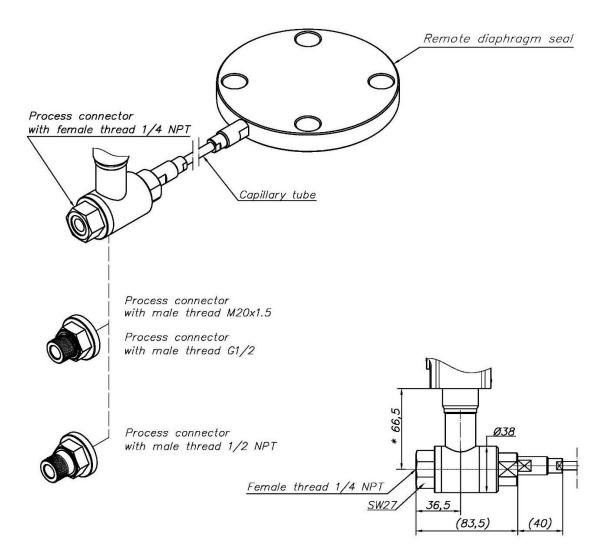


Figure 76. Distance separator and possible connections.

\*80,5 mm for EXD version



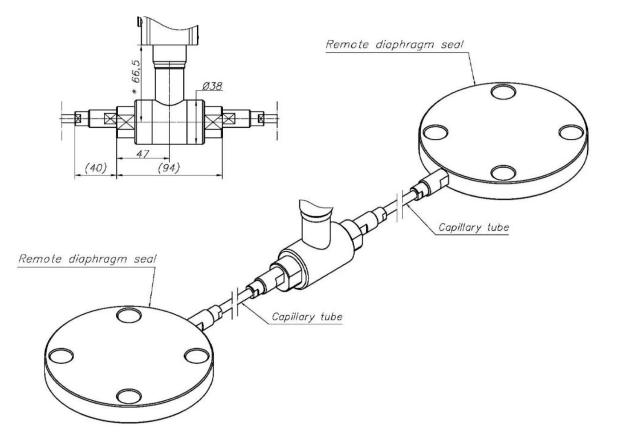


Figure 77. Example of connection using two distance separators.

\*80,5 mm for EXD version

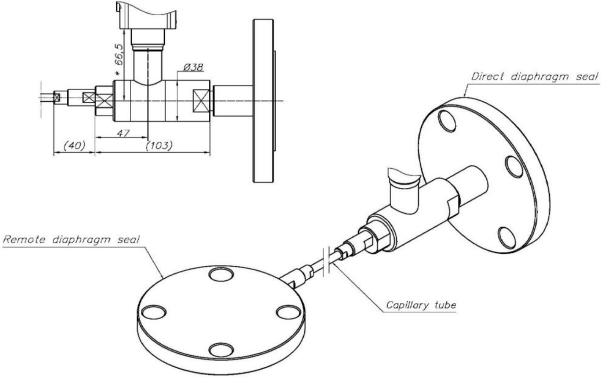


Figure 78. Example of connection using distance and direct separators.

\*80,5 mm for EXD version

Distance separators, unlike the direct separators, have a capillary tube that allows the transmitter to be moved from the pressure measuring point. This allows media measurements in the range from 150°C to 380°C. Capillary tubes have an inner diameter of 1 mm and are made of material 316Ti. Capillary tubes are available in two versions:

- in flexible conduit 304;
- in flexible conduit 304 coated with white PVC.


Hygienic separators of S-DIN type; S-CLAMP; S-POZIOM are equipped with standard hygienic connections and enable to perform the measurements in the food and pharmaceutical industry.

The separators are also designed with flanged connections according to international flange standards: ASME B16.5; EN1092-1; JIS B2220.

The tubular flange separators have a protruded diaphragm, which may reach into a multi-shell container close to its inner wall.

Distance flange separators with acid-resistant steel diaphragm are made in a standard with a radial capillary tube. Whereas the version of these separators with diaphragm made of materials other than acid-resistant steel or with (Teflon<sup>®</sup>, gold) plated diaphragm typically has a capillary tube outgoing in the separator axis.

### 14.1.1. Flanged seals with flush diaphragm S-P

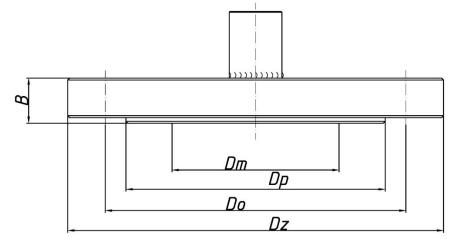

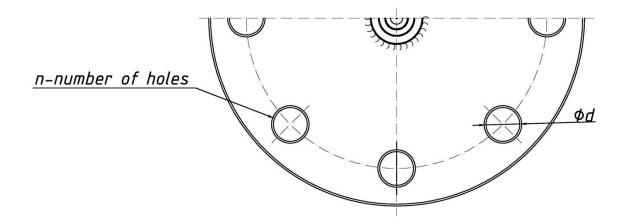


Figure 79. Flanged seals with flush diaphragm S-P.



		Using in each typ	e of separation	
	Direct <b>(S-P)</b>	Distance <b>(S-PK)</b>	With distance separators (S-PK)	With direct and distance separators (S-P/S-PK)
Transmitter				
APC-2000ALW Exd, Exi/Exd	$\checkmark$	$\checkmark$	×	×
APR-2000ALW Exd, Exi/Exd	$\checkmark$	$\checkmark$	×	×
APR-2000ALW				
Exd, Exi/Exd with diaphragm seals	×	×	$\checkmark$	$\checkmark$

Version	Diaphragm diameter <b>Dm</b>	Rabbet diameter <b>Dp</b>	Pitch diameter <b>Do</b>	Outer diameter <b>Dz</b>	Thickness <b>B</b>	Holes diameter <b>d</b>	Number of holes <b>n</b>
DN50 PN40	59	102	125	165	22	18	4
2" ANSI PN40	59	92	120.5	150	20	20	4
DN80 PN40	89	138	160	200	24	18	8
3" ANSI 150	89	127	152.5	190	24	20	4
DN100 PN40	89	162	190	235	24	22	8
4" ANSI 150	89	158	190.5	230	24	20	8

Table 33. Dimensions of S-P separators.

	Turne of concretion	Separator version				
Pressure gauge	Type of separation	DN50 / 2"	DN80 / 3"	DN100 / 4"		
APC(R)-2000ALW Exd,	Direct	10	2.5	2.5		
Exi/Exd *	Distance	100	25	25		
* The ranges listed in the ta	* The ranges listed in the table for the variable range transmitter APC(R)-2000ALW Exd, Exi/Exd shall be under-					

stood as set ranges.

Table 34. Recommended minimum measurement range width (kPa).

## Maximum pressure for PN40 $\rightarrow$ 4 MPa.

Turne of concerning	Absolute "zero" error per 10°C for the separator				
Type of separation	DN50 / 2"	DN80 / 3″	DN100 / 4"		
Direct	0.05 kPa	0.04 kPa	0.04 kPa		
Distance (capillary tube 2 m)	0.3 kPa	0.1 kPa	0.1 kPa		

Table 35. Additional absolute "zero" error due to the ambient temperature changes.



### Please note!

Additional "zero" error due to the changes of temperature in the oil separation system and in each case is considerably smaller than the errors given in the table.



	Direct separation		
Gauge fluid	Negative pressure measurements	Overpressure measurements	
High temperature (DC)	Max. 200°C - p≥ 5 kPa ABS	-10 315°C	-30 150°C
High temperature (DH)	Max. 250°C - p≥ 10 kPa ABS	+15 380°C	-30 150 C
Low temperature (AK)	Not recommended for pressure measurements < 20 kPa ABS	-60 200°C	

Table 36. Range of the measured medium temperature.

#### **ABS- absolute pressure**



## Please note!

For ambient temperature < -15°C it is recommended to warm up the capillary tubes with DC fluid.


Diaphragm and separator flange material: 1.4404 (steel 316L).

### **Special versions:**

- other standard ANSI or DIN;
- filled with edible oil (medium temp. -10 ... 150°C);
- direct diaphragm seal for medium temp. over 150°C;
- other to be agreed with Aplisens consultants.



direct

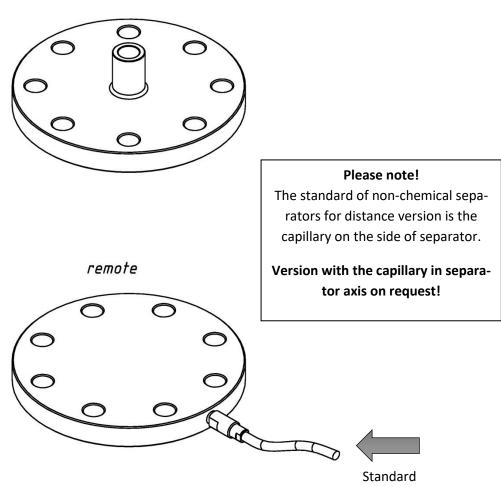

remote (capillary tube in diaphragm seal axis)

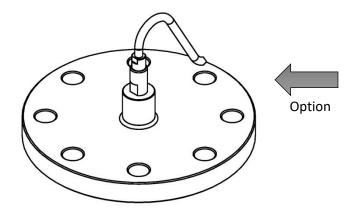


Figure 80. Types of flange separators S-P.

## 14.1.2. Flanged seals with extended diaphragm S-T

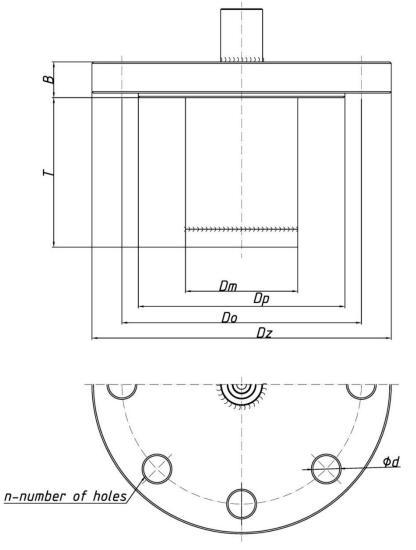


Figure 81. Flanged seals with extended diaphragm S-T.

A typical use of a tubular separator is a pressure or level measurement in a multi-shell tank where it is advisable that the diaphragm is located close to the inside of the tank.

Version	Diaphragm diameter <b>Dm</b>	Rabbet diameter <b>Dp</b>	Pitch diameter <b>Do</b>	Outer diameter <b>Dz</b>	Thickness <b>B</b>	Holes diameter <b>d</b>	Number of holes <b>n</b>	Tube length <b>T</b>
DN50 PN40	48	102	125	165	22	18	4	F0 100
2" ANSI PN40	48	92	120.5	150	20	20	4	50, 100,
DN80 PN40	75	138	160	200	24	18	8	150, 200
3" ANSI 150	75	127	152.5	190	24	20	4	200
DN100 PN40	89	162	190	235	24	22	8	50, 100,
4" ANSI 150	89	158	190.5	230	24	20	8	150

Table 37. Dimensions of S-T separators.



		Using in each type of separation					
	Direct <b>(S-T)</b>	Distance <b>(S-TK)</b>	With distance separators (S-TK)	With direct and distance separators (S-T/S-TK)			
Transmitter			CONTRACTOR				
APC-2000ALW Exd, Exi/Exd	$\checkmark$	$\checkmark$	×	×			
APR-2000ALW Exd, Exi/Exd	$\checkmark$	✓	×	×			
APR-2000ALW Exd, Exi/Exd with diaphragm seals	×	×	$\checkmark$	$\checkmark$			

Droccuro gougo	Type of	Separator version				
Pressure gauge	separation	DN50 / 2"	DN80 / 3"	DN100 / 4"		
APC(R)-2000ALW	Direct	10	10	10		
Exd, Exi/Exd *	Distance	600	50	25		
* The ranges listed in the table for the variable range transmitter APC(R)-2000ALW Exd, Exi/Exd shall be understood as set ranges.						

Table 38. Recommended minimum measurement range width (kPa).

## Maximum pressure for PN40 $\rightarrow$ 4 MPa.

Turne of concretion	Absolute "zero" error per 10°C for the separator			
Type of separation	DN50 / 2"	DN80 / 3"	DN100 / 4"	
Direct	0.2 kPa	0.06 kPa	0.04 kPa	
Distance (capillary tube 2 m)	1 kPa	0.2 kPa	0.1 kPa	

Table 39. Additional absolute "zero" error due to the ambient temperature changes for separator with a 100mm of tube.



## Please note!

Additional "zero" error due to changes of the temperature of the medium depends on the temperature gradient in the oil separation system and in any case it is significantly lower than the errors given in the table.

	Direct separation		
Gauge fluid	Negative pressure measurements	Overpressure measurements	
High temperature (DC)	Max. 200°C - p≥ 5 kPa ABS	-10 315°C	-30 150°C
High temperature (DH)	Max. 250°C - p≥ 10 kPa ABS	+15 380°C	-30 150 C
Low temperature (AK)	Not recommended for pressure measurements < 20 kPa ABS	-60 200°C	

Table 40. Range of the measured medium temperature.

#### **ABS- Absolute pressure**





#### Please note!

For ambient temperature < -15°C it is recommended to warm up the capillary tubes with DC fluid.

#### **Special versions:**

- other separators acc. to DIN or ANSI;
- direct diaphragm seal for medium temp. over 150°C;
- other to be agreed with Aplisens consultants.



 remote

 Version with the capillary in separator.

 Version with the capilla

remote (capillary tube in diaphragm seal axis)

direct

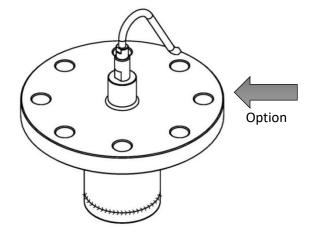


Figure 82. Types of flanged tubular separators S-T.



### 14.1.3. Flanged seals with extended diaphragm and direct diaphragm cleaning system S-TK-P

Separator S-TK-P is a special version of tubular distance separator S-TK-DN100/T=100mm, which is equipped with a diaphragm flushing unit. It is used for the measurements of extremely dense and viscous media with tendency to cover the diaphragm. The user can clean the diaphragm without dismantling the separator. The cleaning medium, e.g. water is supplied through two ducts located inside the separator.

Flushing shall be carried out periodically, in intervals depending on the properties of the measured medium. Connection of water to the flushing ducts is possible via two ball valves G  $\frac{1}{2}$ " located at the rear part of the separator.

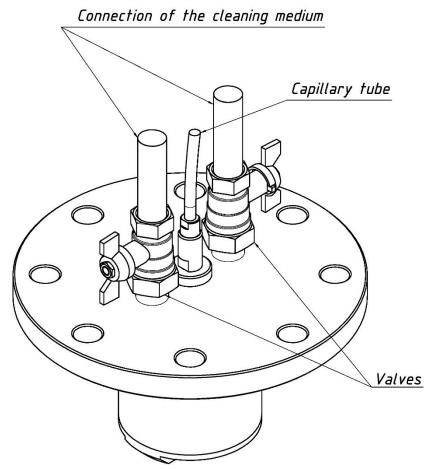


Figure 83. Separator S-TK-P with a built-in diaphragm rinsing unit, view in isometry.

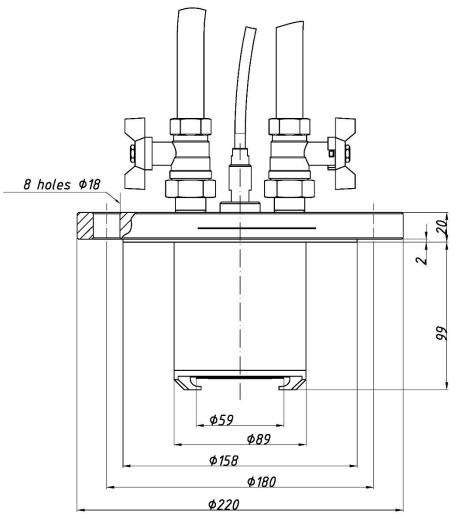


Figure 84. Overall dimensions of the separator S-TK-P with a built-in diaphragm rinsing unit.


		Using in each typ	e of separation	
	Direct	Distance <b>(S-TK-P)</b>	With distance separators (S-TK-P)	With direct and distance separators (S-TK-P)
Transmitter			COLOR FRANKLING	
APC-2000ALW	×	$\checkmark$	×	×
Exd, Exi/Exd				
APR-2000ALW Exd, Exi/Exd	×	$\checkmark$	×	×
APR-2000ALW				
Exd, Exi/Exd with diaphragm seals	×	×	$\checkmark$	√*
	*S-TK-P se	parator is intended to dista	ance mounting only.	


## 14.1.4. Chemical flanged seals with flush diaphragm S-Ch

Chemical flanged seals separate the transmitter from adverse parameters characterising the medium, such as:

- high corrosivity;
- low or high temperature, increased viscosity, contamination;
- system vibrations.

Diaphragms and rabbets of chemical-resistant separators are made of selected materials resistant to corrosive effect of the medium, taking into consideration the chemical composition, the expected range of concentrations and the range of temperatures.

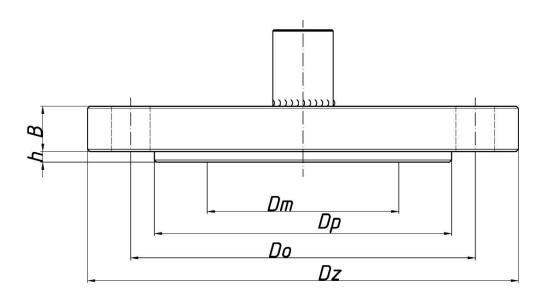

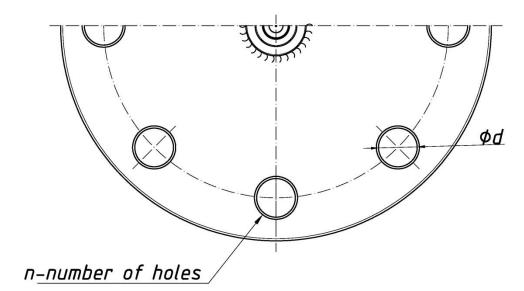

### Figure 85. Overall dimensions of S-Ch separator with flush diaphragm.



		Using in each typ	e of separation	
	Direct <b>(S-Ch)</b>	Distance <b>(S-ChK)</b>	With distance separators (S-ChK)	With direct and distance separators (S-Ch/S-ChK)
Transmitter				
APC-2000ALW Exd, Exi/Exd	$\checkmark$	$\checkmark$	×	×
APR-2000ALW Exd, Exi/Exd	✓	✓	×	×
APR-2000ALW Exd, Exi/Exd with diaphragm seals	×	×	$\checkmark$	$\checkmark$

Material of wetted parts.	Version	Diaphragm diameter <b>Dm</b>	Rabbet diameter <b>Dp</b>	Pitch diameter <b>Do</b>	Outer diameter <b>Dz</b>	Thickness <b>B</b>	Thickness <b>h</b>	Holes diameter <b>d</b>	Number of holes <b>n</b>
Hastelloy,	DN50 PN10/40	59	98	125	165	18	7	18	4
nickel, Monel	DN80 PN25/40	89	132	160	200	22	7	18	8
Titesium	DN50 PN10/40	59	98	125	165	24	6	18	4
Titanium	DN80 PN25/40	89	138	160	200	22	6	18	8
Tantalum-	DN50 PN10/40	59	102	125	165	18	3	18	4
Tantalum	DN80 PN25/40	89	138	160	200	22	3	18	8
Tantalum-Teflon	DN50 PN16	59	102	125	165	18	8	18	4
Titanium-Teflon	DN80 PN10/16	89	138	160	200	22	8	18	8
Teflon	DN50 PN10/40	59	102	125	165	18	7	18	4
	DN80 PN25/40	89	138	160	200	22	7	18	8

Table 41. The dimensions of the Aplisens separators are similar to those specified in DIN EN1092-1.

Material of	Version	Diaphragm diameter	Rabbet diameter	Pitch diameter	Outer diameter	Thickness	Thickness	Holes diameter	Number of holes
wetted parts.		Dm	Dp	Do	Dz	В	h	d	n
Hastelloy,	2" ANSI 150	59	92	120.5	150	18	7	20	4
nickel, Monel	3" ANSI 150	89	123	152.5	190	22	7	20	4
Tantalum-	2" ANSI 150	59	92	120.5	150	18	2	20	4
Tantalum	3" ANSI 150	89	127	152.5	190	22	2	20	4
Tantalum-Teflon	2" ANSI 150	59	92	120.5	150	18	8	20	4
Titanium-Teflon	3" ANSI 150	89	127	152.5	190	22	8	20	4
Teflon	2" ANSI 150	59	92	120.5	150	18	7	20	4
	3" ANSI 150	89	127	152.5	190	22	7	20	4

Table 42. The dimensions of the Aplisens separators are similar to those specified in ANSI ASME 16.5.

	e gauge Type of Separator version	or version	
Pressure gauge	separation	DN50 PN16	DN80 PN40
APC(R)-2000ALW	Direct	40	10
Exd, Exi/Exd	Distance	100	40

Table 43. Recommended minimum measurement range width (kPa).





#### Please note!

Diaphragms and rabbets of chemical-resistant separators are made of selected materials resistant to corrosive effect of the medium, taking into account the chemical composition, the expected range of concentrations and the temperature range.

Turne of concretion	tion Absolute "zero" error per 10°	er 10°C for the separator
Type of separation	DN50	DN80
Direct	0.5 kPa	0.2 kPa
Distance (capillary tube 2 m)	1 kPa	0.4 kPa

Table 44. Additional absolute "zero" error due to the ambient temperature changes.

Diaphragm material	Rabbet material	Permissible pressure	Some restrictions for use	]{8
Hastelloy	Hastelloy	4 MPa	Measurement of hot concentrated hydrochloric acid	
Monel	Monel	4 MPa	Acid measurement	
Nickel	Nickel	4 MPa	Acid measurement	
Tantalum	Tantalum	1.6 MPa	Hydrofluoric acid measurement, soda lye measurement	
Tantalum	Tantalum	1.6 MPa	Presence of gaseous chlorine or fluorine; tem- perature of medium greater than 95°C	
Titanium	Titanium	4 MPa	Presence of dry chlorine, measurements in Ex zones	
Teflon*	Teflon*	4 MPa	Measurements of negative pressure, meas- urements of abrasive media, additionally limi- tation of Teflon application	

Table 45. Offered chemical-resistant materials with the major application limits.

\* Diaphragm material — Hastelloy with sprayed-on Teflon layer, rabbet material – steel 316L with sprayed-on Teflon layer.

#### Medium temperature range:

- -30 ... 180°C for distance separation;
- -30 ... 150°C for direct separation.

#### **Special versions:**

- filling with FLUOROLUBE fluid;
- direct diaphragm seal for medium temp. over 150°C;
- gold plated wetted parts material- after consulting with Aplisens.

#### 14.1.5. Threaded seals with large diaphragm S-Comp

Separators S-Comp are equipped with a large separating diaphragm (Ø70) while maintaining an economic, compact design of the unit. Advantages of S-Comp type separators:

- possibility of performing measurements with low range width;
- ease of assembly.



		Using in each type of separation				
	Direct <b>(S-Comp)</b>	Distance <b>(S-CompK)</b>	With distance separators (S-CompK)	With direct and distance separators (S-Comp/S-CompK)		
Transmitter						
APC-2000ALW Exd, Exi/Exd	$\checkmark$	$\checkmark$	×	×		
APR-2000ALW Exd, Exi/Exd	$\checkmark$	$\checkmark$	×	×		
APR-2000ALW Exd, Exi/Exd with diaphragm seals	×	×	$\checkmark$	$\checkmark$		

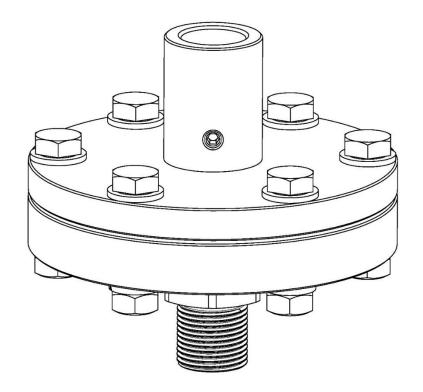


Figure 86. S-Comp separator - view in isometry.

APLISENS<sup>®</sup>

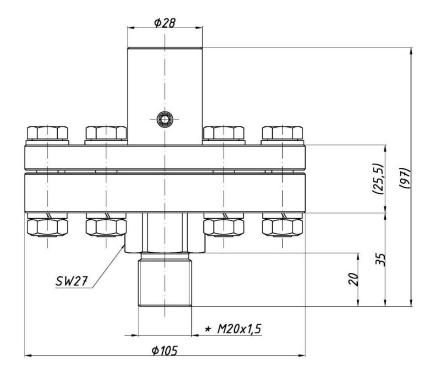


Figure 87. S-Comp separator - overall dimensions.

\*Optionally G ½

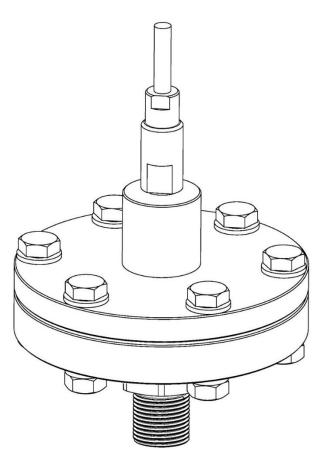


Figure 88. S-CompK distance separator with capillary in axis.

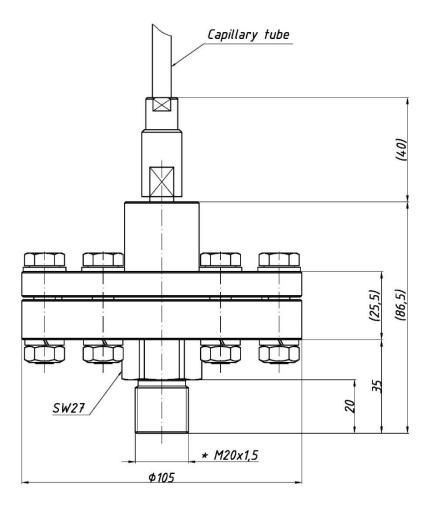


Figure 89. S-CompK separator - overall dimensions.

\*Optionally G ½

## S-Comp ø51 separator

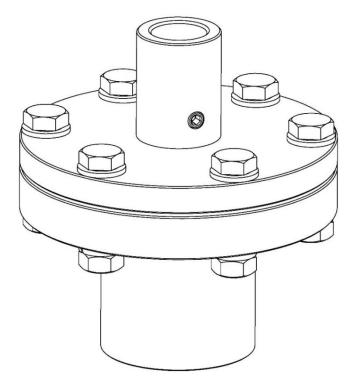


Figure 90. S-Comp ø51 separator - view in isometry.

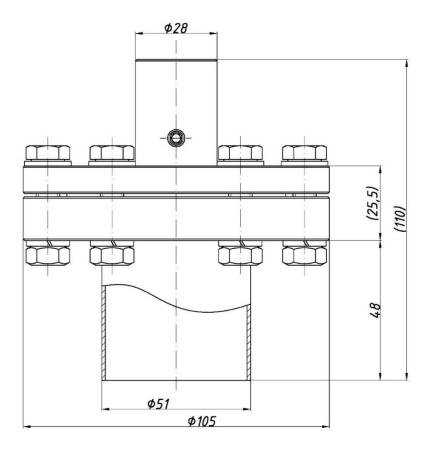


Figure 91. S-Comp ø51 separator - overall dimensions.

148 Revision 01.A.001/2020.11

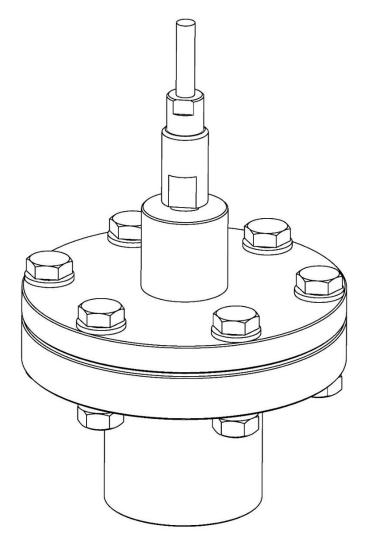


Figure 92. S-CompK ø51 separator - view in isometry.

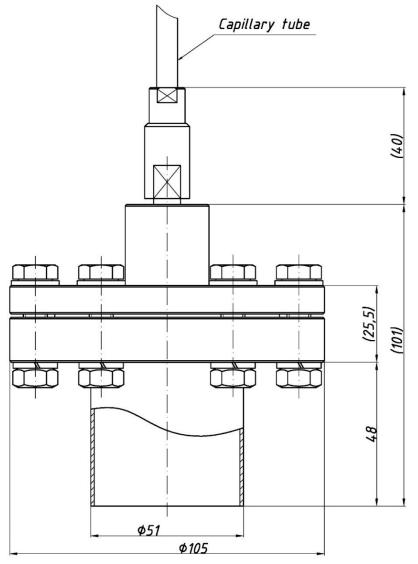


Figure 93. S-CompK ø51 - overall dimensions.

Pressure gauge	Type of separation	Minimum measurement range width		
APC(R)-2000ALW Exd, Exi/Exd*	Direct	20		
APC(R)-2000ALW EXU, EXI/EXU	Distance	50		
* The ranges listed in the table for the variable range transmitter APC(R)-2000ALW Exd, Exi/Exd shall be				
understood as set ranges.				

Table 46. Recommended minimum measurement range width of separator S-Comp/K (kPa).

### Max. measuring range: 0 ... 1,6 MPa

Type of separation	Absolute "zero" error
Direct	0.06 kPa/10°C
Distance capillary tube 2 m	0.2 kPa/10°C

Table 47. Additional absolute "zero" error due to the ambient temperature changes.



Please note!

Additional "zero" error due to the changes of the medium temperature depends on the temperature gradient in the oil separation system and in each case it is considerably smaller than the errors given in the table.



### Medium temperature range:

- -30 ... 200°C for distance separation;
- -30 ... 150°C for direct separation.

### **Special versions:**

- diaphragm made of Hastelloy C 276;
- capillary outlet at the side of the diaphragm seal;
- direct diaphragm seal for medium temp. over 150°C;
- other to be agreed with Aplisens consultants.

Separator diaphragm, flange and counter flange material: 1.4404 (steel 316L).

### 14.1.6. Threaded seals with large diaphragm S-Comp10/25/60MPa

Separators S-Comp are equipped with a large separating diaphragm (Ø70) while maintaining an economic, compact design of the unit. Advantages of S-Comp type separators:

- possibility of performing measurements with low range width;
- ease of assembly.

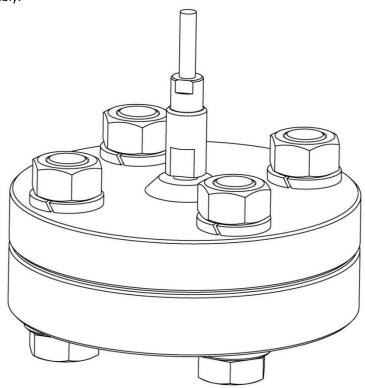


Figure 94. S-Comp10MPa separator - view in isometry.

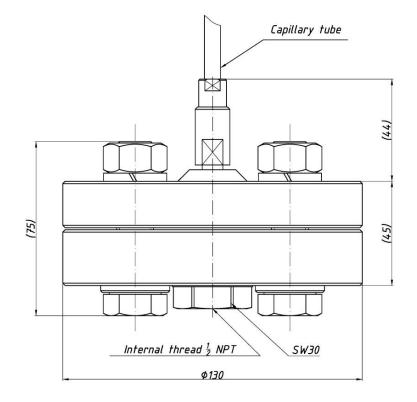


Figure 95. S-Comp10MPa separator - overall dimensions.

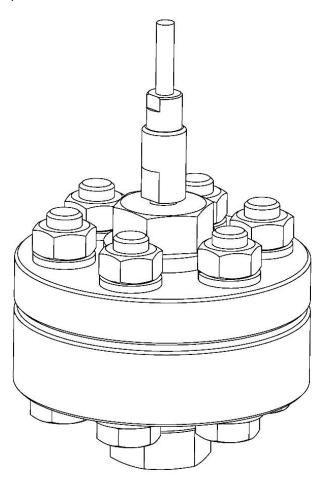


Figure 96. S-Comp25MPa separator - view in isometry.

Aplisen S°

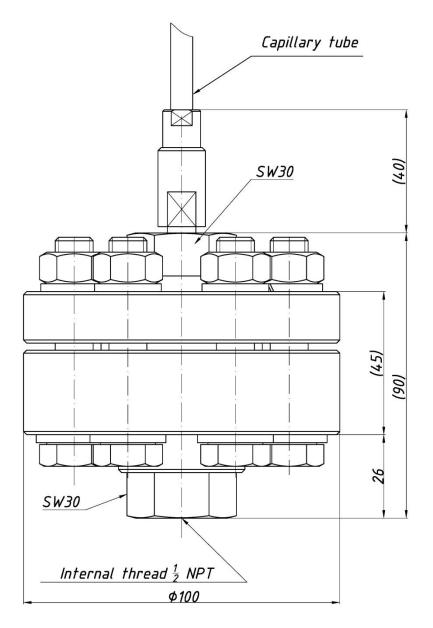


Figure 97. S-Comp25MPa separator - overall dimensions.

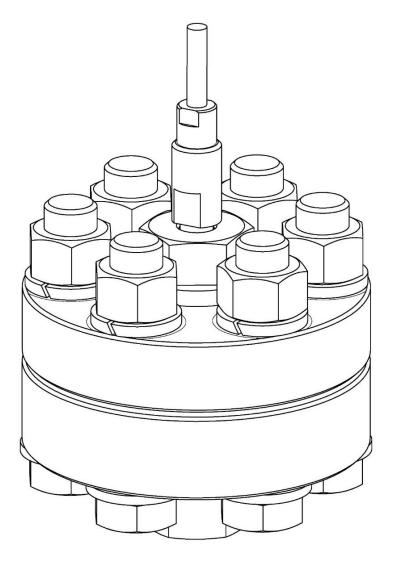


Figure 98. S-Comp60MPa separator - view in isometry.

APLISENS<sup>®</sup>

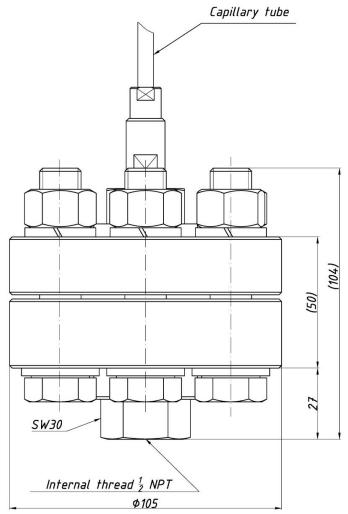


Figure 99. S-Comp60MPa separator - overall dimensions.

	Using in each type of separation					
	Direct	Distance (S-Comp10/25/60)	With distance separators (S-Comp10/25/60)	With direct and distance separators (S-Comp10/25/60)		
Transmitter		e e e e e e e e e e e e e e e e e e e				
APC-2000ALW	×	$\checkmark$	×	×		
Exd, Exi/Exd APR-2000ALW						
Exd, Exi/Exd	×	$\checkmark$	×	×		
APR-2000ALW						
Exd, Exi/Exd with diaphragm seals	×	×	$\checkmark$	$\checkmark$		
	*S-Comp10/25/60MPa is intended for distance mounting only.					



Pressure gauge	Type of separation	Minimum measurement range width
APC-2000ALW Exd, Exi/Exd	Distance	1 MPa
APR-2000ALW Exd, Exi/Exd with diaphragm seals	Distance with two separators	16 kPa

Table 48. Recommended minimum range width of separator S-Comp10/25/60MPa.

Maximum measuring range:

- S-Comp10MPa: 10 MPa;
- S-Comp25MPa: 25 MPa;
- S-Comp60MPa: 60 MPa.

Permissible overload:

- S-Comp10MPa: 16 MPa;
- S-Comp25MPa: 28 MPa;
- S-Comp60MPa: 70 MPa.

Medium temperature range: -30 ... 180°C.

Special version:

 separators S-Comp25MPa, S-Comp60MPa with opening ¼ NPT which enables to flush the diaphragm.

Separator body and diaphragm material: steel 316L.

Gasket material:

- S-Comp10MPa, S-Comp25MPa Teflon;
- S-Comp60MPa Monel.

### 14.1.7. Threaded chemical seals with large diaphragm S-CompCh

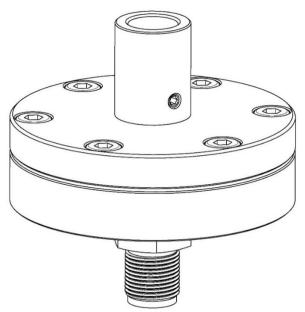


Figure 100. S-CompCh separator - view in isometry.

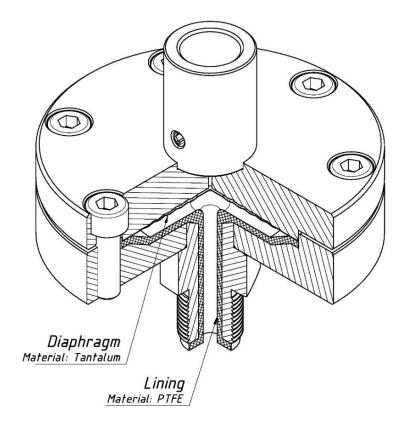


Figure 101. S-CompCh - view of half section.

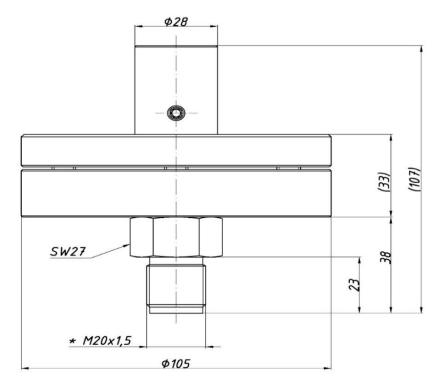


Figure 102. S-CompCh - overall dimensions.

\*Optionally G ½

(PLISENS<sup>®</sup>

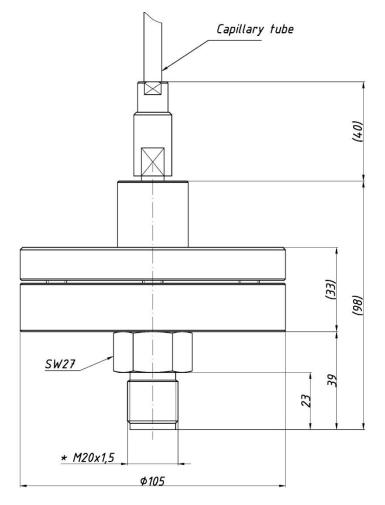


Figure 103. S-CompChK with capillary in axis - overall dimensions.

\*Optionally G ½

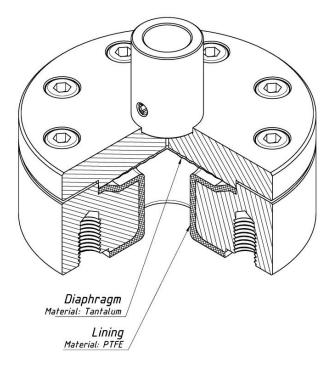


Figure 104. S-CompCh DN25 separator in half section view.



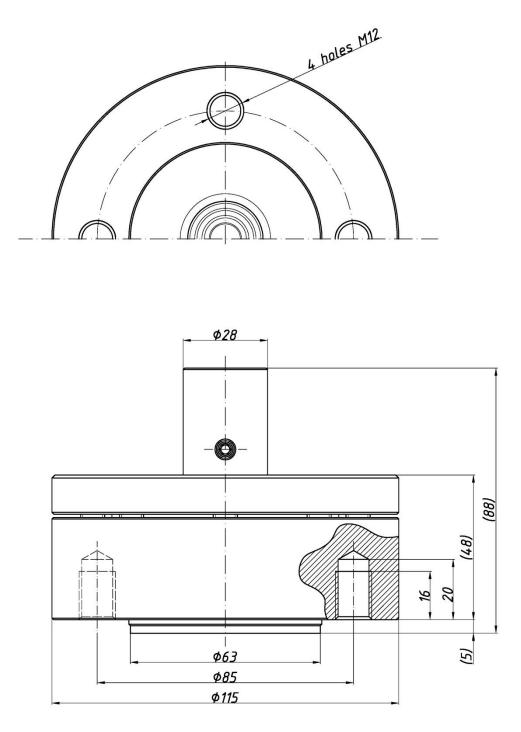


Figure 105. Separator S-CompCh DN25 - overall dimensions.

Separators S-CompCh are used for pressure measurements of chemically aggressive media. Separator parts that are in direct contact with measured medium are made of Teflon and Tantalum. These materials allow for the pressure measurements of many aggressive chemical compounds such as hydrochloric, sulphuric and nitric acid of any concentrations. Separators S-CompCh shall not be used for the measurement of hydrofluoric acid, gaseous fluorine and soda lye.



	Using in each type of separation				
	Direct <b>(S-CompCh)</b>	Distance <b>(S-CompChK)</b>	With distance separators (S-CompChK)	With direct and distance separators (S-Comp/ S-CompChK)	
Transmitter					
APC-2000ALW Exd, Exi/Exd	$\checkmark$	$\checkmark$	×	×	
APR-2000ALW	$\checkmark$	$\checkmark$	×	×	
Exd, Exi/Exd	•	•	••	••	
APR-2000ALW					
Exd, Exi/Exd with diaphragm seals	×	×	$\checkmark$	$\checkmark$	

Type of separation	Minimum measurement range width
Direct	40
Distance	100
	Direct

Table 49. Recommended minimum measurement range width of separator S-CompCh/K (kPa).

### Maximum measurement range width: 0 ... 1.6 MPa.

Type of separation	Absolute "zero" error
Direct	0.1 kPa/10°C
Distance (capillary tube 2 m)	0.6 kPa/10°C

Table 50. Additional absolute "zero" error due to the ambient temperature changes.



### Please note!

The additional "zero" error due to changes of the medium temperature depends on the temperature gradient in the oil separation system and in every case is significantly smaller than the errors given in the table above.

Medium temperature range: -30 ... 100°C. Permissible overload: 2.5 MPa.

### 14.1.8. Sanitary diaphragm seals

Separators S-DIN and S-Clamp are equipped with standard hygienic connections enabling the execution of measurements under aseptic conditions. Typical application of the above-mentioned separators is the measurement of pressure and level in the food and pharmaceutical industry. Aseptic separator S-Poziom is most frequently installed in the bottom of tanks. Thanks to a special design with protruded diaphragm, it does not form a pit in the area of the tank head, which eliminates the problem of products or cleaning media deposited in the pressure connection.



	Using in each type of separation				
	Direct	Distance	With distance separators	With direct and distance separators	
	S-DIN/ S-	SMS/ S-Clamp/ S-Poziom 50/ S-Poziom 25/ S-DRD 65/ S-Varivent <sup>®</sup> .			
Transmitter					
APC-2000ALW Exd, Exi/Exd	$\checkmark$	$\checkmark$	*	×	
APR-2000ALW			×	×	
Exd, Exi/Exd	V	V	×	· · · · · · · · · · · · · · · · · · ·	
APR-2000ALW					
Exd, Exi/Exd	×	×	$\checkmark$	$\checkmark$	
with diaphragm seals					

Transmitter	Type of separation	Minimum width measuring range			
APC(R)-2000ALW Exd, Exi/Exd *	Direct	10			
APC(R)-2000ALVV EXU, EXI/EXU	Distance	50			
*The ranges listed in the table for the variable range transmitter APC(R)-2000ALW Exd, Exi/Exd sh					
be understood as set ranges.					
le 51 Decembre ad estructure reconverse recence width (I/De)					

Table 51 Recommended minimum measurement range width (kPa).

#### Maximum measurement range: 0 ... 2.5 MPa.



#### Please note!

For the purpose of measurements within the ranges lower than the recommended ones, it is suggested to use the following types of separators special Clamp 3" and DIN 80 mm.

Turne of concretion	Absolute "zero" error p	er 10°C for the separator
Type of separation	S-Clamp and S-DIN	S-Poziom
Direct	0.08 kPa/10°C	0.03 kPa/10°C
Distance (capillary tube 2 m)	0.5 kPa/10°C	0.3 kPa/10°C

Table 52. Additional absolute "zero" error due to the ambient temperature changes.



For a set of pressure transmitter and special separator (with larger diameter) temperature errors diminish proportionally to the third power of the active diaphragm diameter.



### Please note!

Additional "zero" error due to the changes of the medium temperature depends on the temperature gradient in the oil separation system and in each case it is considerably smaller than the errors given in the table above.

S-DIN

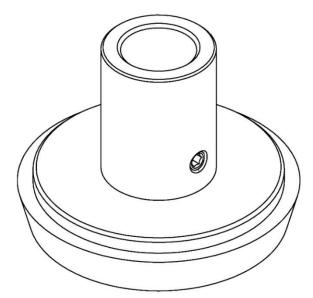


Figure 106. S-DIN separator. View in isometry.

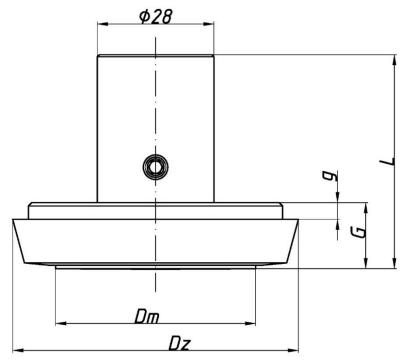


Figure 107. S-DIN - overall dimensions.

Separator	Dz [mm]	Dm [mm]	G [mm]	g [mm]	L [mm]
S-DIN 25	44	25	15,8	5	52,3
S-DIN 32	50	30	15,8	5	52,3
S-DIN 40	56	35	14,8	4	51,3
S-DIN 50	68,5	48	15,8	4	51,3
S-DIN 65	86	59	16,8	4	52,3
S-DIN 80	100	75	16,8	4	52,3

Table 53. Size of S-DIN separators acc. to DIN 11851, for pipes acc. to DIN 11850 series 2.

# S-K DIN (distance separator with capillary in axis)

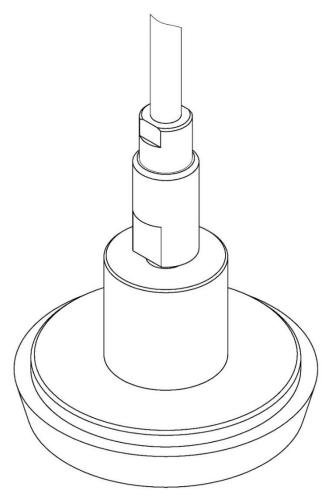


Figure 108. S-K DIN with capillary in axis - view in isometry.

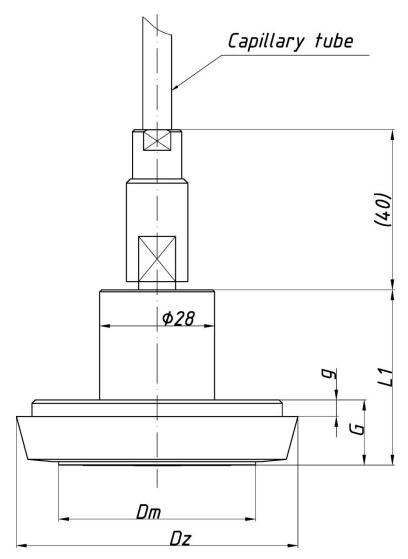


Figure 109. S-K DIN separator with capillary in axis - overall dimensions.

Separator	Dz [mm]	Dm [mm]	G [mm]	g [mm]	L1 [mm]
S-K DIN 25	44	25	15.8	5	43,3
S-K DIN 32	50	30	15.8	5	43,3
S-K DIN 40	56	35	14.8	4	42,3
S-K DIN 50	68.5	48	15.8	4	42,3
S-K DIN 65	86	59	16.8	4	43,3
S-K DIN 80	100	75	16.8	4	43,3

Table 54. Dimensions of separators S-K DIN according to DIN 11851 for pipes consistent with DIN 11850 Series 2.

### S-SMS

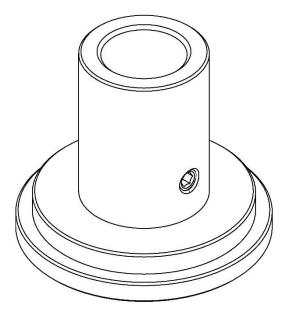


Figure 110. S-SMS separator. View in isometry.

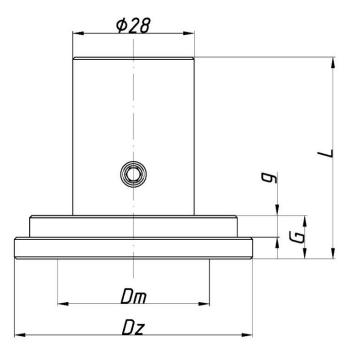


Figure 111. Overall dimensions of separator S-SMS.

Separator	Dz [mm]	Dm [mm]	G [mm]	g [mm]	L [mm]
S-SMS 1"	35.5	25	6.2	2	42.7
S-SMS 1.5"	54.9	35	10	4	46.5
S-SMS 2"	64.9	48	10	5	46.5

Table 55. Dimensions of separator S-SMS according to SMS (SS 3352) for pipes consistent with ISO 1127 Series 2 or ISO 2037/1992.

# Separator S-K SMS (distance with capillary in axis of separator)

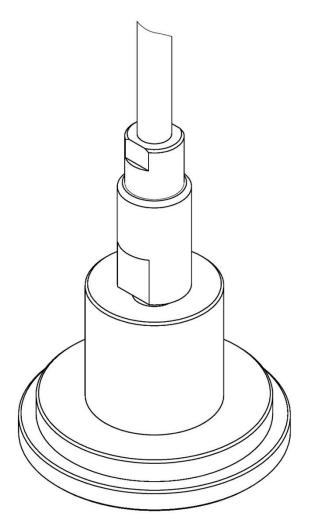


Figure 112. S-K SMS separator with capillary in axis. View in isometry.

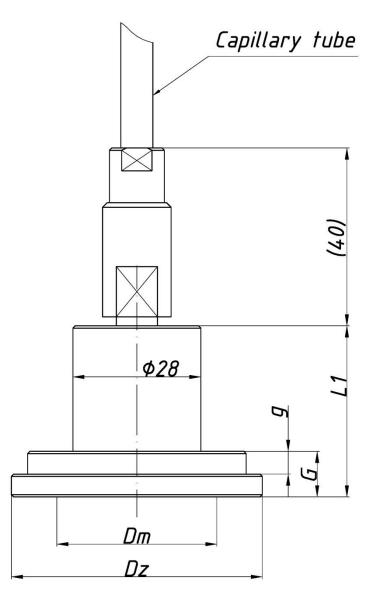


Figure 113. S-K SMS separator with capillary in axis - overall dimensions.

Separator	Dz [mm]	Dm [mm]	G [mm]	g [mm]	L1[mm]
S-K SMS 1"	35,5	25	6,2	2	33,7
S-K SMS 1,5"	54,9	35	10	4	37,5
S-K SMS 2"	64,9	48	10	5	37,5

Table 56. Dimensions of separator S-K SMS according to SMS (SS 3352) for pipes consistent with ISO 1127 Series 2 or ISO 2037/1992.

## S-Clamp


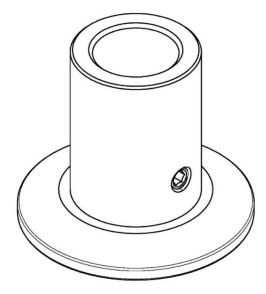


Figure 114. S-Clamp separator. View in isometry.



Separator	Dz [mm]	Dm [mm]	G [mm]	L [mm]
S-Clamp 1"	50.5	22	7	43.5
S-Clamp 1.5"	50.5	35	7	43.5
S-Clamp 2"	64	48	7	43.5
S-Clamp 2.5"	77.5	54	7	43.5
S-Clamp 3"	91	70	7.8	44.3
S-Clamp 4"	119	89	9.8	45.8

Table 57. Dimensions of separator S-Clamp according to DIN 32676 for pipes consistent with DIN 11866 Series C or ASME BPE.

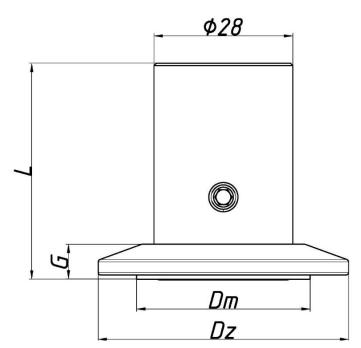

Separator	Dz [mm]	Dm [mm]	G [mm]	L [mm]
S-Clamp DN 25	50.5	25	7	43.5
S-Clamp DN 40	50.5	35	7	43.5
S-Clamp DN 50	64	48	7	43.5
S-Clamp DN 65	91	70	7.8	44.3
S-Clamp DN 100	119	89	9.8	45.8

Table 58. Dimensions of separator S-Clamp according to DIN 32676 for pipes consistent with DIN 11866 SeriesA or DIN 11850 series 2.

## S-K Clamp (distance separator with capillary in axis)

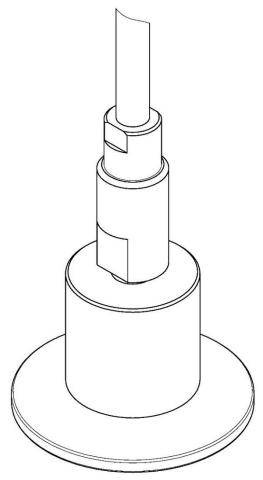


Figure 116. S-K Clamp separator (distance separator with capillary in axis).

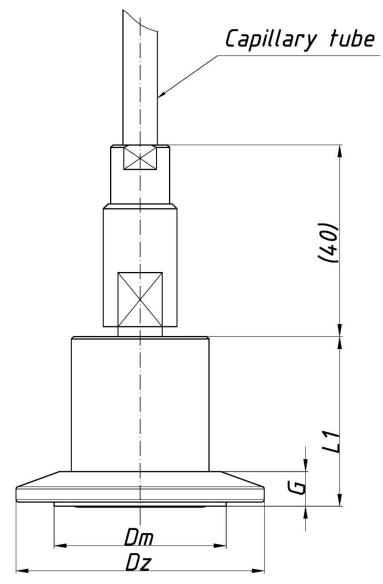


Figure 117. S-K Clamp separator - overall dimensions.

Separator	Dz [mm]	Dm [mm]	G [mm]	L1 [mm]
S-K Clamp 1"	50.5	22	7	34.5
S-K Clamp 1.5"	50.5	35	7	34.5
S-K Clamp 2"	64	48	7	34.5
S-K Clamp 2.5"	77.5	54	7	34.5
S-K Clamp 3"	91	70	7.8	35.3
S-K Clamp 4"	119	89	9.8	36.8

Table 59. Dimensions of separator S-K Clamp according to DIN 32676 for pipes consistent with DIN 11866 series C or ASME BPE.

Separator	Dz [mm]	Dm [mm]	G [mm]	L1 [mm]
S-K Clamp DN 25	50.5	25	7	34.5
S-K Clamp DN 40	50.5	35	7	34.5
S-K Clamp DN 50	64	48	7	34.5
S-K Clamp DN 65	91	70	7.8	35.3
S-K Clamp DN 100	119	89	9.8	36.8

Table 60. Dimensions of separator S-K Clamp according to DIN 32676 for pipes consistent with DIN 11866 series A or DIN 11850 series 2.

## S-Poziom 25

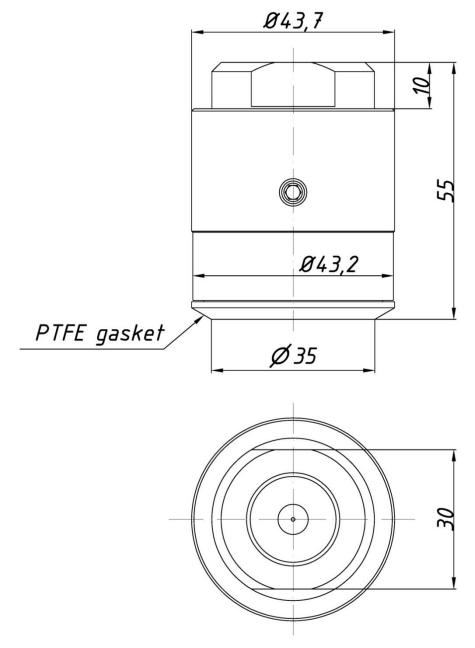


Figure 118. S-Poziom 25 separator - overall dimensions.

S-K Poziom 25 (distance separator with capillary in axis)


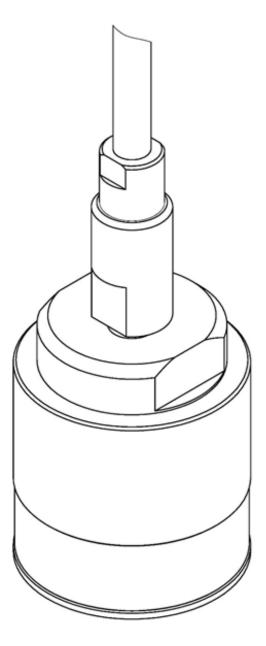


Figure 119. S-K Poziom 25 distance separator with capillary in axis - view in isometry.



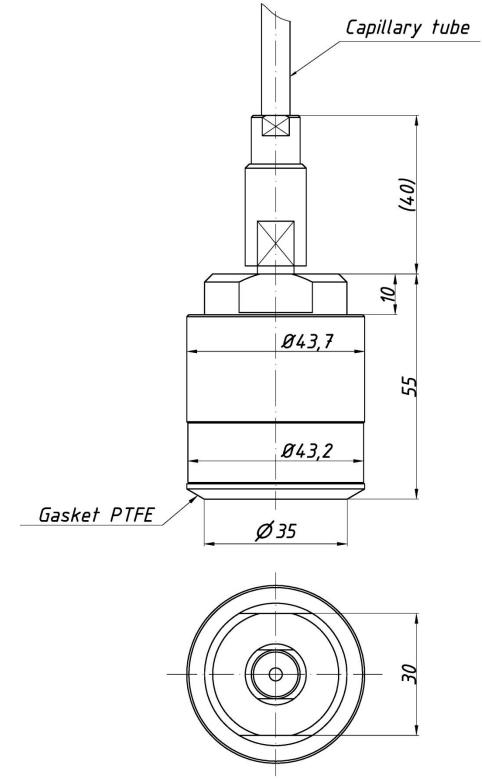

## S-Poziom 50

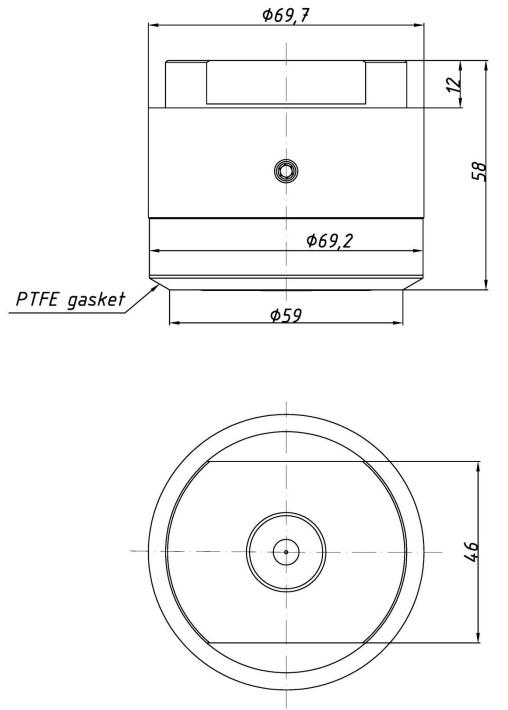


Figure 121. S-Poziom 50 separator - overall dimensions.

# S-K Poziom 50 (distance separator with capillary in axis)


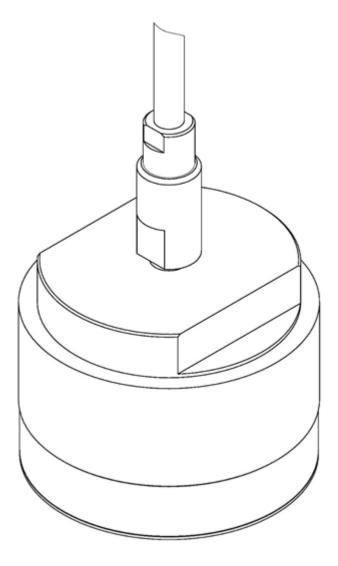


Figure 122. S-K Poziom 50 distance separator with capillary in axis - view in isometry.



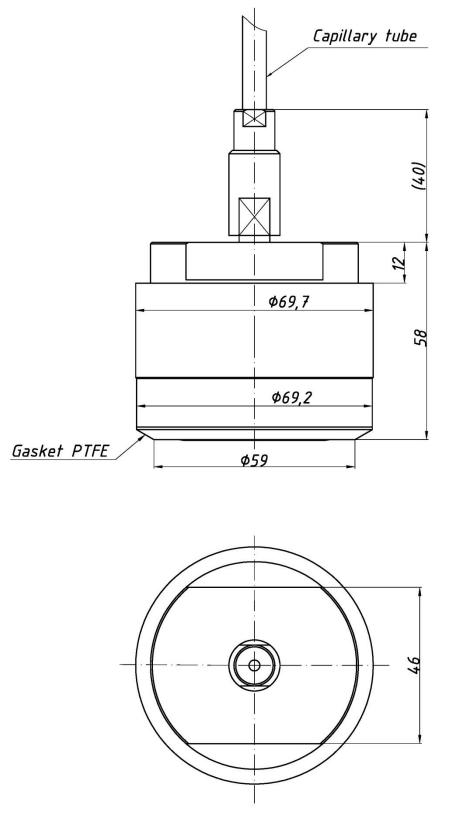

## S-DRD 65

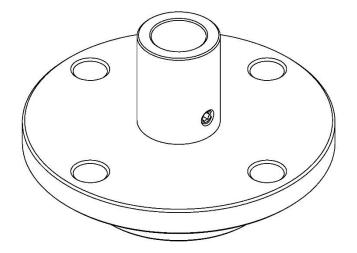
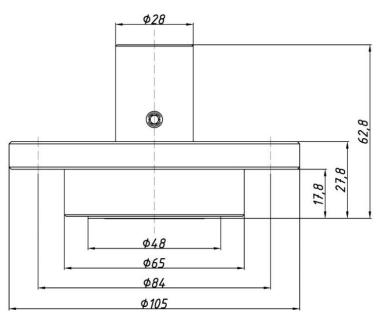


Figure 124. S-DRD 65 separator - view in isometry.



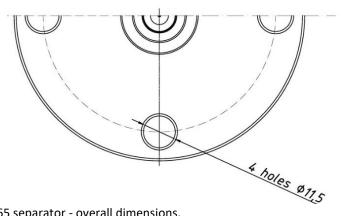


Figure 125. S-DRD 65 separator - overall dimensions.

# S-K DRD 65 (distance separator with capillary in axis)

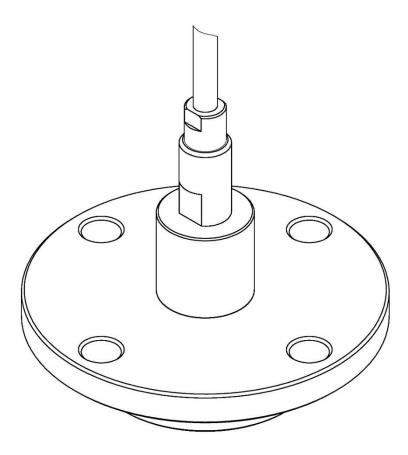
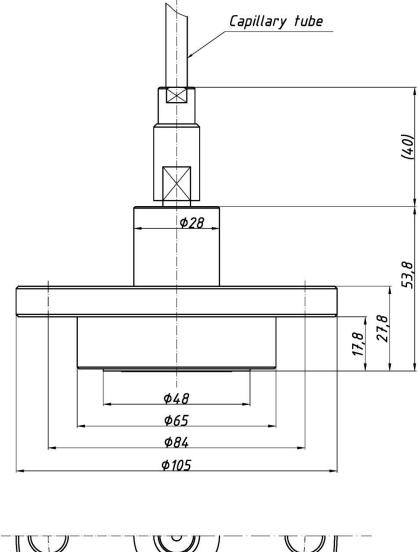


Figure 126. S-K DRD 65 (distance separator with capillary in axis) - view in isometry.



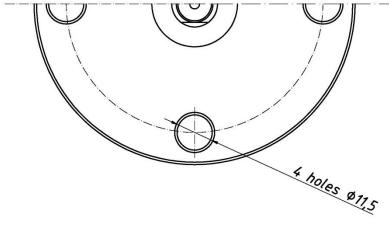


Figure 127. S-K DRD 65 (distance separator with capillary in axis) - overall dimensions.

## **S-Varivent**

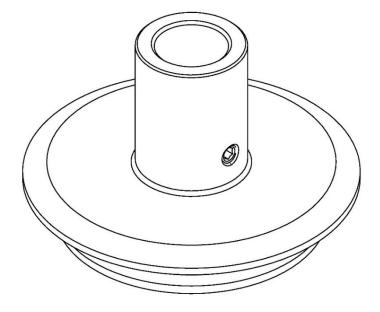


Figure 128. S-Varivent DN50 separator - view in isometry.

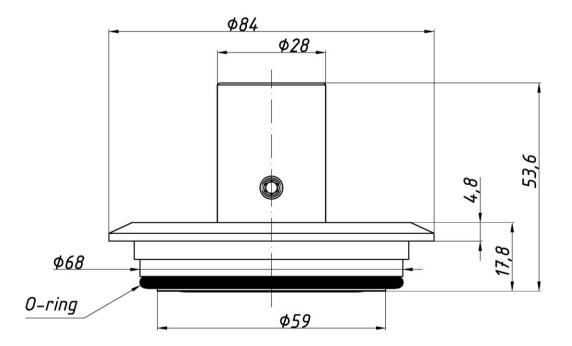


Figure 129. S-Varivent DN50 separator - overall dimensions.

S-K Varivent (distance separator with capillary in axis)

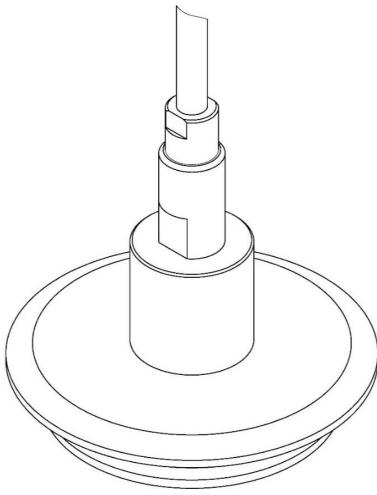


Figure 130. S-K Varivent DN50 (distance separator with capillary in axis) - view in isometry.

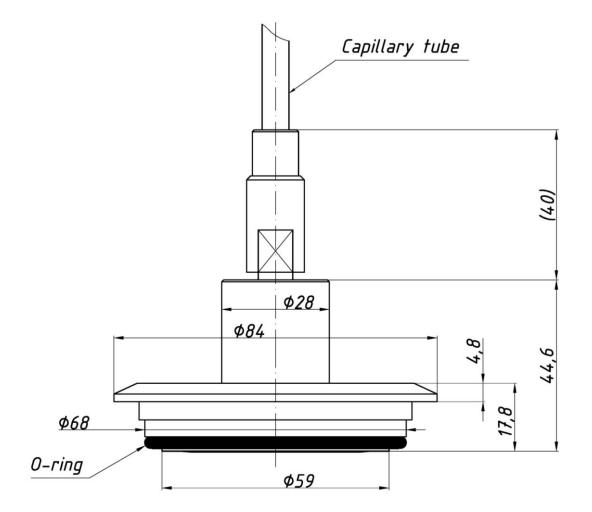


Figure 131. S-K Varivent DN50 (distance separator with capillary in axis) - overall dimensions.

Separator body and diaphragm material: 1.4404 (steel 316L).

## Medium temperature range:

- -30 ... 200°C for distance separation;
- -20 ... 150°C for direct separation;
- -30 ... 85°C for operation in the range up to -100 kPa.

### **Special versions:**

- filling with NEOBEE M-20 liquid permitted to come into contact with food (medium temperature: -10 ... 150°C);
- separators sanitary seals, e.g. DIN 25 mm, DIN 40 mm or Tri-Clamp<sup>®</sup> 1", Tri-Clamp1.5", SMS 50 mm, DRD, Homogenizator, Varivent;
- seal with customised connection;
- direct diaphragm seal for medium temp. over 150°C;
- other to be agreed with Aplisens consultants.



### 14.1.9. S-Mazut separators

Separator S-Mazut is used to measure the media characterized by increased viscosity and temperature up to 150°C (315°C for distance separation). A typical application is the measurement of mazout pressure in burners and mazout nodes of power boilers.

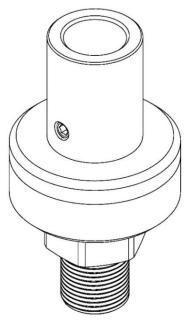


Figure 132. S-Mazut separator. View in isometry.

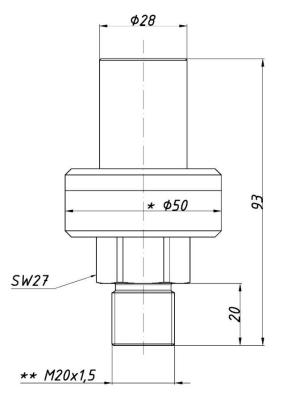


Figure 133. S-Mazut separator - overall dimensions.

Please note! \*special execution Ø 75, Ø 100; \*\*optionally G ½.



S-MazutK (distance separator with capillary in axis)

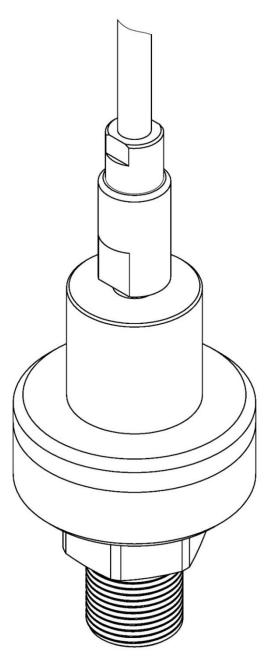


Figure 134. S-MazutK distance separator with capillary in axis. View in isometry.

APLISENS<sup>®</sup>

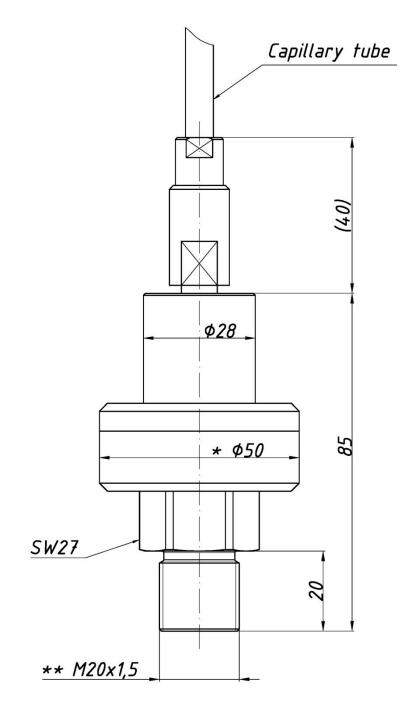


Figure 135. S-MazutK distance separator with capillary in axis - overall dimensions.

Please note! \*special execution Ø 75, Ø 100; \*\*optionally G ½.



		Using in each typ	e of separation	
	Direct <b>(S-Mazut)</b>	Distance <b>(S-MazutK)</b>	With distance separators (S-MazutK)	With direct and distance separators (S-Mazut/S-MazutK)
Transmitter				
APC-2000ALW Exd, Exi/Exd	$\checkmark$	$\checkmark$	×	×
APR-2000ALW	1	1		
Exd, Exi/Exd	$\checkmark$	$\checkmark$	×	×
APR-2000ALW				
Exd, Exi/Exd with diaphragm seals	×	×	$\checkmark$	$\checkmark$

Min. width range							
S-Mazut	S-Mazut75	S-Mazut100					
250	10	5					
600	40	25					
	250	S-Mazut         S-Mazut75           250         10					

Table 61. Recommended minimum measurement range width (kPa) for separator S-Mazut/K.

### Maximum measurement range: 0 ... 7 MPa.

Type of separation		Absolute "zero" error	
	S-Mazut	S-Mazut75	S-Mazut100
Direct	0,4kPa/10°C	0,2kPa/10°C	0,08kPa/10°C
Distance (capillary 2m)	0,5kPa/10°C	0,3kPa/10°C	0,1kPa/10°C

Table 62. Additional absolute "zero" error due to the ambient temperature changes of separator S-Mazut, S-Mazut75 and S-Mazut100.



### Please note!

For a set of pressure transmitter and special separator (with larger diameter) temperature errors diminish proportionally to the third power of the active diaphragm diameter. Additional "zero" error due to the changes of the medium temperature depends on the temperature gradient in the oil separation system and in each case it is considerably smaller than the errors given in the table above.

#### Medium temperature range:

- -10 ... 315°C for distance separation;
- -10 ... 150°C for direct separation.

## **Special versions:**

- versions Ø75, Ø100 for low ranges;
- other to be agreed with Aplisens consultants.



# Permissible overload:

- S-Mazut: 11 MPa;
- S-Mazut75: 5MPa;
- S-Mazut100: 4MPa.

Diaphragm and connection material: 1.4404 (steel 316L).

### 14.1.10. S-RC separators

Separators S-RC are used for measurements of hot media characterized by increased viscosity, solidification or contamination wherever it is impossible to use an impulse tube.

For installation of transmitters with S-RC separators on site, it is recommended to welding mounting rings manufactured by Aplisens S.A..

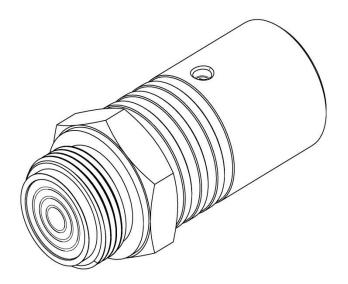


Figure 136. S-RCM 30x2 separator - view in isometry.

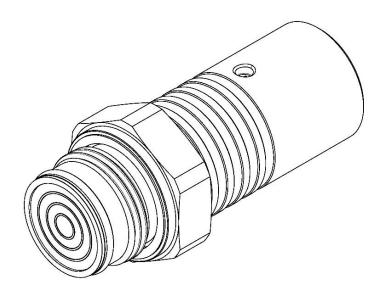


Figure 137. S-RCG1 separator - view in isometry.

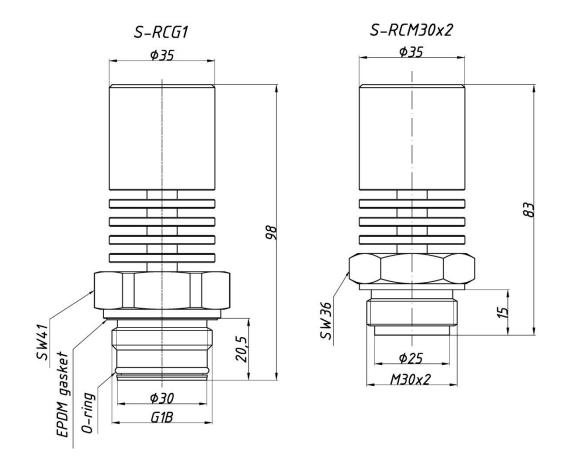


Figure 138. S-RCG1 and S-RCM30x2 separators - overall dimensions.

		Using in each type	e of separation		
	Direct <b>(S-RC)</b>	Distance	With distance separators	With direct and dis- tance separators (S-RC)	
Transmitter					
APC-2000ALW Exd, Exi/Exd	$\checkmark$	×	×	×	
APR-2000ALW Exd, Exi/Exd	$\checkmark$	×	×	×	
APR-2000ALW Exd, Exi/Exd	~	<b>v</b>	~	. ( *	
with diaphragm seals	×	*	×	V T	
	*S-RC s	eparators is intended for	direct mounting only.		



## Recommended minimum measurement range width: 40 kPa. Medium temperature range: 0 ... 160°C.

### Maximum measuring range:

- for S-RCM30x2: 0 ... 4 MPa;
- for S-RCG1: 0 ... 4 MPa.

### Permissible overload:

- for S-RCM30x2: 10 MPa;
- for S-RCG1: 10 MPa.

## Additional absolute "zero" error due to the ambient temperature:

- 6 kPa/10°C for range ≥ 250 kPa;
- 1 kPa/10°C for range < 250 kPa.</li>

### Diaphragm and separator material: 1.4404 (steel 316L).

### **Special versions:**

- separator for the temperature up to 260°C;
- Hastelloy-wetted parts of separator made of Hastelloy C 276 (permissible pressure 4 MPa);
- aseptic version S-RCG1, S-RCM30x2 sealing upstream the thread, filling with edible oil (max. temp. 150°C);
- other to be agreed with Aplisens consultants.

# 14.2. Diaphragms and gauge fluids

Two components of separator have the greatest impact on temperature errors occurring after its application. These are the flexibility of the separator diaphragm and the thermal expansion coefficient of the liquid filling the measuring set.

Flexibility of the diaphragm is mostly affected by the diaphragm diameter proportionally to the third power of the active diameter. Diaphragms with smaller diameter are stiffer than those with large diameters. Diaphragms and rabbets are made of the following materials:

- 316L or 321;
- Hastelloy C 276;
- Tantalum;
- titanium;
- nickel;
- Monel.

When selecting liquids to fill the separators, the following should be taken into account:

- their different thermal expansion. Greater expansion- more serious measurement errors;
- their different density. Higher density- longer response time to pressure signal;
- their range of operating temperatures. At low temperatures the liquids become too dense and at high temperatures begin to evaporate;
- their usability in the food industry or oxygen installations.

			Separato	r liquids		
Liquid symbol	Density at 25°C [kg/dm³]	Viscosity at 25°F [cSt]	Expansion coefficient [x10 <sup>-3</sup> °C]	Permissible temperature range for abso- lute pressures from 1 kPa to 100 kPa [°C]	Permissible tem- perature range for pressures above 100 kPa <sub>ABS</sub> [°C]	Comments
DC550	1,068	115	0.78	-40; +200	-40; +315	-
DH	1,097	175	0.77	+20; +260	+20; +370	-
AK20	0,945	20	0.97	-70; +150	-70; +270	-
M20	0.92	9.5	1,008	-20; +150	-20; +150	For food
Fluerelube	1.97 at 28%	F. 0. at 28°C	10°C- 1.53	201 1 80	20. 1150	For versions designed for
Fluorolube	1.87 at 38°C	5.0 at 38°C	38°C- 0.85	-30; +80	-30; +150	oxygen applica- tions

Table 63. List of fluid parameters for separators.

# 14.3. Temperature operating ranges

Distance separators may operate at permissible temperatures for gauge fluids with which the separators are filled.

Direct separators may operate at ambient temperatures up to 80°C and may measure the media with the temperature below the maximum allowable temperature for liquid filling the separator. The temperature of the medium must not cause the increase of the temperature of the transmitter above 80°C. Therefore, direct separators, depending on their separating diaphragm, can measure the media in a very limited range of temperatures. The use of a direct separator with a radiator increases the permissible temperature of the medium, even by 40°C. Variations of the medium temperature and ambient temperature cause an indication error of transmitter resulting from different thermal expansion of the liquid and separator material. This error is higher the more rigid the separator diaphragm is.

# 14.4. Response times

Response time T98 of separator S-P DN80 filled with DC550 oil with capillary tube 1.5 m at 25°C is 3 seconds.

# 14.5. Maintenance

If sediment is formed on the diaphragm, it is not allowed to remove it by mechanical method by scraping or rubbing. The deposit should be dissolved and rinsed using only a soft brush to facilitate these operations. When washing, do not direct a strong stream of the cleaning agent to the diaphragm.

Flanged separators may also be equipped with separator diaphragm flushing rings or have an integrated flushing ring. Flushing of the diaphragm is done without the necessity to dismantle the separator from the customer's system.

# 14.6. Installation instructions

General mounting recommendations:

- protect the separating diaphragms (especially at low measuring ranges) from dynamic impacts of the medium, e.g. when filing the tank with liquid;
- never allow for freezing of the medium, crystallization or precipitation of hardening deposits in the place where the separator is installed.

The figure below shows an exemplary mounting diagram of transmitter APR-2000ALW Exd, Exi/Exd with direct separator:

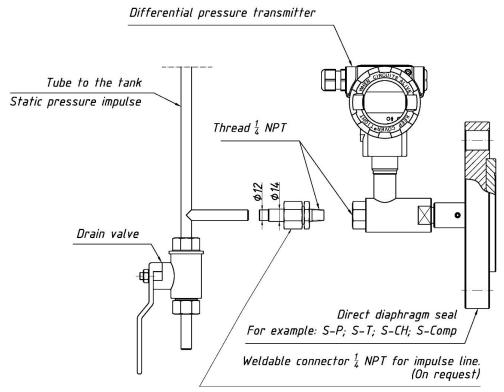


Figure 139. Exemplary installation of transmitter APR-2000ALW Exd, Exi/Exd with direct separator.

APR-2000ALW Exd, Exi/Exd with diaphragm seals is recommended to use with two distance separators for measuring the differential pressure wherever the hydrostatic pressure of the gauge fluid in capillary tubes, related to the vertical spacing of separators, is significantly lower than the measurement range of the transmitter. The best metrological results are obtained using the possibly shortest identical capillary tubes ended with identical separators. In such configuration, additional temperature errors associated with distance separation equally affect both measuring chambers of the differential pressure transmitter and thus compensate each other.

The figure below shows an exemplary diagram of the filter loss measurement when two distance separators are used:

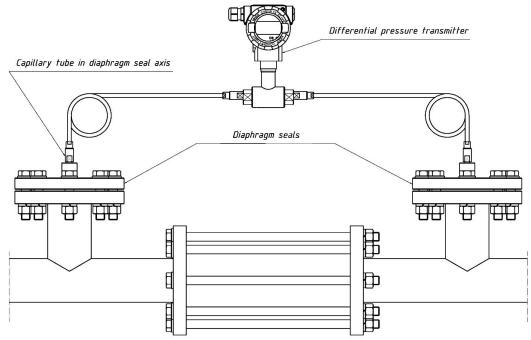


Figure 140. Exemplary installation of transmitter APR-2000ALW Exd, Exi/Exd with distance separators.



# 14.7. Vacuum/negative pressure applications

In case of liquid level measurement in the tank using two distance separators, it is recommended to install the transmitter below the lower separator. This applies to the situation when negative pressure may occur in the tank. This will prevent the vacuum load of the separator diaphragm caused by the presence of oil in the capillary tubes. If for any reasons the transmitter must be installed above the lower separator, it should not be higher than one meter.

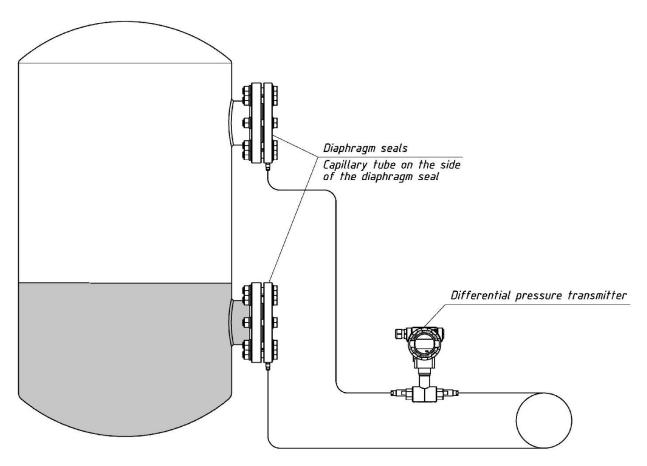


Figure 141. Example of installation in the case of vacuum/negative pressure application.

# 15. Troubleshooting

# 15.1. Signalling a transmitter malfunction

The APC(R)-2000ALW Exd, Exi/Exd signals malfunction by:

- Setting the alarm current loop I\_AL < 3,600 mA;</li>
- Displaying the error number on LCD2 display;
- Providing disability statuses through HART communication.

APC(R)-2000ALW Exd, Exi/Exd had the ability to turn on/off of a given type of malfunction. Malfunctions and faults are grouped in the alarm configuration tab as follows:

- Errors and failures related to the DAC processing block responsible for converting unified digital signal of the process quantity into the value of the process current in the measuring line;
- Errors and failures related to the ADC processing block responsible for converting the measuring signal from the measuring head to a digital value;
- Errors and failures of RAM,FLASH,EEPROM memory related to operational memory and main program memory of microcontroller and the memory of correction factors;
- Errors and failures related to CPU oscillator- local clock of the main microcontroller;
- Mathematical operation errors related to malfunction of the main microcontroller arithmetic logic unit;
- Exceeding the ranges of PV,SV,TV,FV process variables related to process conditions (PV pressure as the basic process variable) and environmental (SV temperature of the measuring head structure, TV temperature of the CPU microcontroller, FV temperature of the ADC converter



# It is recommended to enable the current alarm for all malfunction.

In some situations may need to turn off the current alarm for exceeding the PV,SV,TV,FV ranges. This may include:

- pressure measurements at which periodic high pressure overloads significantly exceed the transmitter's basic range. Pressure greater than 50% or more of the basic range can lead to saturation of the ADC transducer measuring registers. The transducer diagnostics detects this condition and may be the reason for the current alarm. If this is not accepted, the current alarm can be deactivated;
- pressure measurements at which periodic high pressure overloads significantly exceed the transmitter's basic range. Pressure greater than 50% or more of the basic range can lead to saturation of the ADC transducer measuring registers. The transducer diagnostics detects this condition and may be the reason for the current alarm. If this is not accepted, the current alarm can be deactivated;

Using the Raport 2 software or other software using DD and DTM libraries, the user can set specific alarm groups as active or inactive. In case of an inactive group of alarms, a threatening event will be signalled by the display of the error number on the LCD3 display and setting the appropriate status available for reading through HART communication.

In the case of an active alarm group, the threat event will be additionally signalled by the alarm current  $I_AL < 3,600$  mA.

The following is an example of the appearance of the Raport2 program interface tab used for turning alarm on / off.



Raper 2.0		
File Converter Settin	ngs Help	
Q, 🛃 🛧 📋		
	Configuration Revisions	
1 Identification		Analog output config
		Current
Description	Long tag	Current mode Normal 🔻
	Product code APC-2000ALW	Alarm current High 🔻
Process variables		Output mode 420 mA 🗸
[t]		
Common parameters		Current alarms
2	Reset	Analog output error ADC error ADC error
Basic commands	O Undo pressure zero trim	EEPROM error
	◯ Undo pressure sensor trim	Oscilator error
Specific parameters	O Undo analog output trim Execute	Mathematical processing errors
		Out of range error
28.1 LCD	Limits	Processing time
	Pressure from -6,1 kPa 106,1 kPa	
Linearisation	Temperature from -40,0 °Cto 85,0 °C	Value 120 ms Quickly Precisely
		Quicky Freusery
Write protection		
Device status		Read parameters Write parameters
<b>.</b>		whe parameters
	Modified BC7B,Aplisens,6	142189,0 CC COM3 (SFC)

Figure 142. Example tab interface Raport 2 used to enable / disable the alarm.

# 15.2. Malfunction messages on LCD display

In the case of diagnosed failures, transmitter APC(R)-2000ALW Exd, Exi/Exd will inform the user about the failure by setting alarm current  $I_AL < 3.600$  mA (depending on the settings) and displaying a blinking collective error number on LCD2. The error number is displayed in the E character format and 4-digit decimal numbers. To identify the cause of malfunction, it is necessary to:

 read out statuses of Analog Input, Physical Block, Sensor Block and Transmitter Block through HART communication. The statuses marked in these blocks will indicate a relatively accurate cause of a failure. This is a recommended method of obtaining information about a kind of malfunction.

	Analog Output	Device Specific Status	Analog Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes				
1 Identification	_		5	1			,				
	Memory diag	<b>inostic</b> hecksum fault									
	INFO block of										
Description	INFO recove	· · · · · · · · · · · · · · · · · · ·									
	Backup INFO block checksum fault										
Process variables	Backup INFO	block recovery									
000		block recovery fault									
	Flash consist										
Common parameters	Flash CRC ho	ot test									
Basic commands											
-	Block diagno										
Specific parameters		error (NOREF+ERR @AV									
		error (NOREF +ERR @TEM error (NOREF +ERR @AIN									
Mart Camira		error (NOREF+ERR @AIN									
Mpc5 Service	ADC config e		2)								
		espond (timeout)									
Separator service	ADC Temp or										
<b>N H</b>	ADC Temp ur										
	Head Temp of										
281 LCD	Head Temp u										
	AVDD voltage     BUFC4 reade										
Nower supply	Rref under s										
A Burner Buppity		ecutive temp 10°C exceed									
		vision is not valid									
Linearisation											
Write protection											
Device status											
( <b>*</b> 00)											

Figure 143. Example of the Sensor Block statuses read out from the transmitter via Raport 2.

 If the readout via HART communication is difficult or impossible for some reasons, it is possible to use the error status number displayed on the transmitter's LCD2 screen. This is a summary status which is a synthesis of failures and errors of all the blocks. For this reason, it is less precise.

To decode it, proceed as follows:

 Enter in the calculator (e.g. using the Windows calculator with the programmer's view option) a significant digital decimal number displayed after the E character and then convert it to a binary value;

Vidok Edycj	a Pon	noc							Widok	Edycj	a Pon	100						
								64								10	900	000
0000 00 63 0000 00 31			0000 0000	0000 47 0000 15	000 000			0000 32 0000 0	000 63 000 31				0000 0000	0000 47 0000 15	000 000			0000 32 0000 0
) Hex		Mod	Α	MC	MR	MS	M+	M-	Он	ex		Mod	Α	MC	MR	MS	M+	M-
• @ Dec Oct	(	)	В	-	CE	c	±	<b>v</b>			(	)	В	←	CE	с	±	
Bin	RoL	RoR	С	7	8	9	/	%	<u>         B</u> B		RoL	RoR	С	7	8	9	/	%
Qword	Or	Xor	D	4	5	6	*	1/x		word	Or	Xor	D	4	5	6	*	1/x
Oword	Lsh	Rsh	E	1	2	3	-		0 D	word	Lsh	Rsh	Е	1	2	3	-	
O Bajt	Not	And	F				+	=	ОВ		Not	And	F		)		+	=



Binary value bit	Status name	Description
BITO (1 dec)	SECURITY_VIOLATION	The permissible number of 20 attempts of unauthorised access to change the access password or unauthorized change of write protection was exceeded. The attempt counter takes into account the repetitions of HART command performed automatically by Master, thus when configuring Master, for example, to 2 repetitions, a user can make max. 10 attempts. The next unauthorized attempt will result in displaying the message and setting alarm current I_AL < 3.600 mA. This condition will continue until the transmitter is reset or disconnected and then reenergized. If the access password is lost, the transmitter must be sent back to the manufacturer to restore the default password.
BIT1 (2 dec)	CLOCK_FAULT	The local quartz generator failure has been diagnosed. The transmitter will switch to the operation mode with the DCO standby generator and will set alarm current I_AL < 3.600 mA. This condition will continue until the transmitter is reset or disconnected and then re-energized. If the failure is repeated once again, the transmitter must be sent back to the service center.
BIT2 (4 dec)	MEMORY_FAULT	RAM FLASH or EEPROM memory fault was detected. This is a major failure of the equipment. In case of failure FLASH and EEPROM program memory, the transmitter will set the alarm current I_AL <3,600 mA with an active current alarm. In the event of failure the RAM memory, the message on the display may appear only temporarily because, due to critical failure, the WDT_SIL internal backup alarm module will take over, which will dis- connect the transducer internal power supply. The display will be blank. I_AL << 3,600 mA flows in the current loop. This condition will last until the power supply is disconnected and reconnected. If the failure re- peats again, the transmitter should be sent to the service.
BIT3 (8 dec)	SENSOR_FAULT	Saturation of A/D transducer (USAL, LSAL), equipment problem related to damage of pressure measuring structure in the head or component damage in the pressure sensor block or sensor power supply were diag- nosed. The transmitter will set alarm current I_AL < 3.600 mA. This condition will continue until the cause of the damage ceases to exist. To determine whether the cause may be pressure overload, the pressure transmitter should be vented or pressure should be compensated be- tween L and H levels (for differential pressure transmitter). If after this operation, the transmitter returns to the measurement indication without error, this means that the cause of the error was exceeded pressure (USAL or LSAL). Otherwise, if the error is still displayed, it is likely that a failure occurred and the transmitter must be sent back to service center.
BIT4 (16 dec)	BARRIER_COMM_FAULT	The digital communication failure through an optical galvanic barrier has been detected. The transmitter will set alarm current I_AL < 3.600 mA. This condition will continue until the cause of the damage ceases to exist. The transmitter must be sent back to the service center.
BIT5 (32 dec)	VOLTAGE_FAULT	Incorrect supply voltage of one of the transmitter modules has been detected. The transmitter will set alarm current I_AL < 3.600 mA. This condition will continue until the cause of the failure ceases to exist. The transmitter must be sent back to the service center.
BIT6 (64 dec)	CURRENT_LOOP_FAULT	Difference greater than 1% (160 $\mu$ A) between the current measured by the transmitter in the current loop 4 20 mA and set current calcu- lated by the transmitter was detected. The transmitter will set alarm current I_AL < 3.600 mA. If in an alarm condition the difference be- tween the measured current and the set current calculated by the



		transmitter is less than 1%, the transmitter will remain in such an alarm condition. This condition will continue until the cause of the damage ceases to exist. However, if the alarm current will also deviate by more than 1% from the value of set current calculated by the transmitter, the control will be taken over by redundant alarm module WDT_SIL which disconnects the transmitter's internal power supply. The display will be off. Current in the current loop will be I_AL << 3.600 mA. This condition will continue until the transmitter is disconnected and then reenergized. As the error may appear as a result of very strong overnormative radio interference, the quality of the voltages supplying the transmitter with regard to EMC must be checked. If the power supply is correct and the failure is repeated once again, the transmitter must be sent back to the service center
BIT7 (128 dec)	PV_OUTOFLIM	The LPL or UPL point was exceeded on pressure/differential pressure scale. The digital measurement of the transmitter outside these points is not possible. The transmitter will set alarm current I_AL < 3.600 mA. This condition will continue until the cause of the overload ceases to exist. If the transmitter is within the correct pressure range according to the information on the nameplate and the error message is still displayed, this may indicate a failure of the transmitter component. In this situation, the transmitter must be sent back to the service center.
BIT8 (256 dec)	SEC_NEXT_VAR_OUTOFLIM	The limits of the permissible temperature range of the transmitter operation were exceeded. The temperature measurement is done at 3 points: pressure sensor, A/D transducer and main CPU controller. The transmitter will set alarm current I_AL < 3.600 mA. This condition will continue until the operating temperature returns to its correct range. If the transmitter is within the correct temperature range according to the information on the nameplate and the error message is still displayed, this may indicate a failure of the transmitter component. In this situation, the transmitter must be sent back to the service center.

Table 64. Numbers of error statuses displayed on the display.

# 15.3. Failure statuses read using HART

The transmitter allows to reading out statuses using HART communication. The range of information available in this way is broader than the information that is diagnosed based on the error number shown on the transmitter display. Diagnostics allows to read out the operation parameters of the transmitter blocks. Exemplary screen shots from "Raport 2" show the range of available diagnostic information. If the transmitter reports an error and the cause is not known, the manufacturer recommends using HART diagnostics to determine the type of failure during contact with the service centre. The statuses indicated in the figures below are of indicative nature and show the way of displaying the failures.



	Analog Output	Device Specific Status	Analo	g Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes
1 Identification	Channel fixed			Channel sati	irated			
Description	Output 1 Output 2 Output 3			Output 1 Output 2 Output 3				
Process variables	Output 4 Output 5 Output 6			Output 4 Output 5 Output 6				
Common parameters	Output 7 Output 8 Output 9			Output 7 Output 8 Output 9				
Basic commands	Output 10 Output 11 Output 12			Output 10 Output 11 Output 12				
Specific parameters	Output 13 Output 14 Output 15			Output 13 Output 14 Output 15				
Mpc5 Service	Output 16 Output 17 Output 18			Output 16 Output 17 Output 18				
Separator service	Output 19 Output 20 Output 21			Output 19 Output 20 Output 21				
281 LCD	Output 22 Output 23 Output 24			Output 22 Output 23 Output 24				
Power supply								
Linearisation								
Write protection								
Device status								

Figure 144. Statuses of the analog output block.



	Analog Output	Device Specific Status	Analog Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes
1 Identification	Device specif				Configura	tion changes coun	ter
Description	<ul> <li>Security viola</li> <li>Clock fault</li> <li>Memory fault</li> </ul>				Counter	36	
Process variables	Internal volta						
Common parameters	<ul> <li>PV out of limit</li> <li>Second or ne</li> </ul>	xt variable out of limits					
Basic commands	<ul> <li>Analog output</li> <li>Output current</li> <li>Hot start occ</li> </ul>	nt fixed					
Specific parameters							
Mpc5 Service							
Separator service							
28.1 LCD							
Power supply							
Linearisation							
Write protection							
Device status							

Figure 145. Summary statuses.



	Analog Output	Device Specific Status	Analog Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes
1 Identification	Memory diag	nostic					
Description	INFO block re	ry fault					
Process variables	Backup INFO	block checksum fault block recovery block recovery fault					
Common parameters	<ul> <li>Flash consist</li> <li>Flash CRC ho</li> </ul>						
Basic commands							
-	Block diagno						
Specific parameters	AI Current Lo	oop Fault					
Mpc5 Service							
Separator service							
28.1 LCD							
Power supply							
Linearisation							
Write protection							
Device status							

Figure 146. Analog input block statuses.



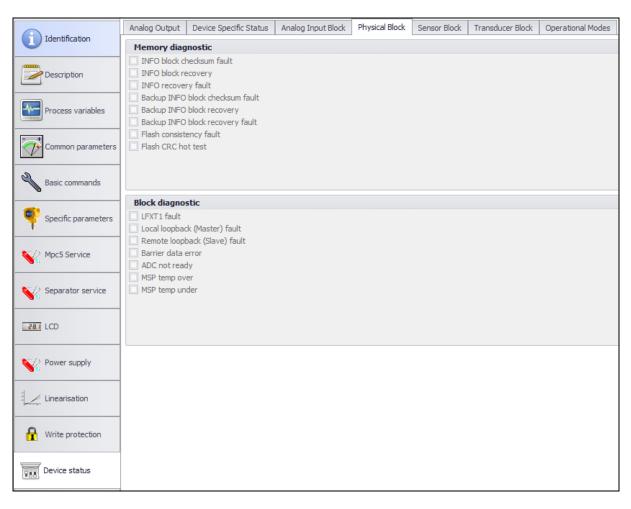


Figure 147. Physical block statuses.



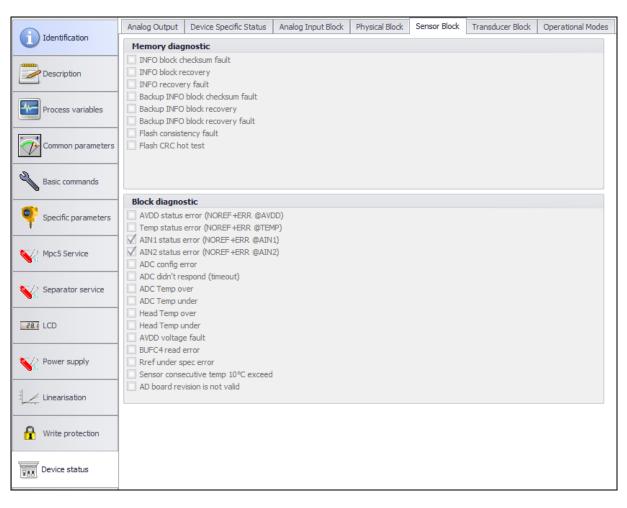


Figure 148. Sensor block statuses.



	Analog Output	Device Specific Status	Analog Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes
1 Identification	Memory diag	nostic					
Description	INFO block re	ry fault					
Process variables	Backup INFO	block checksum fault block recovery block recovery fault					
Common parameters	Flash CRC ho						
Basic commands							
-	Block diagnos	stic					
Specific parameters	<ul> <li>PV over rang</li> <li>PV under ran</li> <li>PV high limite</li> </ul>	ge					
Mpc5 Service	<ul> <li>PV low limited</li> <li>Access violat</li> </ul>	ł					
Separator service							
28.1 LCD							
Power supply							
Linearisation							
Write protection							
Device status							

Figure 149. Transducer block statuses.



Raport 2.0								_ <b>–</b> ×
File Converter Settings Help	)							
🔍 🛃 🛧 📋 🖆 🖄								
	Analog Output	Device Specific Status	Analog Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes	<u> </u>
Mpc5 Service								
	Operate mo	ode 1 Normal mode						
Separator service								
	Operate mo	ode 2 Normal mode						
28.1 LCD								
Power supply								
4	-							
Linearisation								
•								
Reprotection								
	1							
Device status								
Nead Flash Reader								
	1							
Kalkulator zbiorników								
÷								
				Modified BC7	B,Aplisens,1192	417,0 CC		COM1 (SFC)

Figure 150. Operational modes statuses.

# 15.4. Influence of malfunction and failure on transmitter operation and output current

Description	Probable reasons	Solution
The transmitter does not respond after switching on the power supply. The supply current is <200 uA, no LCD display.	No power at the transmitter's electrical con- nection terminals. Too low power supply at the transmitter's electrical connection terminals. Reverse polarity at the transmitter electrical connection terminals	Check the power supply, cable and correct cable mounting on electric terminals of transmitter.
	Damage element in the transmitter	Send the transmitter to service for repair.
The transmitter after connecting the power supply runs a few seconds and it turns off. After	After starting the work, the transducer diag- nostics detects a critical error / fault caused by low supply voltage. After starting work, the diagnostic of the	Check the power supply, cable line and cor- rect mounting of wires on the transducer electrical connection terminals.
switched off in the current loop, current is about 300 uA.	tractor detects a critical error / fault caused by hardware damage.	Send the transmitter to service for repair.
	- Error <b>E0001</b> is displayed. Presumably, the password is incorrectly en- tered when attempting to lock / unlock the transducer record or attempt to change the access password. The limit of invalid pass- words is 20 attempts. It should be noted that, depending on the settings of the HART Master, the access command can be sent automatically several times. In this case, the number of access attempts may be reduced.	Unauthorized access results in activating the alarm state. It can only be deleted by means of a transducer software or hardware reset (disconnection and reconnection of power supply). In the case of unsuccessful attempts to gain access (password lost), the only way to reset the password to the factory value "00000000" is to send the transducer to the service.
	- Error <b>E0002</b> is displayed. The supposed cause is damage to the CPU oscillator circuits. In this case, the transducer microcontroller switches the clock system to an internal backup oscillator.	Send the transmitter to service for repair.
The transducer, after connecting the power supply, works for a	- Error <b>E0008</b> is displayed. The presumed cause is hardware damage to the pressure sensor, e.g. due to a strong hydraulic shock.	Send the transmitter to service for repair.
few to several seconds, after which an error appears on the display. In the current loop, an alarm current of approximately 3.440 mA flows in the event of an active current alarm.	- Error E0016 or E0024 is displayed. The supposed cause is hardware damage to the optical galvanic barrier. Transmission of digital signals through a galvanic barrier is carried out by a set of two communication controllers. Damage to some components of these blocks can lead to an alarm being diag- nosed.	Send the transmitter to service for repair.
	- Error <b>E0032</b> is displayed. The supposed cause is a hardware failure of one of the voltage references used in the processing systems.	Send the transmitter to service for repair.
	- Error <b>E0064</b> is displayed. The probable reason is the discrepancy of more than 1% between the process current set on the controller by the microcontroller (set- ting) and the value measured by the transduc- er system responsible for current control in	Check the supply voltage at the transducer electrical connection terminals. Supply the transmitter with a different power source to eliminate the effect of overly in- tense interference on the transmitter output circuits.
	the 4 20 mA loop. In the event of an active current alarm, an attempt will be made to set the alarm current to approximately 3.440 mA. If the error / malfunction still causes a differ- ence between the set point and the measured value exceeding 1%, the transducer sets a	If the above actions do not work, send the transducer to the service for repair.



	critical alarm, the alarm current drops to the level of about 0.3 mA.	
	- Error <b>E0128</b> or <b>E0136</b> is displayed. The pre- sumed reason is that the pressure is exceeded above or below 50% of the basic range.	Bleed the pressure transducer measuring system and check the correct display. If the error persists, send the transmitter to a service center for repair. Equalize the pressure on L and H and check the correct display (differential pressure). If the error persists, send the transmitter to a service center for repair.
	- Error <b>E0256</b> is displayed. The presumed reason is that the range of permissible operating temperatures has been exceeded. This applies to both the transmitter body and the pressure head measuring area. In the case of a head having direct contact with the medium, pay attention to its temper- ature.	Set the ambient temperature and approxi- mate head temperature. If the temperature range is slightly exceeded, the alarm can be turned off. In other cases, reduce the medium / ambient temperature or order the transmitter for a wider range of operating temperatures.
The transducer, after the process exceeds the limits of the set pressure / pressure differential ( <lrv,> URV) sets the controller current output into an alarm condition. A current of approxi- mately 3.440 mA flows in the current loop. "UndEr" or "oVer" appears on the display.</lrv,>	The transducer was set using the Local Menu to MID_WP = ON mode. This is the mode used in transducers used for billing. In this mode, all functions that modify the transmitter settings related to its metrology are blocked. According to MID requirements, exceeding the set range limits must be signalled by an alarm.	Use the Local Menu to set the MID_WP = OFF mode. If the alarm persists, send the transmit- ter to a service center for repair.
The transmitter reacts to a change in pressure / differential pressure after a very long time.	The time constant in the transducer is set too high.	Use the Local Menu or HART communication to set the time constant to = 0 and check the reaction of the inverter. If the transmitter response time has not changed or has changed very slightly, send the transmitter to a service center for repair.
The transmitter is not communi- cating via HART.	Incorrectly configured electrical circuit for connecting the HART modem. Incorrectly configured USB connection. Incorrectly configured HART modem wireless connection.	Check the correct electrical connection of the HART modem to the transmitter (7.6). Check the HART Master configuration (COM port settings for USB communication, wireless communication configuration for a HART modem equipped with Bluetooth, e.g. modem manufactured by APLISENS S.A. https://aplisens.pl/pdf/produkty/DTR.HB.pdf). If the problem persists, send the transmitter
		to a service center for repair.



# 16. Certificates, approvals, attestation, declarations

16.1. **CE mark** 



Transmitters APC(R)-2000ALW Exd, Exi/Exd have been designed to meet the latest safety requirements, and they have been tested and have left the factory in a safe condition. The transmitters comply with the applicable standards and regulations listed in the EU declaration of conformity and therefore meet the statutory requirements of the EU directives. Aplisens S.A. confirms the conformance of the transmitter by placing the CE mark on it.

# 16.2. Ex certificates

Certificates allowing to use the transmitter in explosion-risk areas.

# 16.2.1. ATEX Certificates (Europe)



On the nameplate indicates that the product complies with the requirements of the European ATEX directive on explosion protection.

# Flameproof Exd version



Certificate No KDB 19 ATEX 0011X Applied standards: EN 60079-0:2012, EN 60079-1:2014, EN 60079-11:2011, EN 60079-26:2015, EN 60079-31:2014 Designation: I M2 Ex db ia I Ma (tylko w obudowie ze stali 316) II 1/2G Ex ia/db IIC T6/T5 Ga/Gb

II 2G Ex ia/db IIC T6/T5 Gb II 1/2D Ex ia/tb IIIC T105°C Da/Db II 2D Ex ia/tb IIIC T105°C Db

	Permissible range of o	Temperature class and max.	
	Ambient temperature	Process temperature	Temp. of surface
Γ	$-40^\circ C \le T_a \le 40^\circ C$	-40°C ÷ 40°C	T6/T105°C
	-40°C ≤ Ta ≤ 75°C	-40°C ÷ 75°C	T5/T105°C

Table 65. Flameproof Exd version (IECEx). Permissible ranges of operating temperatures. Temperature classes.

Specific safe use conditions:

- The maximum temperature of the external heating source cannot heat the transmitter above the maximum declared ambient temperature.
- In hazardous zones of dust explosion, transmitters with painted aluminium housing as well as transmitters equipped with plastic nameplate and PTFE-coated diaphragm separator components should be installed in a way that prevents electrostatic charging specified in accordance with Explosion Proof Device User Manual EN.IX.APC.APR.ALW point 6.
- A diaphragm separator with titanium components must be protected from mechanical impacts.
- If a transmitter with a nameplate containing various explosion-proof designs is used, the type of protection applied must be permanently marked on the nameplate before installation (see Explosion Proof Device User Manual EN.IX.APC.APR.ALW Figure 1).
- Some gaps of flameproof joint are smaller and longer than those required in table 1 of EN 60079-1 (see Explosion-Proof Device User Manual EN.IX.APC.APR.ALW Table 7).
- For a transmitter with a flameproof enclosure, the diaphragm should not be exposed to damage during transmitter installation and operation. The transmitter diaphragm is made of stainless steel, Hastelloy or Tantalum and must not be exposed to contact with a medium that may damage it.



## 16.2.2. IECEx certificates



## Flameproof Exd version

Certificate No IECEx KDB 19.0003X Applied standards: IEC 60079-0:2017, IEC 60079-1:2014, IEC 60079-11:2011, IEC 60079-26:2014, IEC 60079-31:2013. Designation: Ex db ia I Ma (only in the housing made of steel 316) Ex ia/db IIC T6/T5 Ga/Gb Ex ia/db IIC T6/T5 Gb Ex ia/db IIC T105°C Da/Db

Ex ia/tb IIIC T105°C Db

Permissible range of o	Temperature class and max.	
Ambient temperature	Process temperature	Temp. of surface
$-40^{\circ}C \le T_a \le 40^{\circ}C$	-40°C ÷ 40°C	T6/T105°C
-40°C ≤ Ta ≤ 75°C	-40°C ÷ 75°C	T5/T105°C

Table 66. Flameproof Exd version (IECEx). Permissible ranges of operating temperatures. Temperature classes.

Specific safe use conditions:

- The maximum temperature of the external heating source cannot heat the transmitter above the maximum declared ambient temperature.
- In hazardous zones of dust explosion, transmitters with painted aluminium housing as well as transmitters equipped with plastic nameplate and PTFE-coated diaphragm separator components should be installed in a way that prevents electrostatic charging specified in accordance with Explosion-Proof Device User Manual EN.IX.APC.APR.ALW point 6.
- A diaphragm separator with titanium components must be protected from mechanical impacts.
- If a transmitter with a nameplate containing various explosion-proof designs is used, the type of protection applied must be permanently marked on the nameplate before installation (see Explosion-Proof Device User Manual EN.IX.APC.APR.ALW Figure 1).
- Some gaps of flameproof joint are smaller and longer than those required in table 1 of EN 60079-1 (see Explosion-Proof Device User Manual EN.IX.APC.APR.ALW Table 7).
- For a transmitter with a flameproof enclosure, the diaphragm should not be exposed to damage during transmitter installation and operation. The transmitter diaphragm is made of stainless steel, Hastelloy or Tantalum and must not be exposed to contact with a medium that may damage it.

# 16.3. Hygienic applications

Transmitters with separators equipped with hygienic connectors allow for measurements in aseptic/hygiene conditions. They are usually used in the food, pharmaceutical and biotechnology industries. The measuring instrument can be connected to a separator directly or using a capillary tube. Hygienic transmitters have a hygiene certificate issued by NIZP-PZH (National Institute of Public Health – National Institute of Hygiene). A certificate issued by NIZP-PZH (National Institute of Public Health – National Institute of Hygiene) for a given product certifies that it is safe for human health and/or the environment, provided that it is used in accordance with the intended purpose.

# 16.4. Marine certificates

Pressure and differential pressure transmitters: APC-2000ALW Exd, Exi/Exd, APR-2000ALW Exd, Exi/Exd designed for marine applications meet Det Norske Veritas (DNV) rules for classification vessels, ships, offshore units, high speed and light crafts and have DNV GL Certificate No TAA000019J for applications in the following system standards:

- temperature: class D;
- humidity: class B;
- vibrations: class B;
- EMC class: B;
- housing: class C.

# 16.5. PED execution

APC-2000ALW Exd, Exi/Exd, APR-2000ALW Exd, Exi/Exd with permissible pressure/overload exceeding 200 bar ordered as PED execution are supplied with the manufacturer's declaration of compliance with the Pressure Directive 2014/68/EU cat. I, module A.

The conformity assessment procedures provided for Module A have been applied. The process is based on internal control covering the design phase as well as the production phase.

These transmitters are designed as pressure accessories for measuring and controlling the pressure of the media in group 1 (hazardous) and the permissible overloads higher than 1000 bar for media pressure measurement and control systems of groups 1 and 2.

APC-2000ALW Exd, Exi/Exd, APR-2000ALW Exd, Exi/Exd with permissible pressure/overload 200 bar and a lower one are manufactured in accordance with Article 4 para. 3 of Directive 2014/68/EU. Design and manufacture is in accordance with recognized engineering practice to ensure safe use.

The manufacturer does not issue a declaration of conformity with the PED Directive for these transmitters.

Directives/Standards	Standards
ATEX 2014/34/EU	EN 60079-0, EN 60079-1, EN 60079-11, EN 60079-26, EN 60079-31,
ATEX 2014/34/EU	EN 50303
EMC 2014/30/EU	EN 61326-1, EN 61326-2-3, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4,
EIVIC 2014/30/E0	EN 61000-4-5, EN 61000-4-6, EN 55011
PED 2014/68/EU	EN ISO 13445, EN ISO 14732, WUDT-UC/2003
RoHS 2011/65/EU	EN 50581
IECEx	IEC 60079-0, IEC 60079-1, IEC 60079-11, IEC 60079-26, IEC 60079-31
Other	EN 61508, EN 60068-2-6, EN 60068-2-27, EN 60529, EN 61511,
Other	EN 60654, EN 61298, EN 60770

# 16.6. Standards and guidelines

Table 67. Applied standards and guidelines.



# 16.7. Inspection certificates

The following certificates are available on request:

Type of certificate	Standard, description
Final calibration certificate (16.7.1);	
Transmitter temperature compensation con- trol certificate (0);	
Calibration certificate issued by Accredited Laboratory (16.7.3);	
Material certificate (wetted parts) (16.7.4);	PN-EN10204;2006
Material certificate (wetted parts) (16.7.4);	NACE MR0175/ISO 15156
Certificate of the National Institute of Hygiene (16.7.5);	PN-EN 1672-2
Hydrostatic test (16.7.6)	
Washing certificate (16.7.7)	
Roughness certificate (16.7.8)	

Table 68. Inspection certificates.

### 16.7.1. Final calibration certificate.

In the course of the manufacturing process, in addition to automated computerised temperature compensation, linearization and calibration, the transmitter is subject to final pressure calibration and calibration of the output current controller. A final calibration certificate is available on request. Below there is an exemplary printout from the process program for semi-automatic final calibration.



Aplisens S.A. informs about calibration possibilities of pressure and differential pressure transmitters in our accredited calibration laboratory

Figure 151. Final calibration certificate.



A final calibration certificate is available on the request.

Stanowisko: KOMORA16

Rozpoczęcie procesu: 2019-07-18 09:29:25 Zakończenie procesu: 2019-07-19 06:03:14

### 16.7.2. Transmitter temperature compensation control certificate

Automated temperature compensation, linearization and calibration of the transmitter are performed at the stage of manufacture. Below there is an exemplary record from the process of the transmitter temperature compensation control. This is a certificate of fulfilment of the required metrological parameters of the transmitter in the assumed range of operating temperatures.

umer seryjny: 5912050; nr gło	wicy: 1905K050 ,	Software: 3.5, Har	dware: 3.0, Zakre	s nastawiony: -10	,0 10,0 [k
ozycja: 1	and the second se		and the states and the second second	in the other states the test of the other of	and the second
yte przyrządy pomiarowe: adajnik: Zadajnik #1 MENSOR,PC (oltomierz: Keithley KEITHLEY IN:			A20 /A02		
edy procesu: Brak					
Odczytana wartość ciśnienia o					
Zakładana dokładność obliczow	5 APR 1		122	1.22	
[kPa]/[°C]	-25	0	75	50	25
-10,000	-9,999	-9,963	-9,97	-9,912	-9,994
-5,000	-5,001	-4,983	-4 3	-4,958	-5,002
0,000	-0,018	-0,008	6 6	0,096	-0,003
5,000	4,981	4,994	4.9	4,967	4,997
10,000	10,003	10,030	9,904	9,963	10,021
Max błąd [%]	0,094	0,186	0,482	0,478	0,107
Max błąd temp./10°C [%]	0,018	0.062	0,118	0,197	33 <del>4</del>
Odernstanna unasta (é marder e der	utana kamanda M	DT funk	an Inthis		
Odczytana wartość prądu odcz		AKT W PURKC, 5	nia [mA]:		
Zakładana dokładność prądu v	/ linii: 0,1%	100			
Prad [mA]/[°C]	-25		75	50	25
4,000	4,001	03.	4,057	4,070	4,005
8.000	7,999	714	8,009	8,033	7,998
12,000	11,986	94	12,053	12,076	11,998
16,000	1 385	15,996	15,956	15,974	15,998
20,000		20,024	19,923	19,971	20,017
Max blad [%]	794	0,186	0,482	0,478	0,107
Max blad temp./10°C [%]	A 11-	0.062	0,118	0,197	2
Zmierzona wartość prądu w		zadanego [mA]:			
Zakładana dokładność prądu v	v linii: C 96				
Prad [mA]/[°C]	-25	0	75	50	25
4.000	3,994	3,997	4,008	4,003	4,000
8,000	7,995	7,998	8,006	8,003	8,000
12,000	11,996	11.999	12,004	12,001	12,000
16.000	15,998	16,000	16,003	16.001	16,000
20,000	20,001	20,001	20,002	20,000	20,000
Max blad [%]	0.041	0.017	0.050	0.022	0,003
Max blad temp./10°C [%]	0,008	0.007	0,010	0,009	0,000
way and results to o [ad]	0,000	0,007	0,010	0,003	-
Odczytana wartość prądu zwro	otnego PVIret (na	rezystorze R28) w	funkcji prądu zad	lanego [mA]:	
Zakładana dokładność prądu z	wrotnego : 0,1%				
Prad [mA]/[°C]	-25	0	75	50	25
	3.989	3,994			
4,000			4,011	4,006	3,997
8.000	7,992	7,994	8,002	8.000	7,997
	11,991	11,994	12,003	11,999	11,997
12,000					15 002
12,000 16,000	15,993	16,000	16,000	15,995	
12,000 16,000 20,000	19,998	20,000	19,995	19,998	15,993 20,003
12,000 16,000					

Wersja programu: 1.43.0.0

Figure 152. Transmitter compensation control certificate- example.



A transmitter temperature compensation control certificate is available on the request.



### 16.7.3. Calibration certificate issued by Calibration Laboratory Aplisens



Figure 153. Calibration certificate.



The CALIBRATION CERTIFICATE issued by the Calibration Laboratory is available on the request.

 
# 16.7.4. Material certificate of wetted parts according to PN-EN 10204

Below you will find an exemplary certificate compliant with PN-EN 10204-3.1.

MEASUREMEN	TING OF INDUSTRIAL Warsaw 2019-07-19 IT INSTRUMENTS AND COMPONENTS					
DECLARATION OF CONFORMITY WITH CERTIFICATE OF 3.1 TYPE EN 10204 RELATING TO MATERIALS OF THE WETTED PARTS CERTYFIKAT ZGODNOŚCI Z ATESTAMI RODZAJU 3.1 EN 10204 DLA MATERIAŁÓW UŻYTYCH NA CZĘŚCI ZWILŻANE Certificate No.: 20190719/112725						
Customer:	.omer.Order No.:					
PRODUCT	ТҮРЕ					
Smart differential pressure transmitter	APR-2000.ALW					
	cial umburs & TAGs					
Part	Lot No. Heat No. Material					
(DIAPHRAGM RING)	316L					
(DIAPHRAGM)	316L					
(PROCESS FLANGE)	316L					
(UPPER BODY OF DIAPHRAGN	316L					
{UPPER BODY OF DIAPHRAGM L}	316L					
(VENT BODY)	316L					
(VENT SPINDLE TIP)	316L					
Additional information Informacje dodatkowe/ 1. Parts for assemblies were made ace: to documentation. /Caplel de 2. The assemblies was made ace: to construction documentation and 3. Good working of products is confirmed. /Powierdza się prawkiło 4. Attachments: inspection certificates 3.1 /Załączniki: Iwiadectwa o	d order. Montaż został przeprowadzony zgodnie z dokumentacją i zamówieniem/ wolć działania wyrobów/					

Apilsens S.A. (PL) 03-192 Warszawa uLMorelowa7 KR6000302835 NIP113-08-88-504 REGON012265485 Certyfikat ISO Nr 274131-2018-AQ:POL-RvA	tel. +48 (22) 814 07 77 fax +48 (22) 814 07 78 aplisens.pl www.aplisens.pl
Certylinal ISO HE 214131-2016-RGPOL-RVA	www.aprisens.pr


Safety clause/Klauzula bezpieczeństwa: http://apiisens.pl/pdf/rodo/Informacje\_podstawowe\_dotyczace\_przetwarzania\_danych\_osobowych.pdf






A declaration of conformity with certificates for the materials used in the transmitter wetted parts is available on the request.

### 16.7.5. Certificate of the National Institute of Hygiene

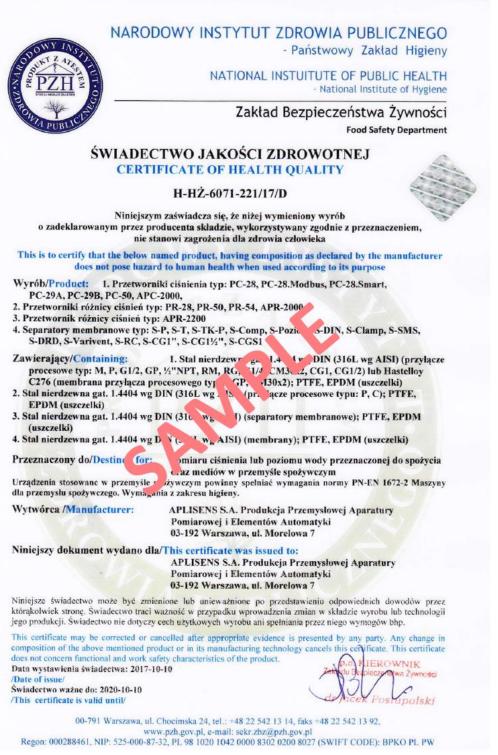

 




A certificate of the National Institute of Hygiene is available on the request.



### 16.7.6. Certificate of hydrostatic test



## Inspection certificate of the pressure test

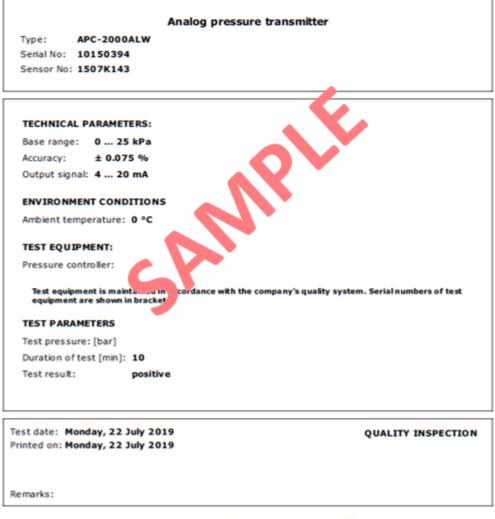

Aplisens S.A. informs about calibration possibilities of pressure and differential pressure transmitters in our accredited calibration laboratory


Figure 156. Certificate of hydrostatic test.



A pressure hydrostatic test is available on the request.



### 16.7.7. Cleaning certificate

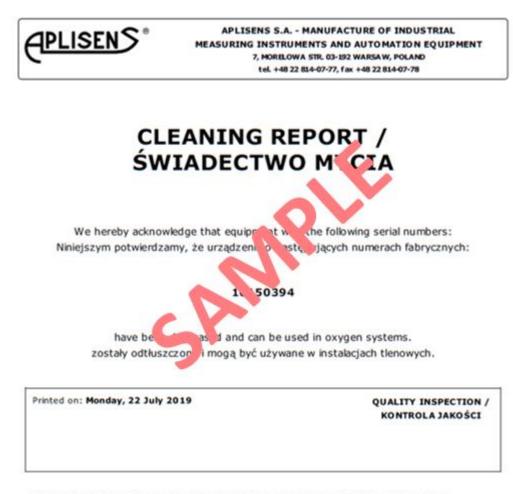

Aplisens S.A. informs about calibration possibilities of pressure and differential pressure transmitters in our accredited calibration laboratory


Figure 157. Cleaning certificate.

[ i ]

A cleaning report is available on the request.

APLISENS<sup>®</sup>

## 16.7.8. Roughness certificate

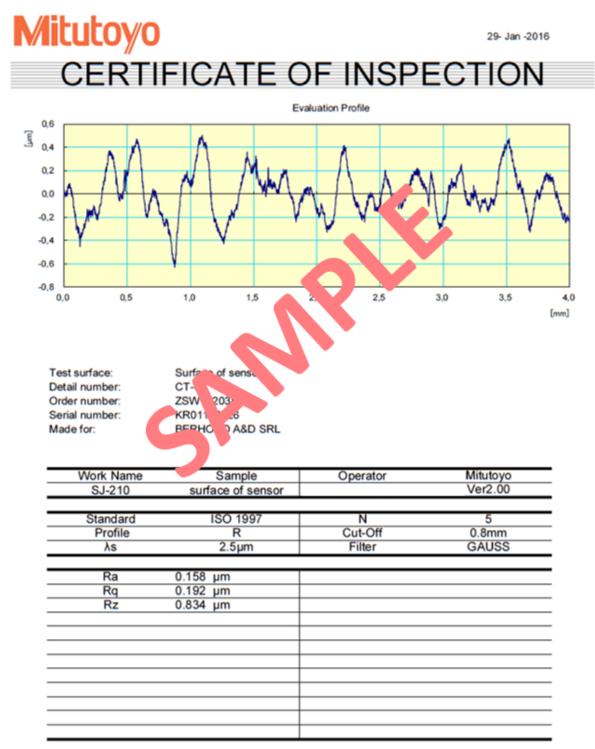

Copyright (C) 2013 Mitutoyo Corporation

Figure 158. Roughness certificate.

1

A roughness certificate is available on the request.

**APLISENS**®

# 16.8. Declarations of Conformity

	No EN.DZ.APC.AP	R.ALW.U9		
iss	EU Declaration of ued under the sole responsibility			
The object of this declaration, press APR-2000ALW, APR-2000ALW/G,	ure device: pressure transmit APR-2000YALW.	tters APC-2000ALW, differential pressure transmitters		
Manufacturer: APLISENS S.A., u	I. Morelowa 7, 03-192 Wars	zawa		
We hereby declare under the sole responsibility, that the object of the declaration defined above comply with relev Union harmonization legislation.				
Pressure transmitters type APC-2000ALW, differential pressure transmitters APR-2000ALW, APR-2000ALW/G, APR-2000YALW in all versions comply with directives:				
• EMC - 2014/30/EU dated	26 February 2014			
Conformity assessment procedure: The following standards were applie		26-01:2013.		
<ul> <li>RoHS – 2011/65/EU date</li> </ul>	d 08 June 2011			
Conformity assessment procedure: of the Council. The following standard was applied		n No. 2008/EC of the European Parliament an		
		transmitters APR-2000ALW in PED version compl		
• PED - 2014/68/EU date	1. 'ay 26 1			
Transmitters in PED ver acc. to The following standard vere applie	nor have specified on	the nameplate parameters PS>200bar, PT, TS 14732:2013, WUDT-UC/2003.		
Transmitters without spectrum a 2014/68/UE in accordance with however transmitter is marked by	ters values PS, PT, TS we sound engineering practice. I lue to requirement of other reg	ere manufactured on the basis of article 4 p.3 Directiv in this case, PED Directive doesn't require CE marking gulations of EU harmonization legislation.		
Pressure transmitters APC-2000AL APR-2000YALW in Ex versions cor		mitters APR-2000ALW, APR-2000ALW/G,		
	nply with directive:	mitters APR-2000ALW, APR-2000ALW/G,		
<ul> <li>APR-2000YALW in Ex versions correct of ATEX – 2014/34/EU dated Intrinsically safe versions of transmit</li> </ul>	nply with directive: 1 26 February 2014			
<ul> <li>APR-2000YALW in Ex versions correct of ATEX – 2014/34/EU dated Intrinsically safe versions of transmining II 1/2G Ex ia IIC T4/T5 Ga/Gb</li> </ul>	nply with directive: 126 February 2014 tters are marked with the follo	wing certificate marking:		
<ul> <li>APR-2000YALW in Ex versions correctly and the experimental service of the experimental service service of the experimental service of the experimental servic</li></ul>	nply with directive: 1 26 February 2014 tters are marked with the follo (version with teflon shield cat	owing certificate marking: ple)		
<ul> <li>APR-2000YALW in Ex versions correctly and the experimental system of the experimental sys</li></ul>	nply with directive: 126 February 2014 tters are marked with the follo	owing certificate marking: ple)		
<ul> <li>APR-2000YALW in Ex versions cor</li> <li>ATEX – 2014/34/EU dated Intrinsically safe versions of transmi II 1/2G Ex ia IIC T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb</li> <li>The following standards were applied</li> </ul>	nply with directive: 1 26 February 2014 tters are marked with the follo (version with teflon shield cat (version with enclosure ss316 ed: EN 60079-0:2012+A11:20	owing certificate marking: ple)		
APR-2000YALW in Ex versions cor • ATEX – 2014/34/EU dated Intrinsically safe versions of transmi II 1/2G Ex ia IIC T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1D Ex ia IIC T105°C Da I M1 Ex ia I Ma FTZU 08ATEX0020X The following standards were applie Conformity assessment procedure: 716 07 Ostrava Radvanice. Pressure transmitters APC-2000ALL ID 0006 0008, APR-2000ALW/O	nply with directive: d 26 February 2014 tters are marked with the follo (version with tefion shield cat (version with enclosure ss316 ed: EN 60079-0:2012+A11:20 module B. Notified Body no.1 W model ID 0005 0008, di model ID 0008 0008, di	owing certificate marking: ble) 6) 13, EN 60079-11:2012, EN 50303:2000. 026, Physical Technical Testing Institute, Pikartska 7, ifferential pressure transmitters <b>APR-2000ALW</b> model <b>R-2000ALW</b> model ID 0007 0008 <b>APR-</b>		
APR-2000YALW in Ex versions cor • ATEX – 2014/34/EU dated Intrinsically safe versions of transmi II 1/2G Ex ia IIC T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1D Ex ia IIC T105°C Da I M1 Ex ia I Ma FTZU 08ATEX0020X The following standards were applie Conformity assessment procedure: 716 07 Ostrava Radvanice. Pressure transmitters APC-2000AL ID 0006 0008, APR-2000ALW/O 2000YALW model ID 0009 0008	nply with directive: 26 February 2014 tters are marked with the follo (version with teflon shield cat (version with enclosure ss316 ed: EN 60079-0:2012+A11:20 module B. Notified Body no.1 W model ID 0005 0008, di model ID 0008 0008, AP . in explosion-proof versions	owing certificate marking: ble) 13, EN 60079-11:2012, EN 50303:2000. 026, Physical Technical Testing Institute, Pikartska 7, ifferential pressure transmitters <b>APR-2000ALW</b> model <b>R-2000ALW</b> model ID 0007 0008, <b>APR-</b> are marked with the following certificate marking:		
APR-2000YALW in Ex versions cor • ATEX – 2014/34/EU dated Intrinsically safe versions of transmi II 1/2G Ex ia IIC T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia I Ma FTZU 08ATEX0020X The following standards were applie Conformity assessment procedure: 716 07 Ostrava Radvanice. Pressure transmitters APC-200ALL ID 0006 0008 APR-2000ALW/C 2000YALW model ID 0009 0008 I M2 Ex db ia I Mb (version with II 1/2G Ex ia / db IIC T6/T5 Ga II 1/2D Ex ia / tb IIIC T105°C D	nply with directive: 1 26 February 2014 tters are marked with the follo (version with teflon shield cat (version with enclosure ss316 d: EN 60079-0:2012+A11:20 module B. Notified Body no.1 W model ID 0005 0008, di 5 model ID 0005 0008, AP . in explosion-proof versions in h enclosure ss316) /Gb or	bwing certificate marking: ble) 5) 13, EN 60079-11:2012, EN 50303:2000. 026, Physical Technical Testing Institute, Pikartska 7, ifferential pressure transmitters <b>APR-2000ALW</b> model <b>R-2000ALW</b> model ID 0007 0008, <b>APR-</b> are marked with the following certificate marking: I M2 Ex db ia I Mb (version with enclosure ss316) II 2G Ex ia / db IIC T6/T5 Gb II 2D Ex ia / tb IIIC T6/T5 Gb		
APR-2000YALW in Ex versions cor • ATEX – 2014/34/EU dated Intrinsically safe versions of transmi II 1/2G Ex ia IIC T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex and ards were applied Conformity assessment procedure: 716 07 Ostrava Radvanice. Pressure transmitters APC-2000AL ID 0006 0008, APR-2000ALW/C 2000YALW model ID 0009 0008 I M2 Ex db ia I Mb (version with II 1/2G Ex ia / db IIC T6/T5 Ga	nply with directive: 1 26 February 2014 tters are marked with the follo (version with teflon shield cat (version with enclosure ss316 d: EN 60079-0:2012+A11:20 module B. Notified Body no.1 W model ID 0005 0008, di 5 model ID 0005 0008, AP . in explosion-proof versions - h enclosure ss316) /Gb or ia/Db	owing certificate marking: ble) 5) 13, EN 60079-11:2012, EN 50303:2000. 026, Physical Technical Testing Institute, Pikartska 7, ifferential pressure transmitters <b>APR-2000ALW</b> model <b>R-2000ALW</b> model ID 0007 0008, <b>APR-</b> are marked with the following certificate marking: I M2 Ex db ia I Mb (version with enclosure ss316) II 2G Ex ia / db IIC T6/T5 Gb II 2D Ex ia / db IIC T105°C Db KDB 19 ATEX 0011X		
APR-2000YALW in Ex versions cor ATEX – 2014/34/EU dated Intrinsically safe versions of transmi II 1/2G Ex ia IIC T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia I Ma FTZU 08ATEX0020X The following standards were applie Conformity assessment procedure: 716 07 Ostrava Radvanice. Pressure transmitters APC-200ALW/C 2000YALW model ID 0009 0008 I M2 Ex db ia I Mb (version wit II 1/2G Ex ia / db IIC T6/T5 Ga II 1/2D Ex ia / db IIC T6/T5 Ga II 1/2D Ex ia / db IIC T105°C D KDB 19 ATEX 0011X The following standards were applie	nply with directive: 1 26 February 2014 tters are marked with the follo (version with teflon shield cat (version with enclosure ss316 d: EN 60079-0:2012+A11:20 module B. Notified Body no.1 W model ID 0005 0008, dB a model ID 0005 0008, AP in explosion-proof versions h enclosure ss316) /Gb or a/Db d: EN 60079-0:2012+A EN 60079-0:2012+A EN 60079-26:2015, module B. NB no.1453, Cent	bwing certificate marking: ble) 13, EN 60079-11:2012, EN 50303:2000. 026, Physical Technical Testing Institute, Pikartska 7, ifferential pressure transmitters <b>APR-2000ALW</b> model <b>R-2000ALW</b> model ID 0007 0008, <b>APR-</b> are marked with the following certificate marking: I M2 Ex db ia I Mb (version with enclosure ss316) II 2G Ex ia / db IIC T6/T5 Gb II 2D Ex ia / tb IIIC T105°C Db KDB 19 ATEX 0011X v11:2013, EN 60079-1:2014, EN 60079-11:2012,		
APR-2000YALW in Ex versions cor ATEX – 2014/34/EU dated Intrinsically safe versions of transmi II 1/2G Ex ia IIC T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1D Ex ia IIC T105°C Da I M1 Ex ia I Ma FTZU 08ATEX0020X The following standards were applie Conformity assessment procedure: 716 07 Ostrava Radvanice. Pressure transmitters APC-2000AL ID 0006 0008, APR-2000ALW/O 2000YALW model ID 0009 0008 I M2 Ex db ia I Mb (version wit II 1/2G Ex ia / db IIC T6/T5 Ga II 1/2D Ex ia / db IIC T6/T5 Ga II 1/2G Ex ia / db IIC 105 CC II II 1/2G	nply with directive: 1 26 February 2014 tters are marked with the follo (version with teflon shield cat (version with enclosure ss316 d: EN 60079-0:2012+A11:20 module B. Notified Body no.1 W model ID 0005 0008, dB a model ID 0005 0008, AP in explosion-proof versions h enclosure ss316) /Gb or a/Db d: EN 60079-0:2012+A EN 60079-0:2012+A EN 60079-26:2015, module B. NB no.1453, Cent	owing certificate marking: ble) 5) 13, EN 60079-11:2012, EN 50303:2000. 026, Physical Technical Testing Institute, Pikartska 7, ifferential pressure transmitters <b>APR-2000ALW</b> model <b>R-2000ALW</b> model ID 0007 0008, <b>APR-</b> are marked with the following certificate marking: I M2 Ex db ia I Mb (version with enclosure ss316) II 2G Ex ia / db IIC T6/T5 Gb II 2D Ex ia / db IIC T105°C Db KDB 19 ATEX 0011X X11:2013, EN 60079-1:2014, EN 60079-11:2012, EN 60079-31:2014. ral Mining Institute, Plac Gwarków 1, 40-166 Katowice. 3, Central Mining Institute, Plac Gwarków 1,		
APR-2000YALW in Ex versions cor ATEX – 2014/34/EU dated Intrinsically safe versions of transmi II 1/2G Ex ia IIC T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia I IMA FTZU 08ATEX0020X The following standards were applie Conformity assessment procedure: 716 07 Ostrava Radvanice. Pressure transmitters APC-200AL ID 0006 0008, APR-200ALW/C 2000YALW model ID 0009 0008 I M2 Ex db ia I Mb (version with II 1/2G Ex ia / db IIC T6/T5 Ga II 1/2D Ex ia / tb IIIC T105°C D KDB 19 ATEX 0011X The following standards were applie Conformity assessment procedure: Notification of quality assurance: Mo	nply with directive: 1 26 February 2014 tters are marked with the follo (version with teflon shield cat (version with enclosure ss316 d: EN 60079-0:2012+A11:20 module B. Notified Body no.1 W model ID 0005 0008, dB a model ID 0005 0008, AP in explosion-proof versions h enclosure ss316) /Gb or a/Db d: EN 60079-0:2012+A EN 60079-0:2012+A EN 60079-26:2015, module B. NB no.1453, Cent	bwing certificate marking: ble) 5) 13, EN 60079-11:2012, EN 50303:2000. 026, Physical Technical Testing Institute, Pikartska 7, ifferential pressure transmitters <b>APR-2000ALW</b> model <b>R-2000ALW</b> model ID 0007 0008, <b>APR-</b> are marked with the following certificate marking: I M2 Ex db ia I Mb (version with enclosure ss316) II 2G Ex ia / db IIC T6/T5 Gb II 2D Ex ia / db IIC T105°C Db KDB 19 ATEX 0011X X11:2013, EN 60079-11:2014, EN 60079-11:2012, EN 60079-31:2014. al Mining Institute, Plac Gwarków 1, 40-166 Katowice.		
APR-2000YALW in Ex versions cor ATEX – 2014/34/EU dated Intrinsically safe versions of transmi II 1/2G Ex ia IIC T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1/2G Ex ia IIB T4/T5 Ga/Gb II 1D Ex ia IIC T105°C Da I M1 Ex ia I Ma FTZU 08ATEX0020X The following standards were applie Conformity assessment procedure: 716 07 Ostrava Radvanice. Pressure transmitters APC-2000AL ID 0006 0008, APR-2000ALW/O 2000YALW model ID 0009 0008 I M2 Ex db ia I Mb (version wit II 1/2G Ex ia / db IIC T6/T5 Ga II 1/2D Ex ia / db IIC T6/T5 Ga II 1/2G Ex ia / db IIC 105 CC II II 1/2G	nply with directive: 1 26 February 2014 tters are marked with the follo (version with teflon shield cat (version with enclosure ss316 d: EN 60079-0:2012+A11:20 module B. Notified Body no.1 W model ID 0005 0008, dB a model ID 0005 0008, AP in explosion-proof versions h enclosure ss316) /Gb or a/Db d: EN 60079-0:2012+A EN 60079-0:2012+A EN 60079-26:2015, module B. NB no.1453, Cent	owing certificate marking: ble) 6) 13, EN 60079-11:2012, EN 50303:2000. 026, Physical Technical Testing Institute, Pikartska 7, ifferential pressure transmitters APR-2000ALW model <b>R-2000ALW</b> model ID 0007 0008, APR- are marked with the following certificate marking: I M2 Ex db ia I Mb (version with enclosure ss316) II 2G Ex ia / db IIC T6/T5 Gb II 2D Ex ia / db IIC T6/T5 Gb II 2D Ex ia / db IIC T6/T5 Gb II 2D Ex ia / db IIC T105°C Db KDB 19 ATEX 0011X 11:2013, EN 60079-121014, EN 60079-11:2012, EN 60079-31:2014. ral Mining Institute, Plac Gwarków 1, 40-166 Katowice. 3, Central Mining Institute, Plac Gwarków 1,		



For Exd version





For Exi/Exd version

# 17. Additional documentation

User's manual:

EN.IO.APC.APR.ALW

User's manual. Pressure and differential pressure transmitters in Exd, Exi/Exd version APC-2000ALW, APR-2000ALW, APR-2000ALW with diaphragm seals, APR-2000ALW/G.

Ex safety instructions:

EN.IX.APC.APR.ALW
 Explosion-proof device manual.

# 18. History of revisions

Revision No.	Document revision	Description of changes
-	01.A.001/2020.11	First version of the document, developed by DBFD, DR.